

Assembly Instructions

W2442B W2742B W3042B

 
 
 
 
 
PARTS:

- A - Front Panel -2pc
- B - Side Panel -2pc
- C - Top & Bottom Panel - 2pc
- D - Back Panel - 1pc
- a - Shelves - 3pc

HARDWARE BAG(H)

- *Shelves support - 12pcs
- *Plastic lid - 4pcs
- *4 × 14 Screws - 12pcs
- *3.5 × 25 Screws -4pcs

Before you start, please prepare a soft surface on the floor before you take out all the wooden components. Now take them out with care and put them on the soft surface to avoid scratching the wooden parts.

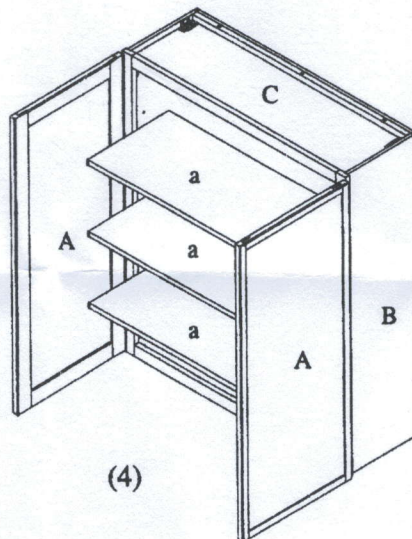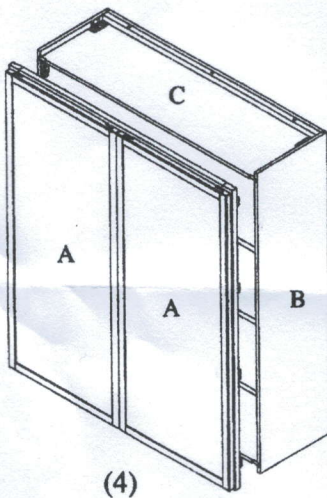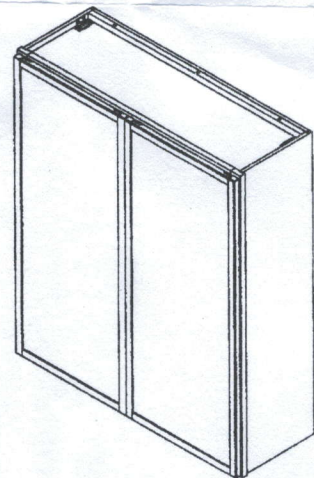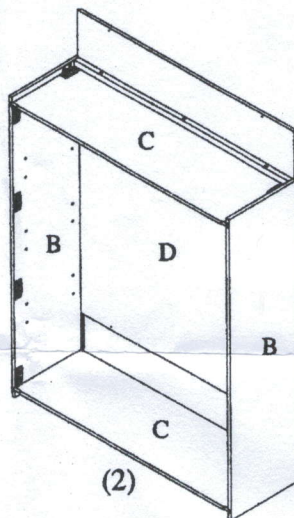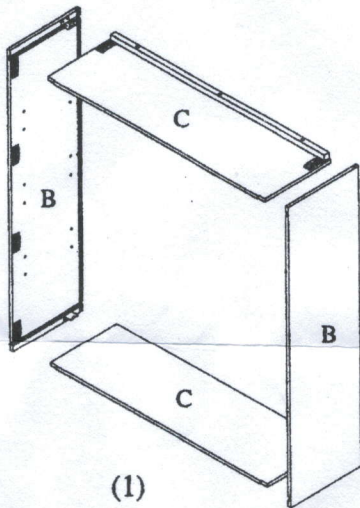


Assembly Instructions


W0930, W0936
W1230, W1236
W1530, W1536
W1830, W1836
W2130, W2136
WBLC30/33-3030L/R,
WBLC39/42-3630L,
WBLC30/33-3036L/R,
WBLC39/42-3636L

W2430B, W2436B,
W2730B, W2736B,
W3030B, W3036B,
W3330B, W3336B,
W3630B, W3636B
W4230B, W4236B
W4830-2D24

 
A-Door&Faceframe(1) B-Side Panel(2) D-Top&Bottom(2) E-Back Panel(1) F-Shelf(2)
I-Hardware Box(1): Shelf Clip-(8) $\phi 3.5 \times 30$ (6)

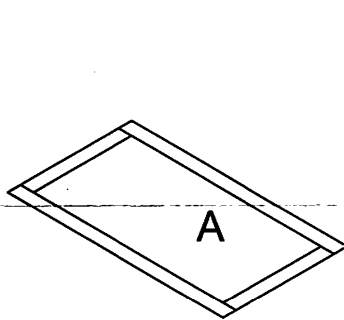

 
(1)

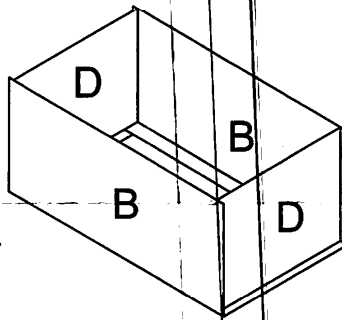




 
(2)

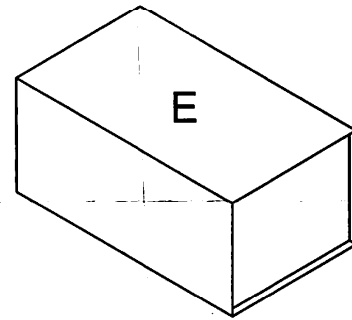

 (3)

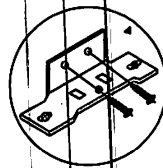

METAL CLIP
INSTALLATION

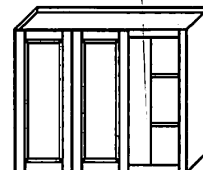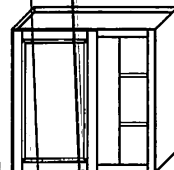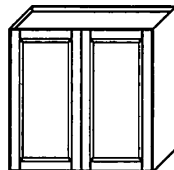    

(4)