


Assembly Instruction for Plywood Drawer Box

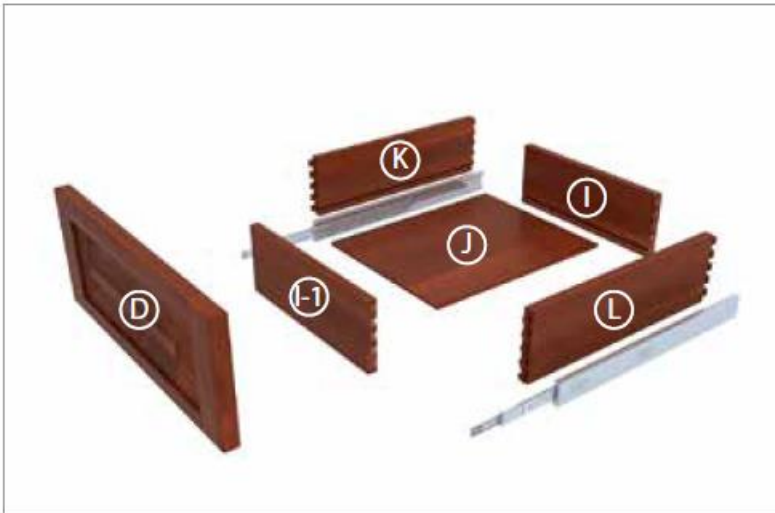

1) Begin by opening the box and laying all the pieces out on a clean, flat surface. Check to make sure all contents are in the box (hardware will be packaged separately in its own plastic bag).

2) Make note which side is the front and the back for part K and L. The side of each piece has predrilled holes for the drawer slides. The side closest to the hole is the front side.

- 3) Wood glue should be used in all dado and dovetail connections.
- 4) Attach the back side of part K to part I. A rubber mallet can be used. Make sure the dado part of each piece is facing inward.
- 5) Attach the back side of part L to part I.
- 6) Slide part J (finish side up) into the dado of the three previously assembled parts.
- 7) Attach the drawer front (Part D) to the front of the drawer box (Part I-1) by positioning the dovetail and hammering all parts together.
- 8) Brad nails can be used to secure the drawer box.