


Assembly Instruction for Solid Wood Drawer Box

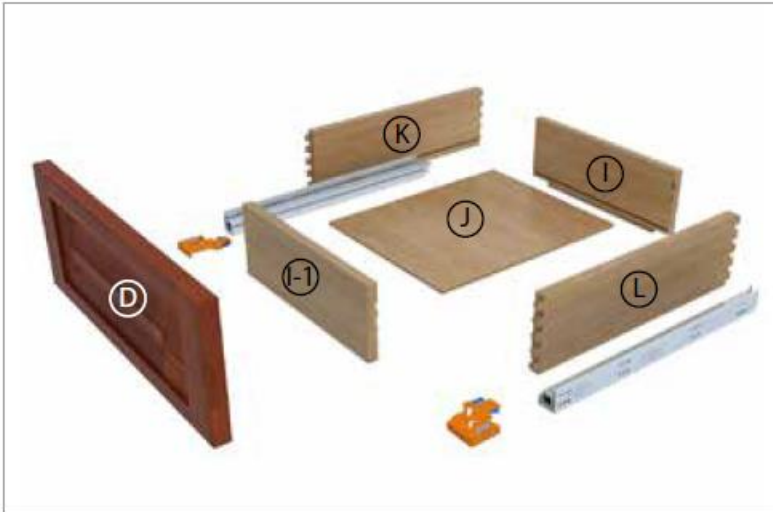

1) Begin by opening the box and laying all the pieces out on a clean, flat surface.

Check to make sure all contents are in the box (hardware will be packaged separately in its own plastic bag).

2) Wood glue should be used in all dado and dovetail connections.

3) Attach the back side of part K to part I. A rubber mallet can be

used. Make sure the dado part of each piece is facing inward.

4) Attach the back side of part L to part I.

5) Slide part J (finish side up) into the dado of the three previously assembled parts.

6) Attach the drawer front to the front of the drawer box by positioning the dovetail and hammering all parts together. Note: Part I-1 and D is preassembled at the factory.

7) Brad nails can be used to secure the drawer box.

8) The quick release clips are attached to the bottom of the drawer to part I-1. 2 screws are used for each clip.