



CABINET ASSEMBLY INSTRUCTIONS






TABLE OF CONTENTS







Assembling Instructions -	Base Cabinet	3-6
Assembling Instructions -	Lazy Susan Corner Base Cabinet	7-12
Assembling Instructions -	Blind Corner Base Cabinet	13-18
Assembling Instructions -	Base 3 Drawers Cabinet	19-24
Assembling Instructions -	W all Cabinet	25-27
Assembling Instructions -	W all Diagonal Corner Cabinet	28-32
Assembling Instructions -	Pantry	33-38
Assembling Instructions -	Oven Cabinet	39-45
Assembling Instructions -	Vanity	46-51






ASSEMBLING INSTRUCTIONS - BA

SEC ABINET


BA SEC ABINET

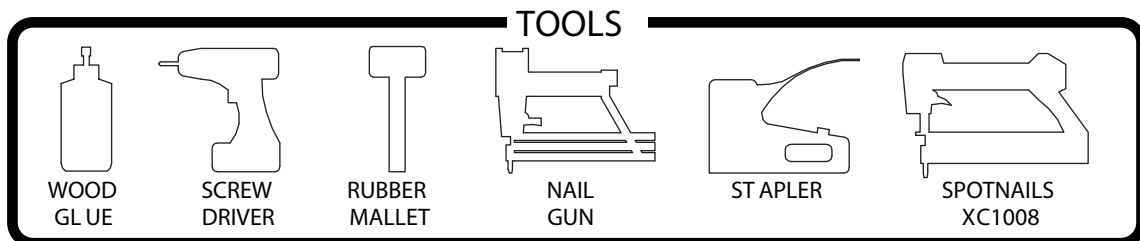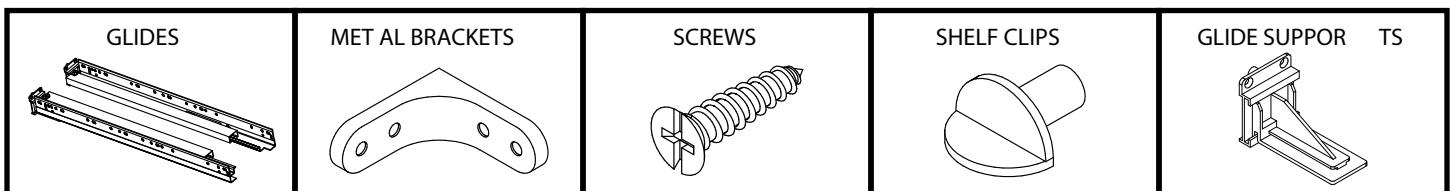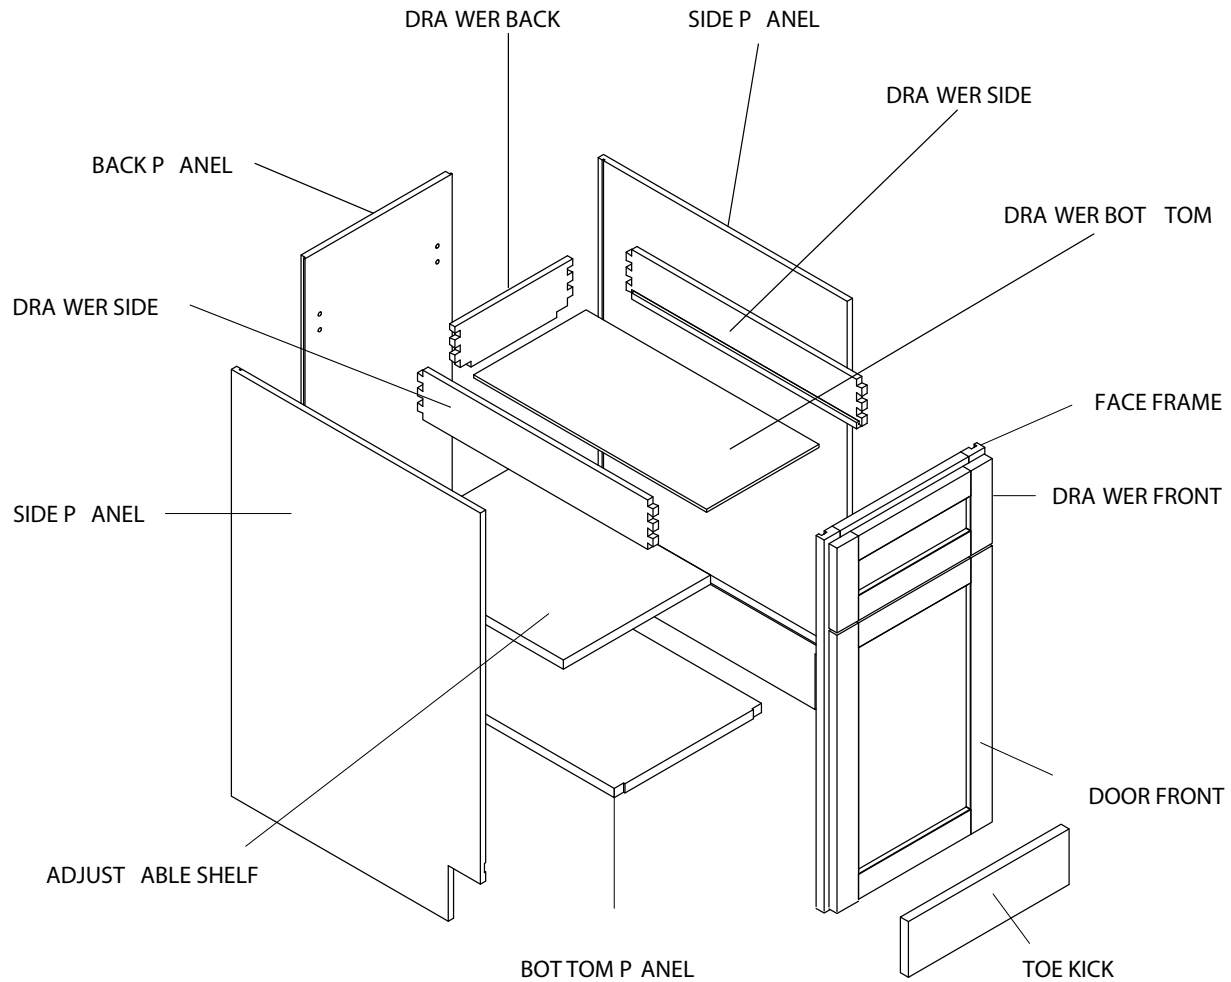

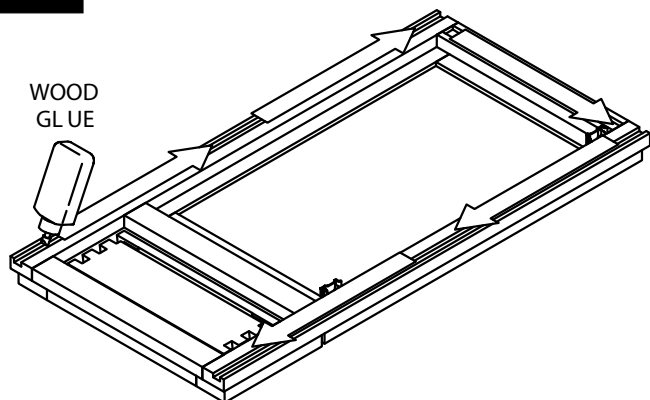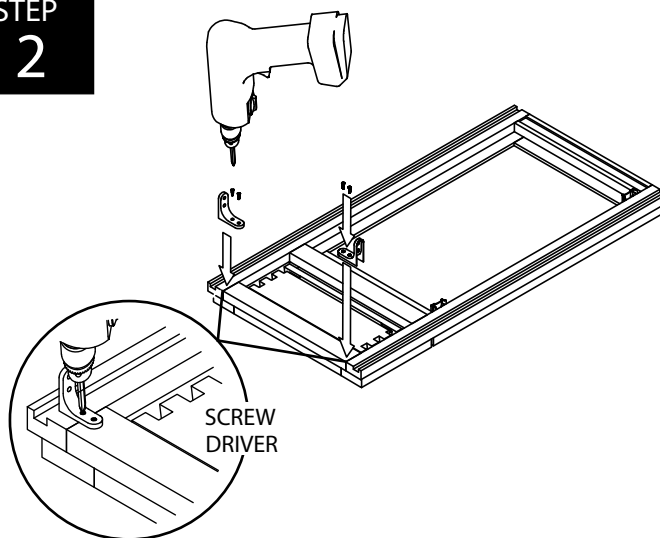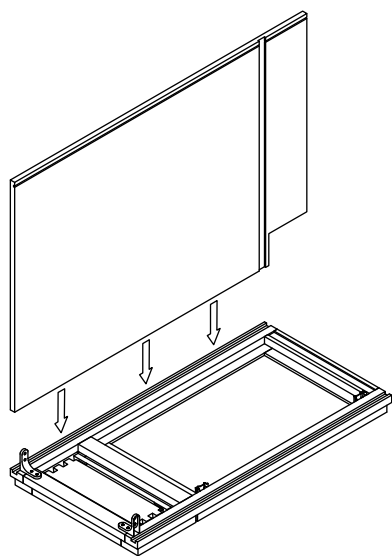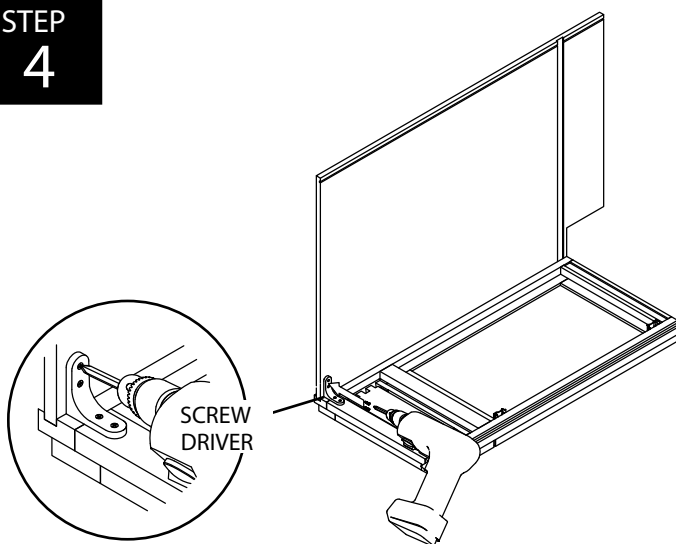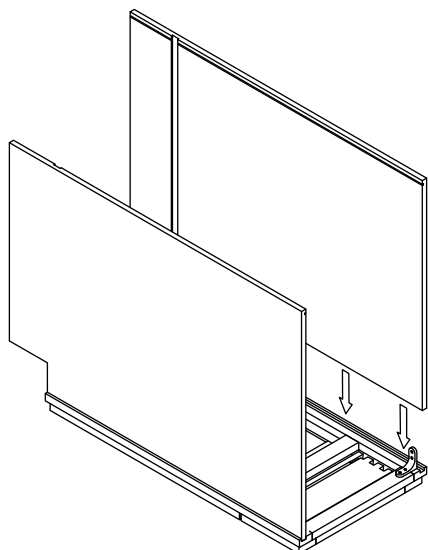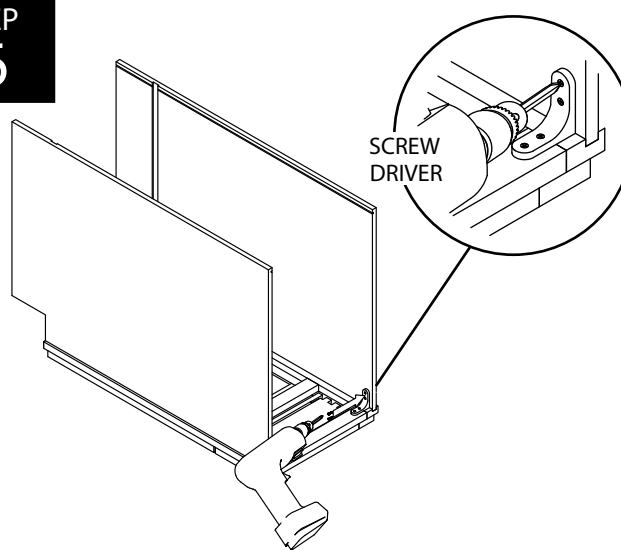
STEP
1STEP
2STEP
3STEP
4STEP
5STEP
6

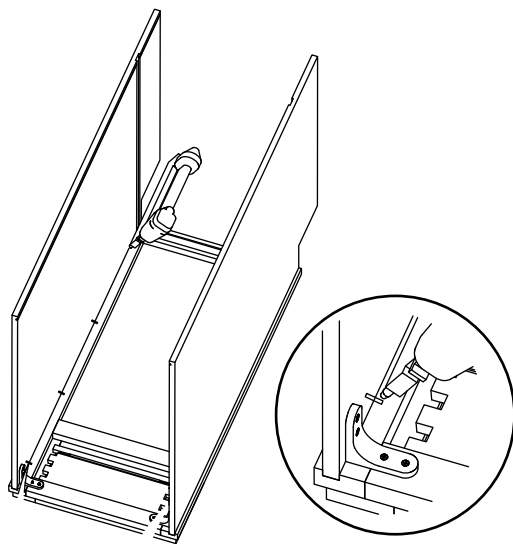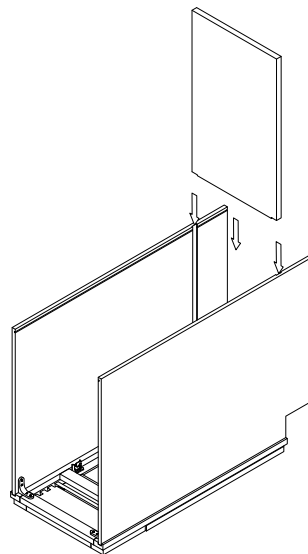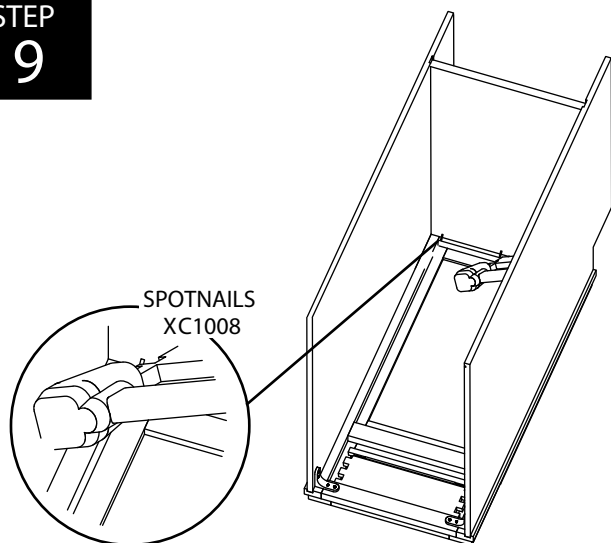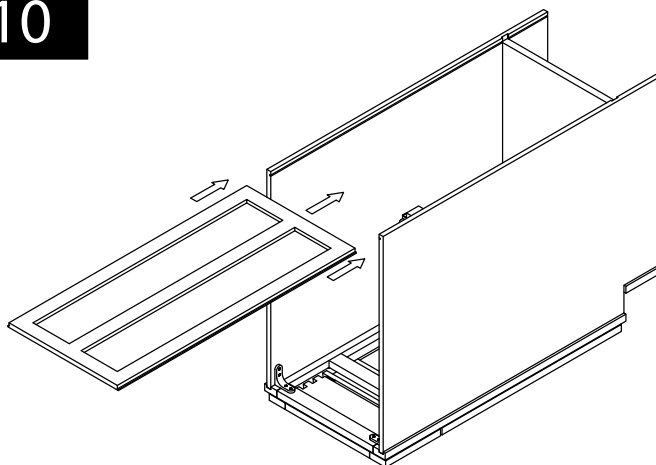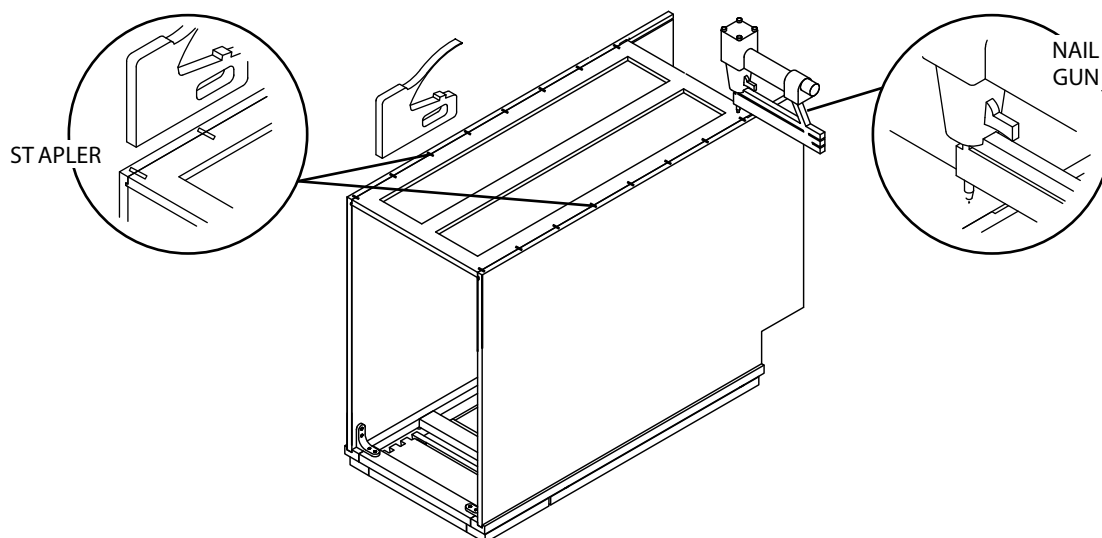STEP
7STEP
8STEP
9STEP
10STEP
11


STEP
12

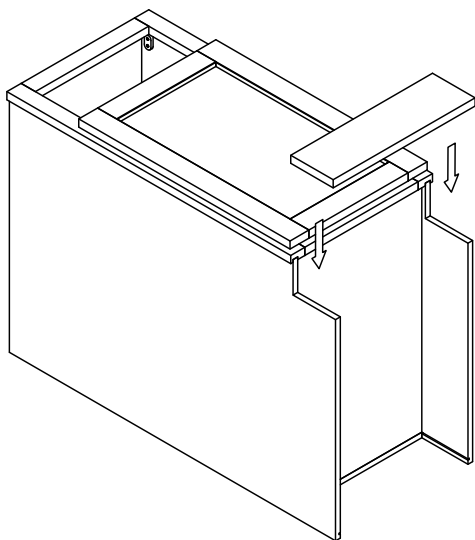


STEP
13

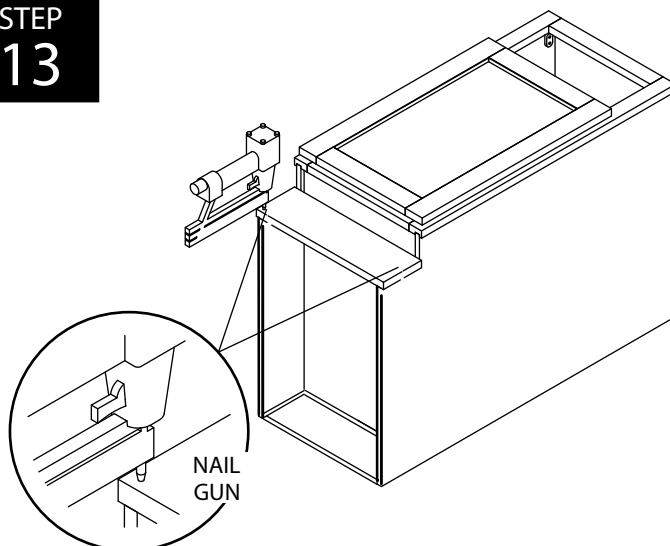


STEP
14

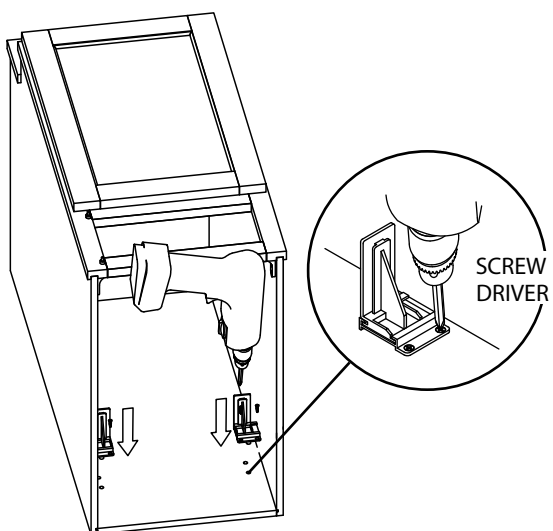


STEP
15

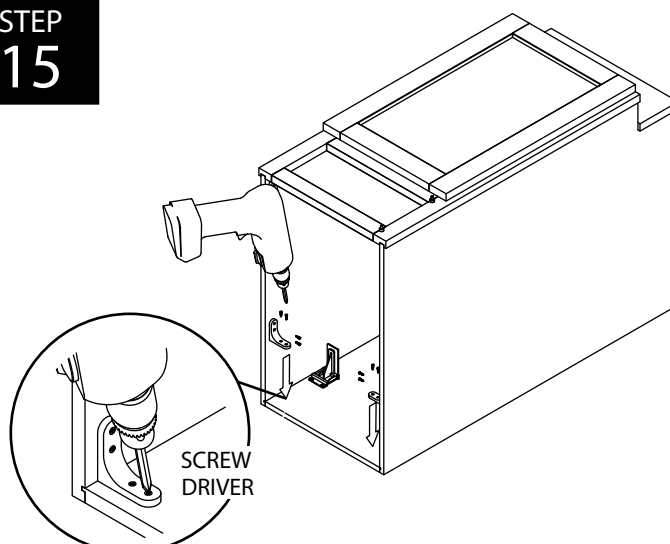


STEP
16

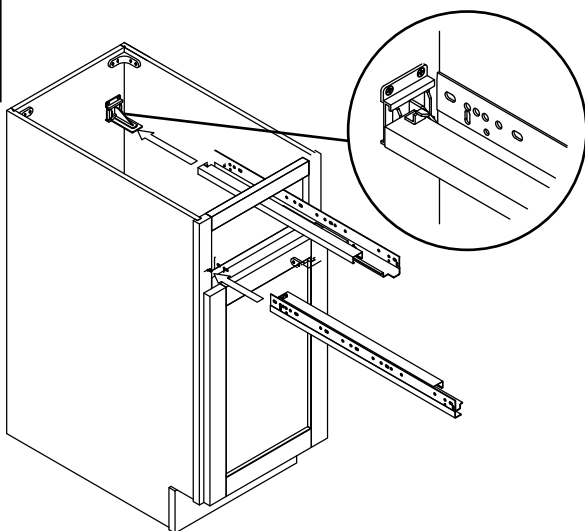


STEP
17

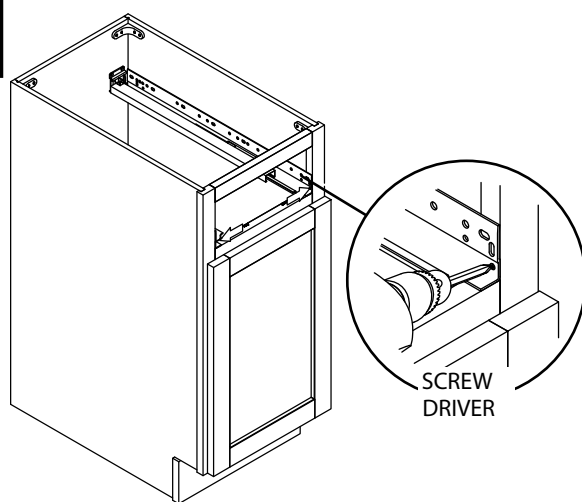


STEP
18

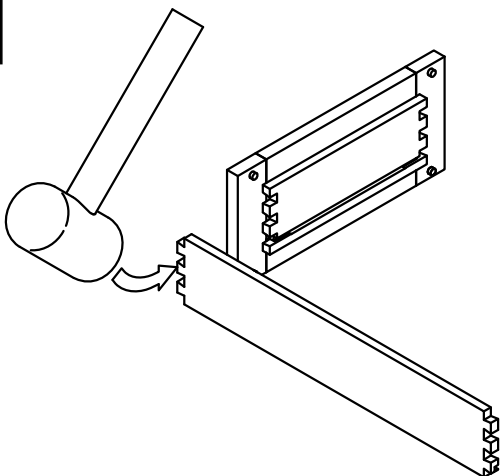


STEP
19

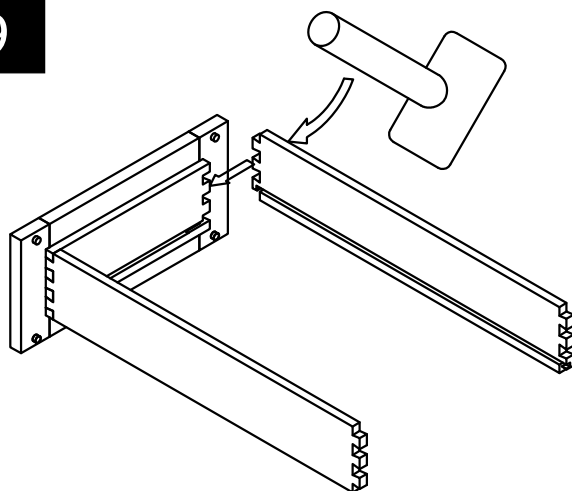


STEP
20

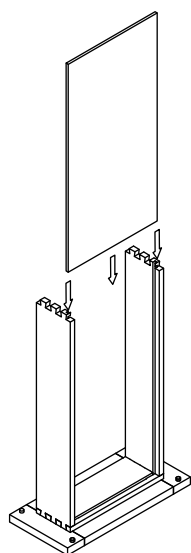


STEP
21

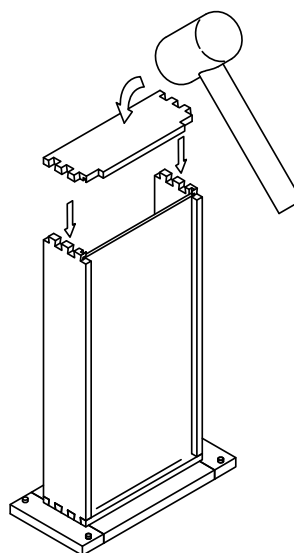


STEP
22

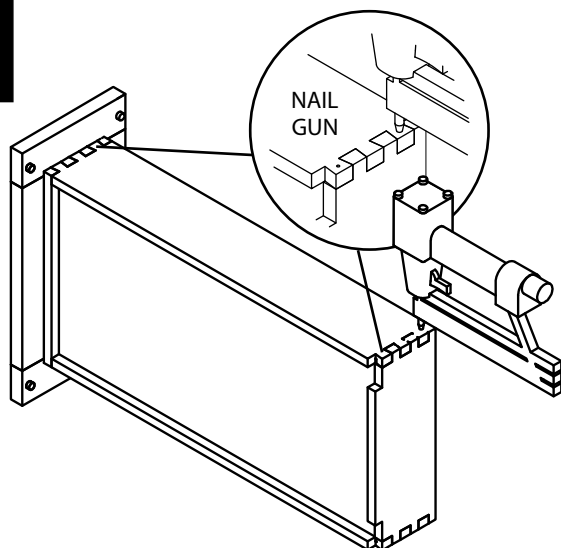


STEP
23

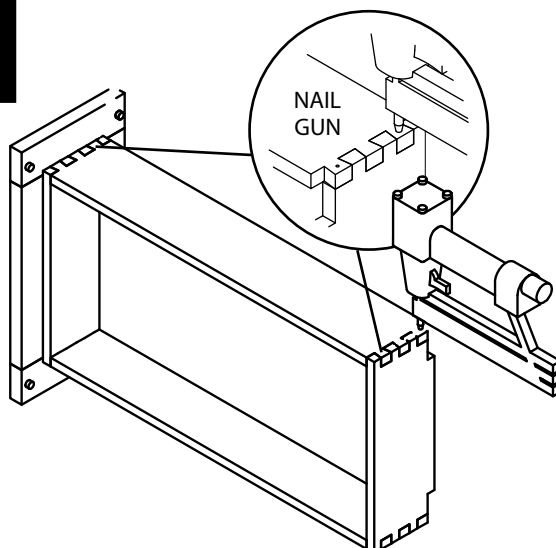


STEP
24

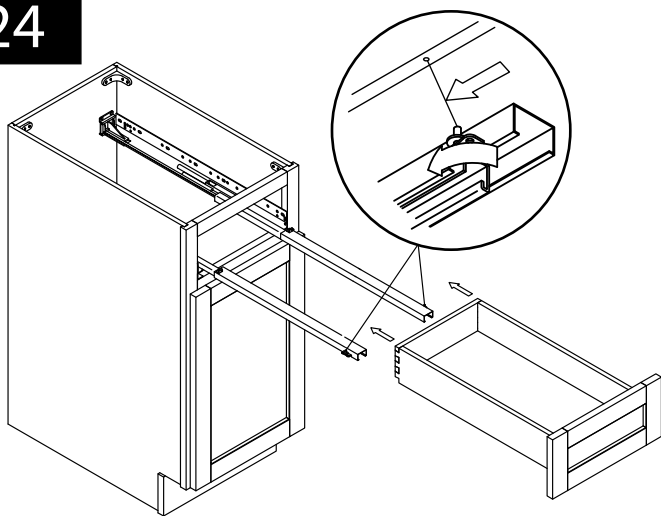


STEP
25

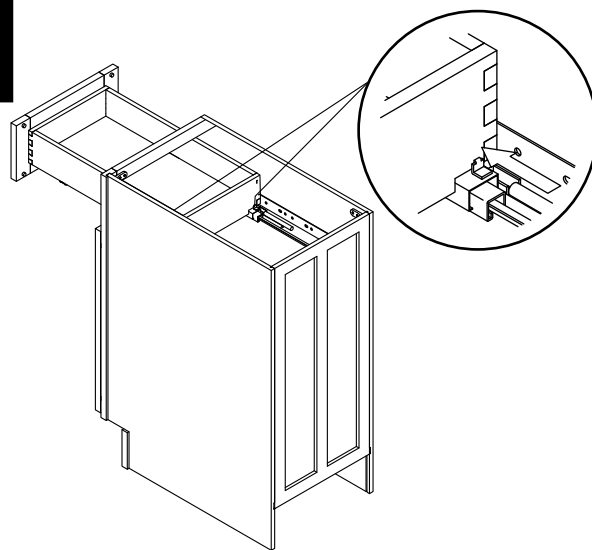

STEP
26

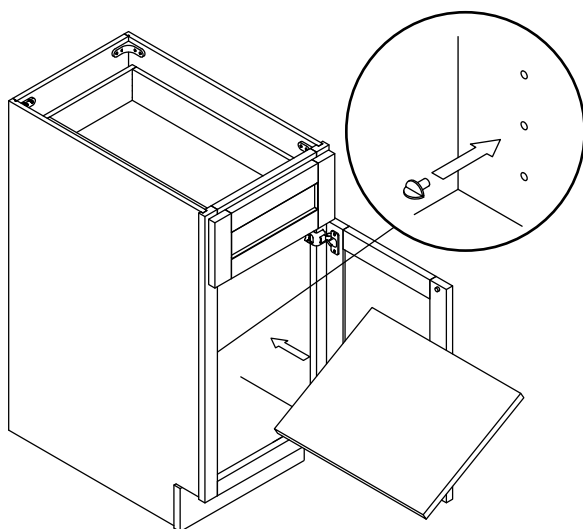

STEP
27

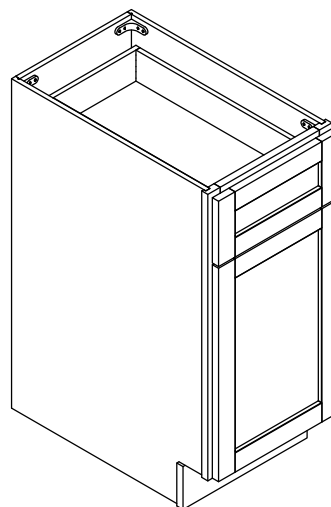


BA SEC ABINET


ASSEMBLING INSTRUCTIONS - L

AZY SUS AN C ABINET


LAZY SUS AN C ABINET

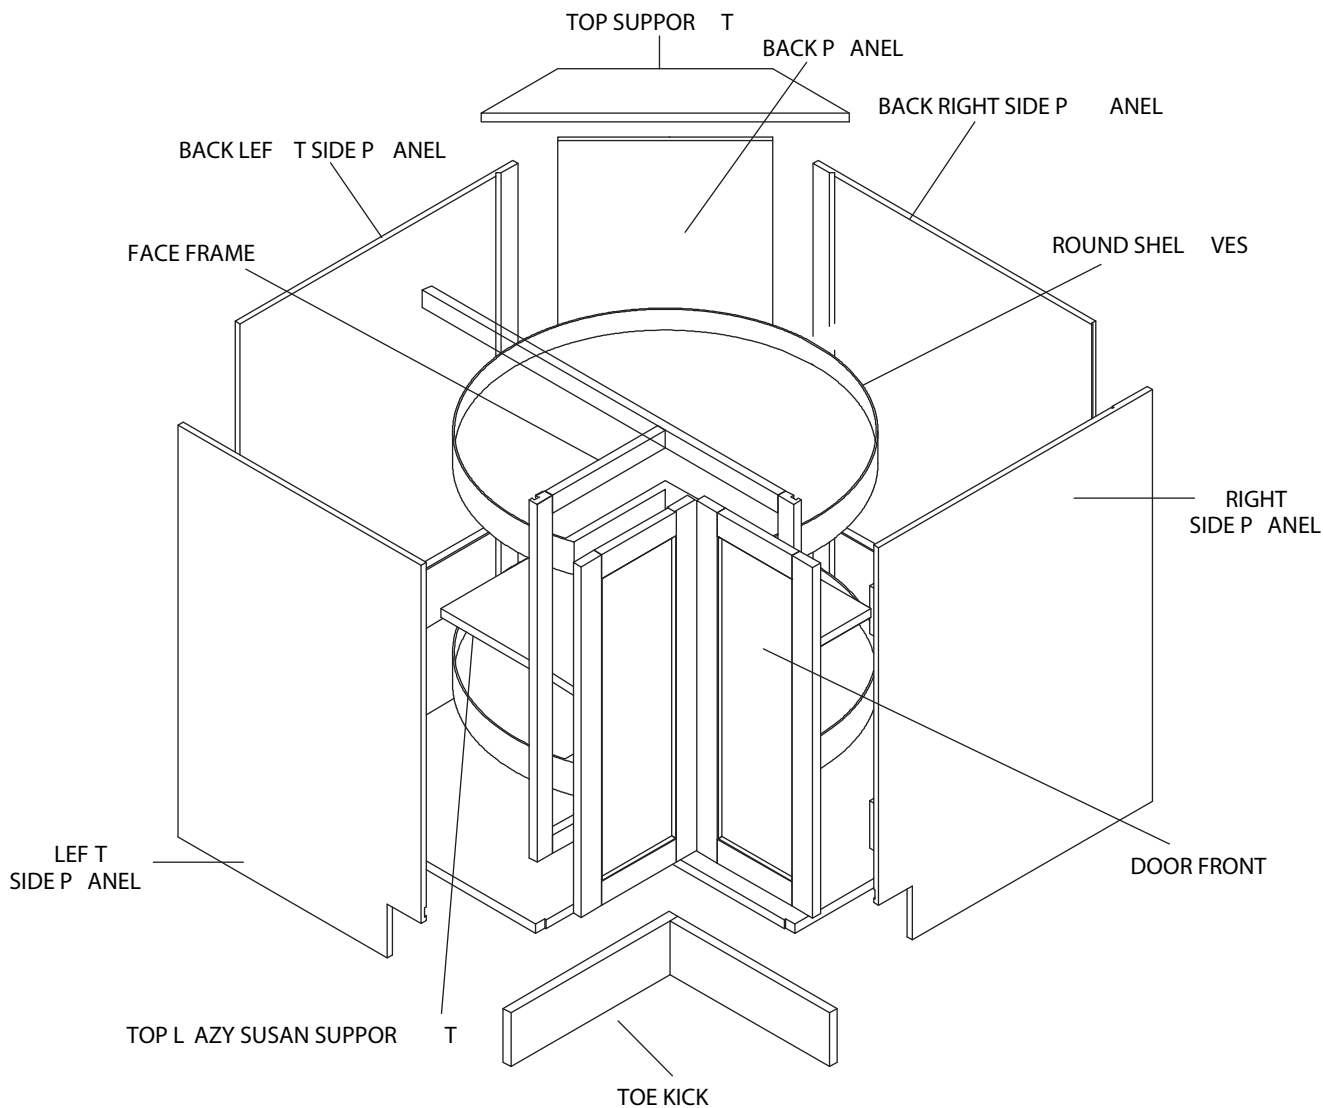

METAL BRACKETS



SHELF CLIPS




BIFOLD HINGE



ES/DS/SG

CT/PE/NT/AL


170 HINGE




SCREWS



TOOLS



WOOD
GLUE

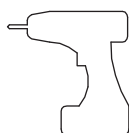


SCREW
DRIVER



RUBBER
Mallet



NAIL
GUN

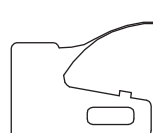


STAPLER




SPOTNAILS
XC1008


STEP
1

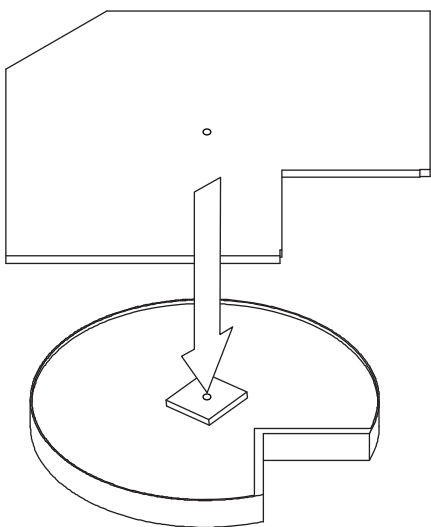


STEP
2

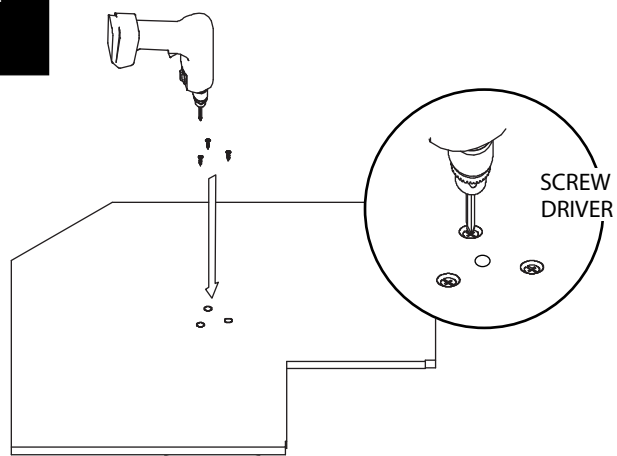


STEP
3

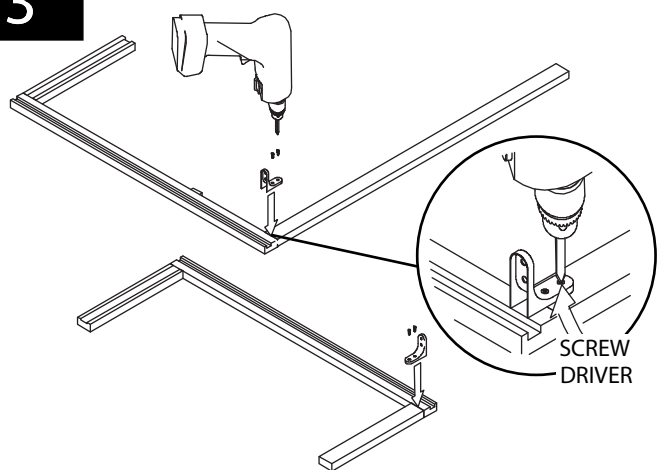


STEP
4

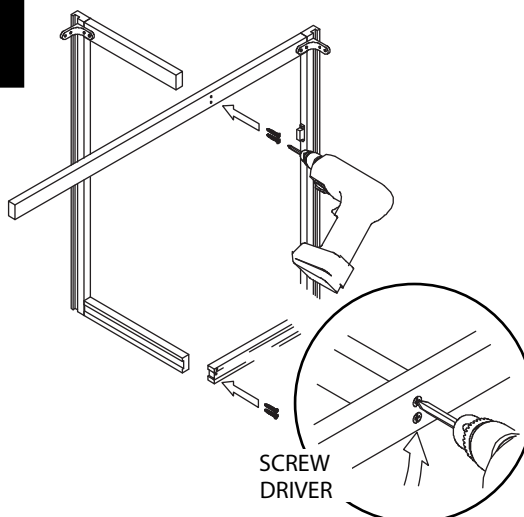


STEP
5

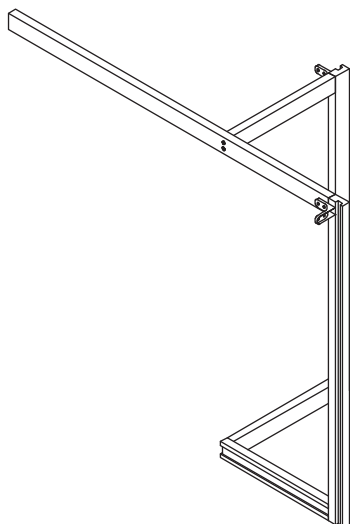


STEP
6

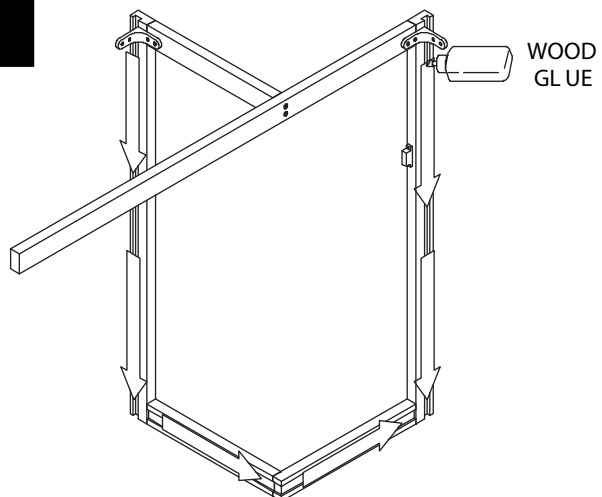


STEP
7

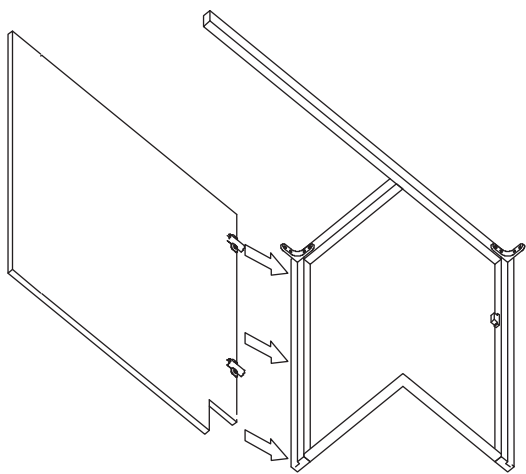


STEP
8

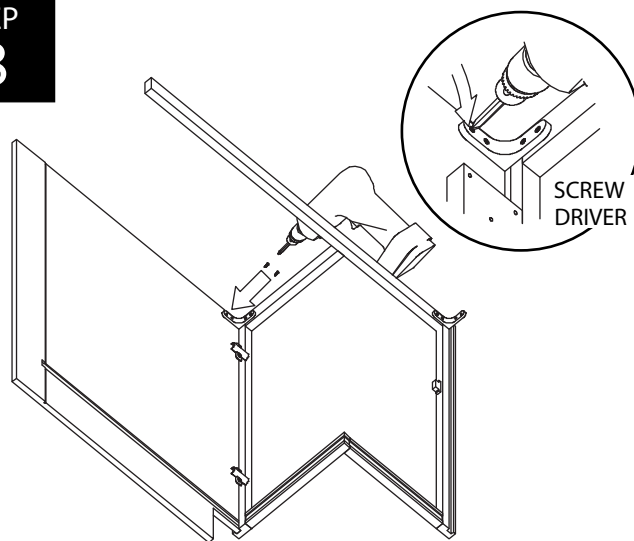


STEP
9

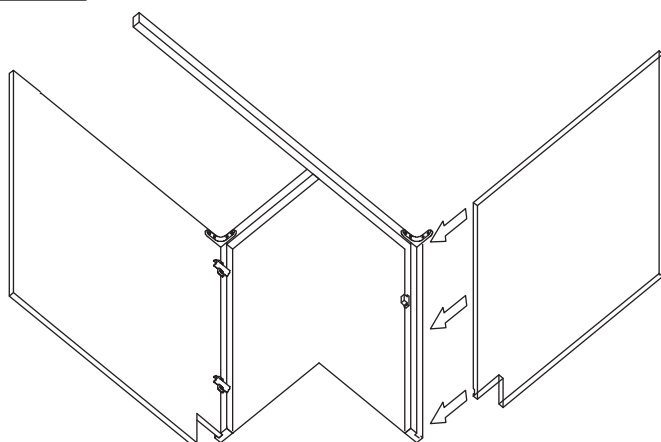


STEP
10

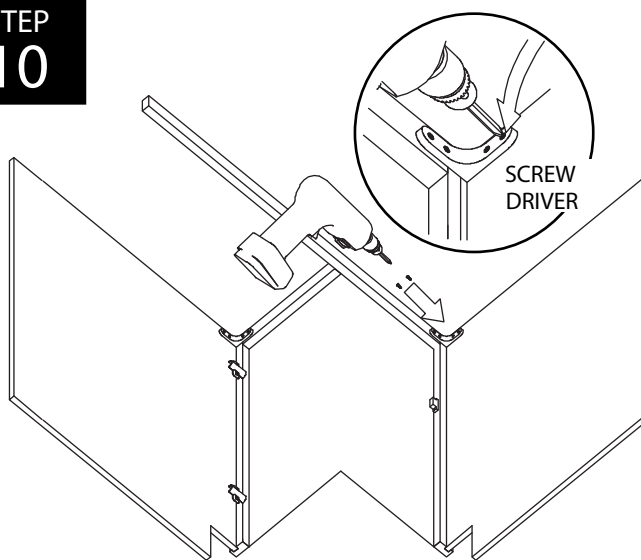


STEP
11

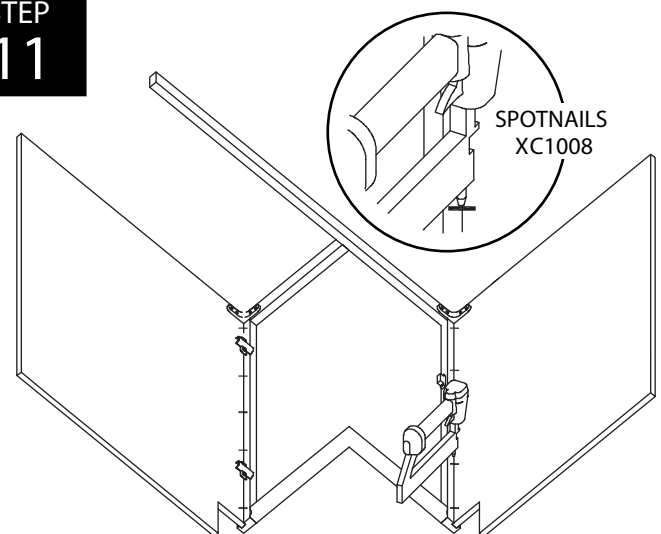


STEP
12

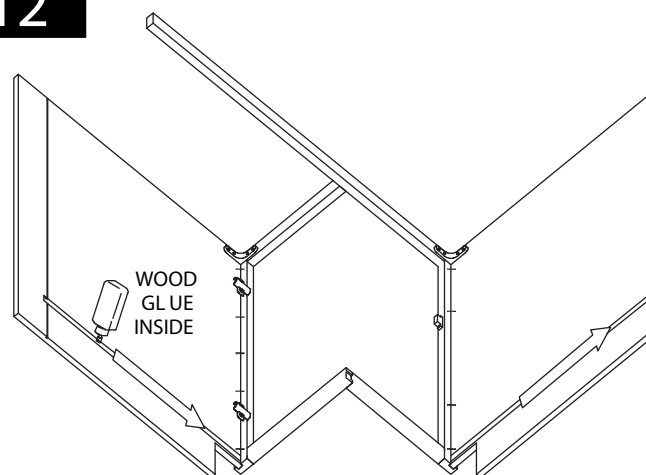


STEP
13

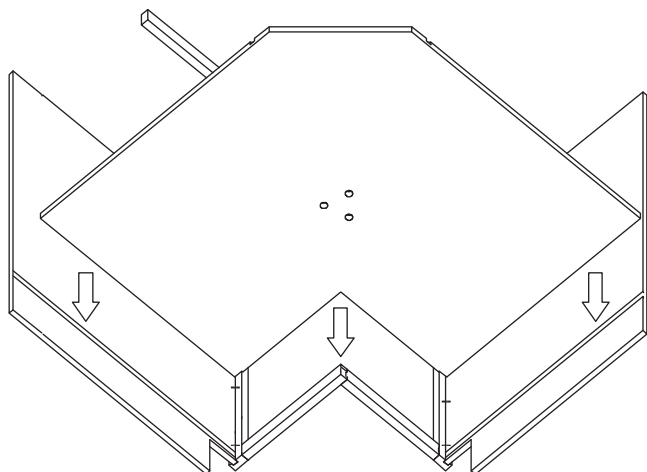


STEP
14

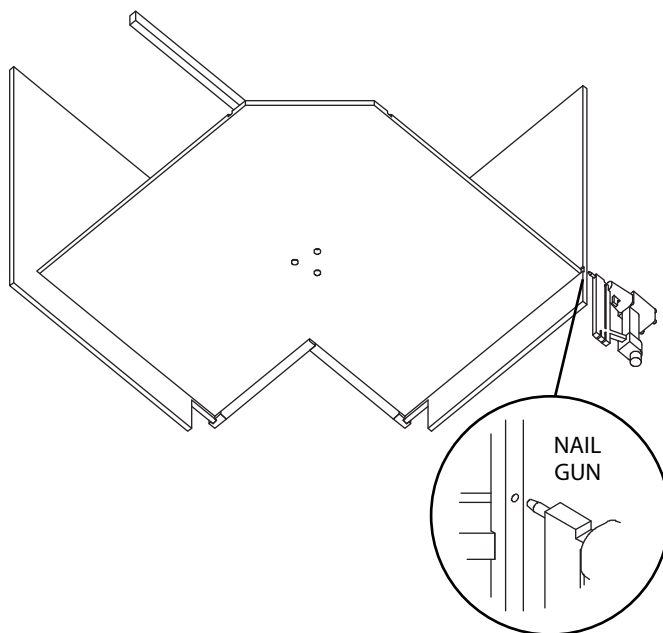


STEP
15

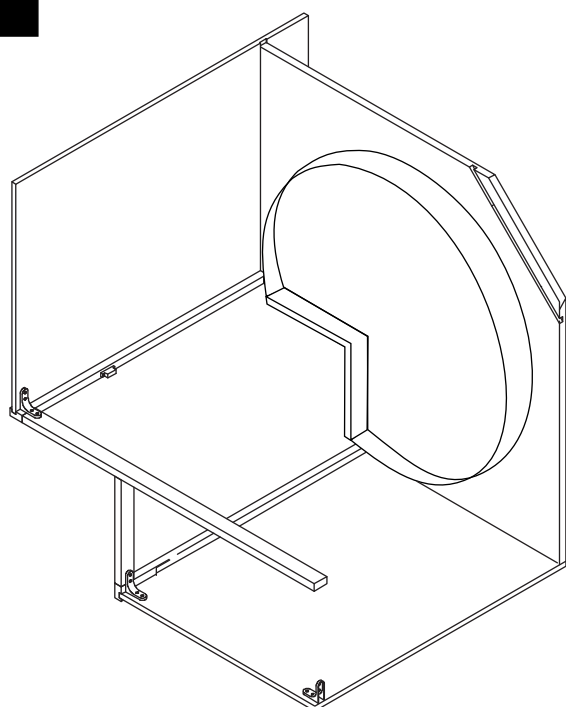


STEP
16

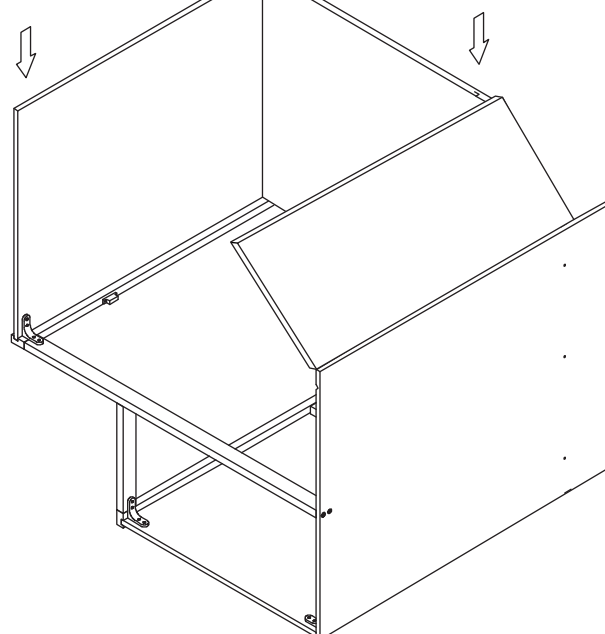


STEP
17

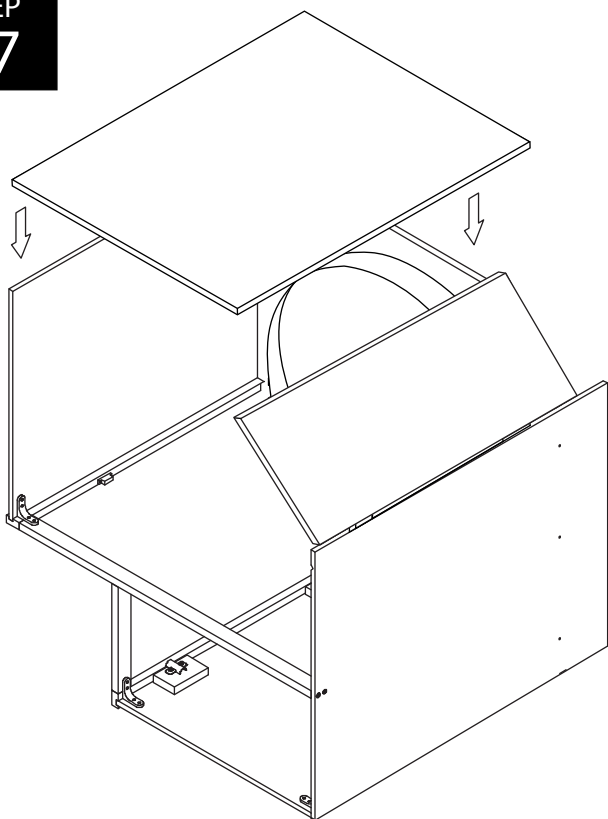


STEP
18

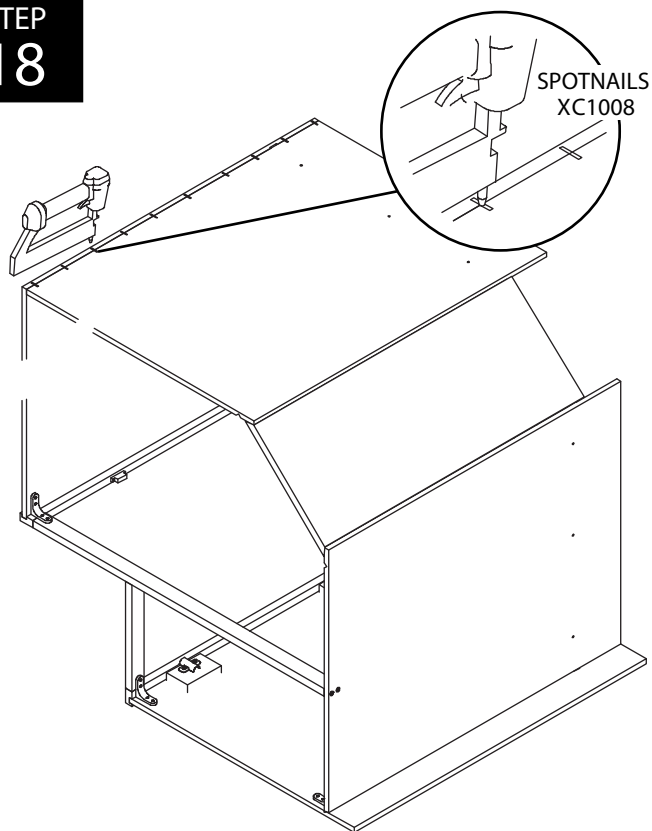


STEP
19

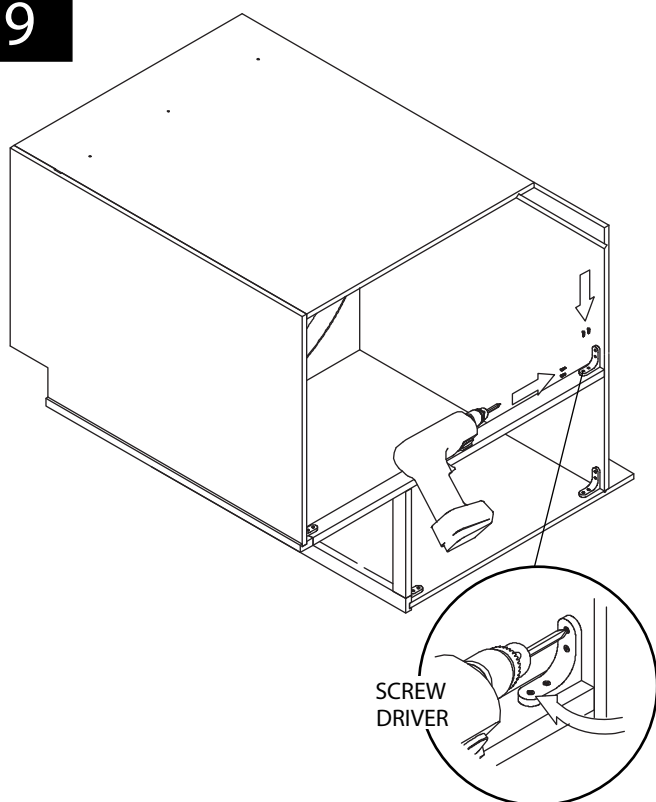


STEP
20

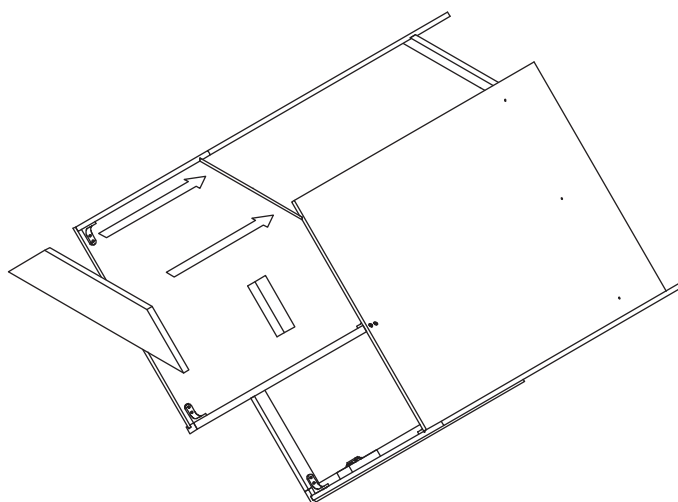


STEP
21

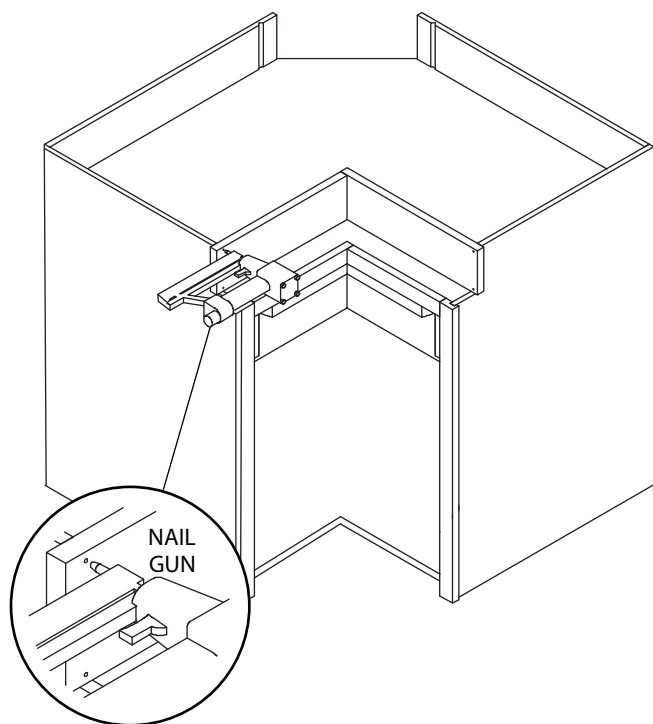


STEP
22

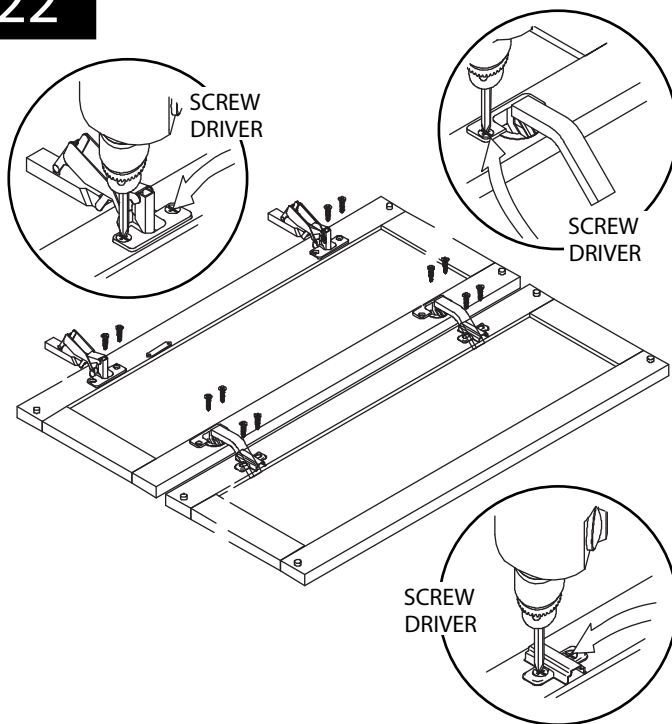

STEP
23

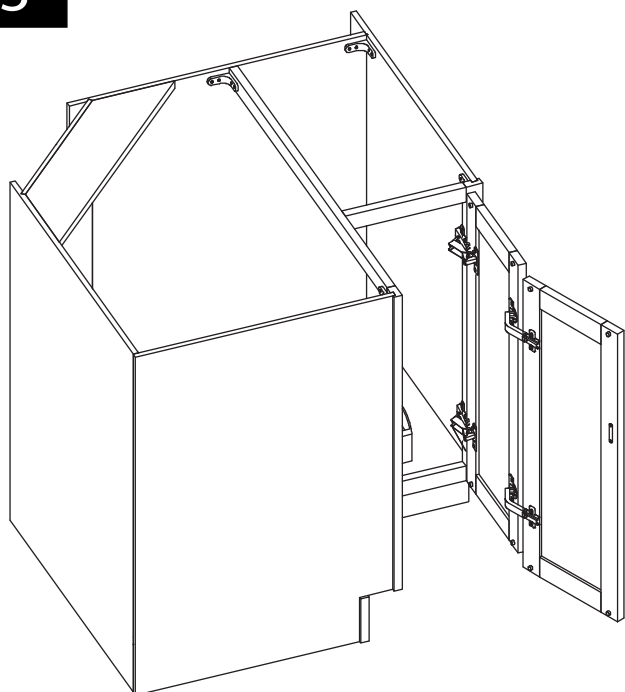




STEP
24

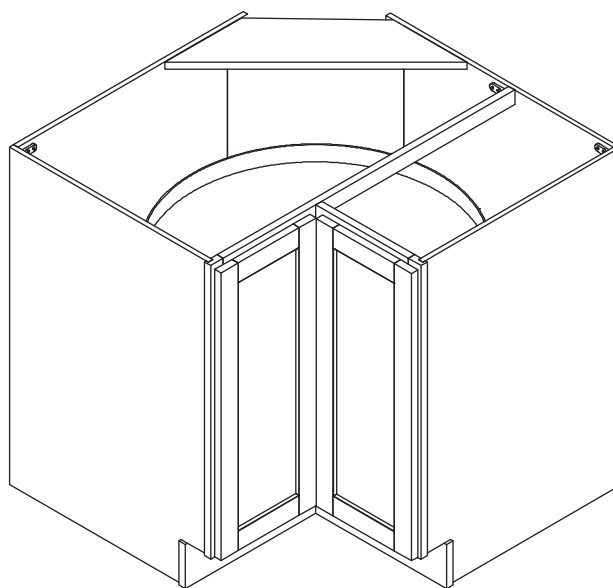

ASSEMBLING INSTRUCTIONS - BLIND CORNER BA


SE C ABINET

BLIND CORNER BA SE C ABINET

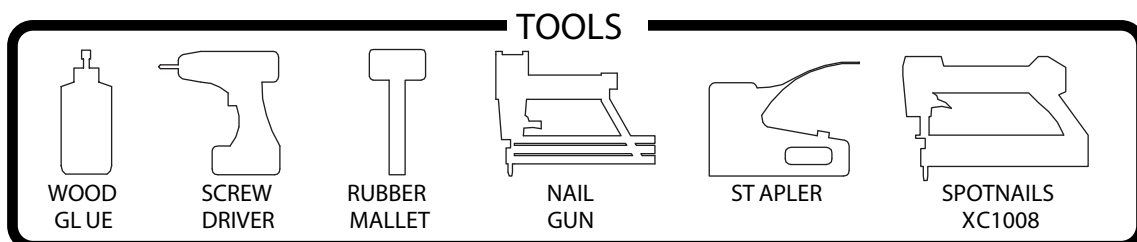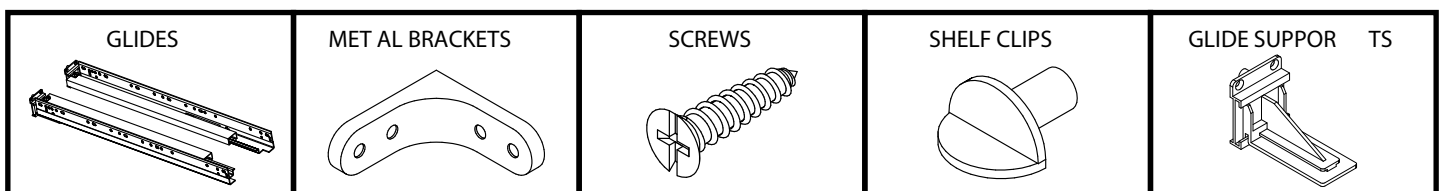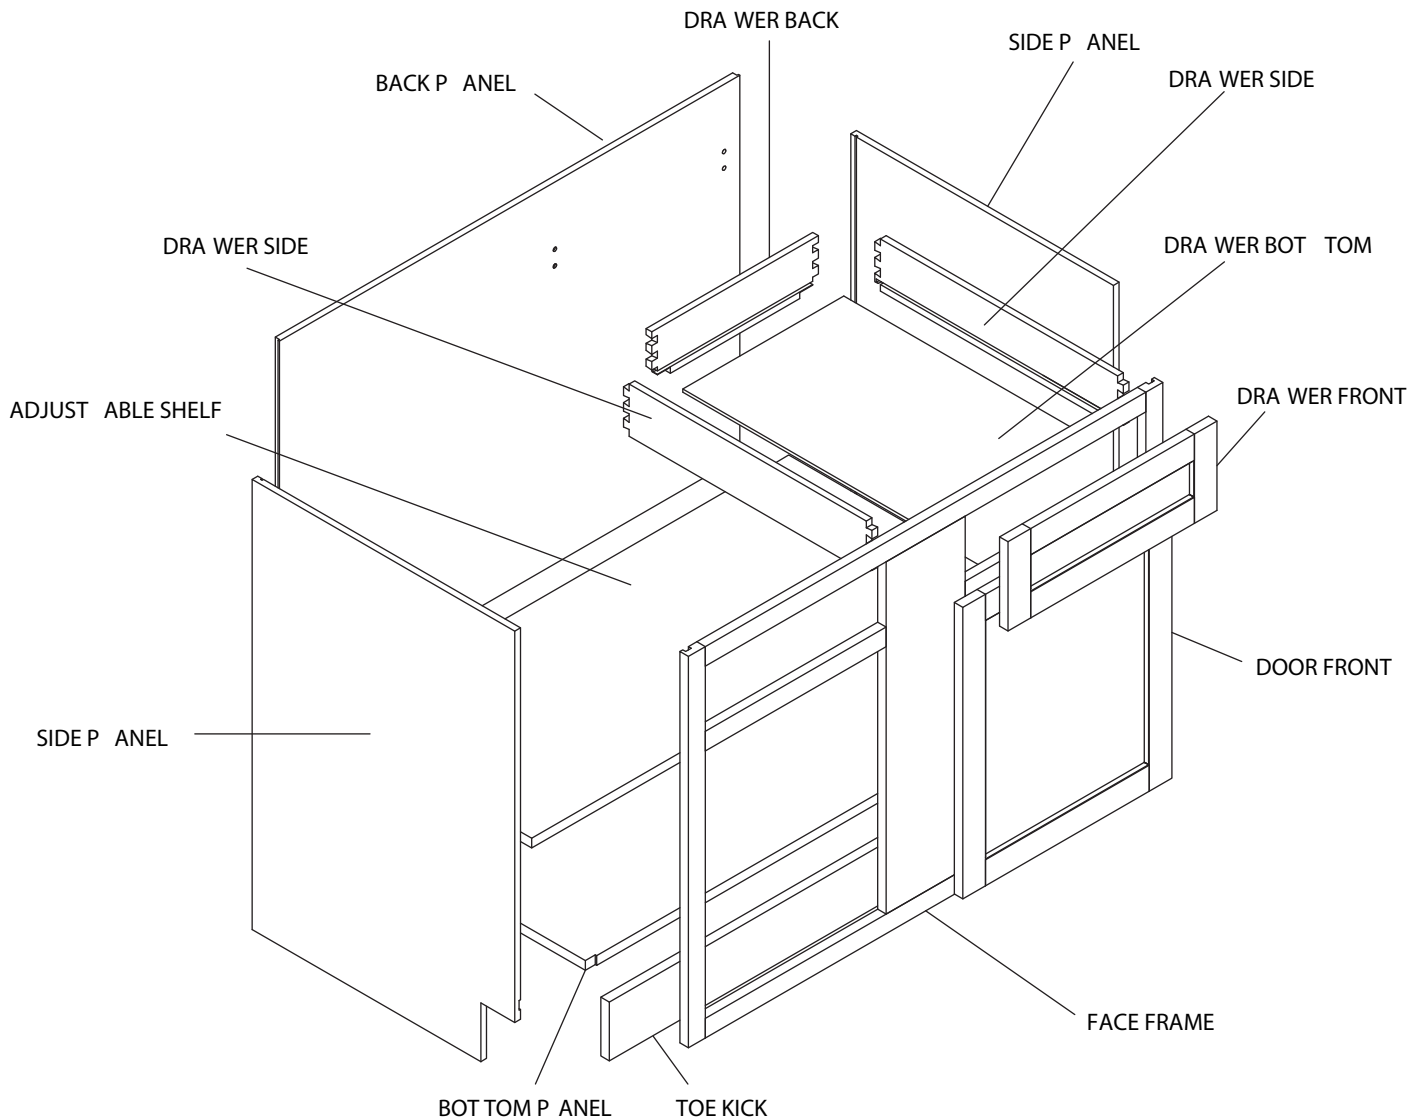


STEP
1


WOOD
GLUE

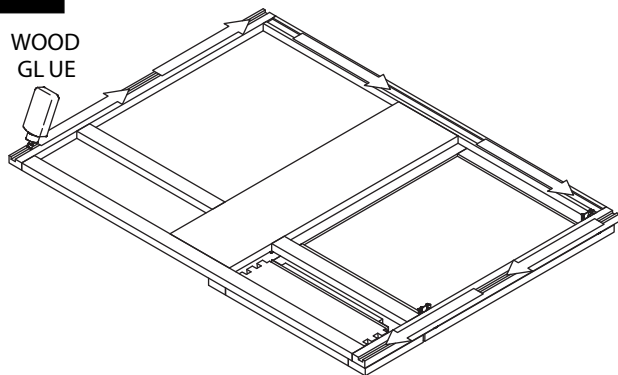


STEP
2

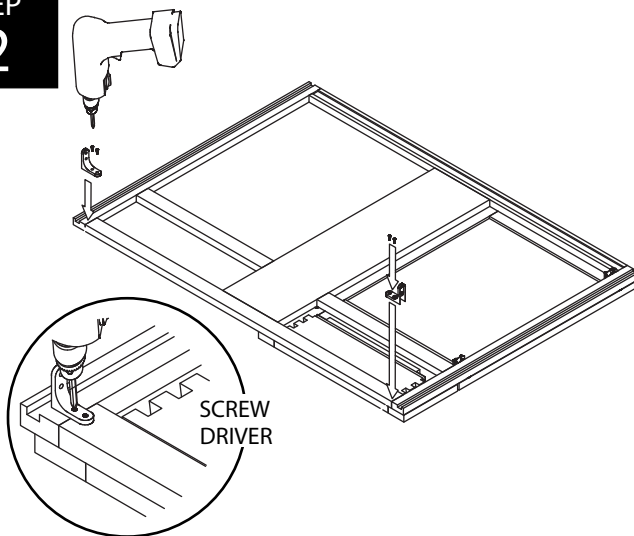


STEP
3

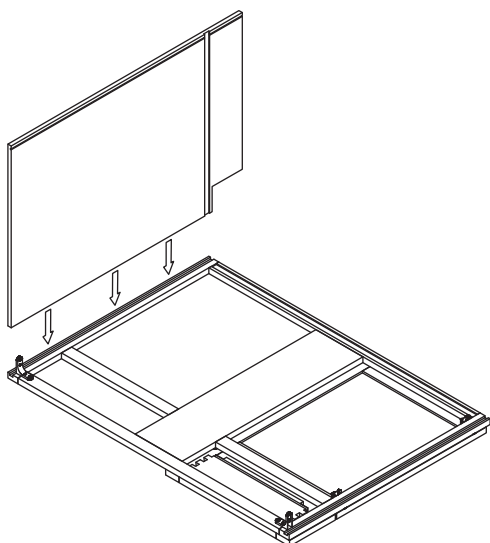


STEP
4

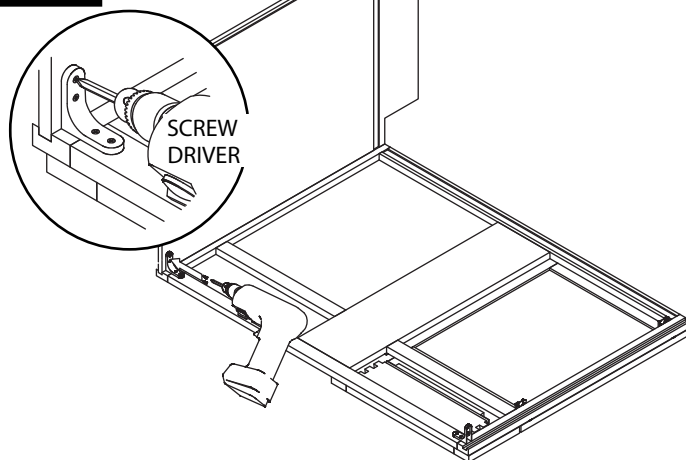


STEP
5

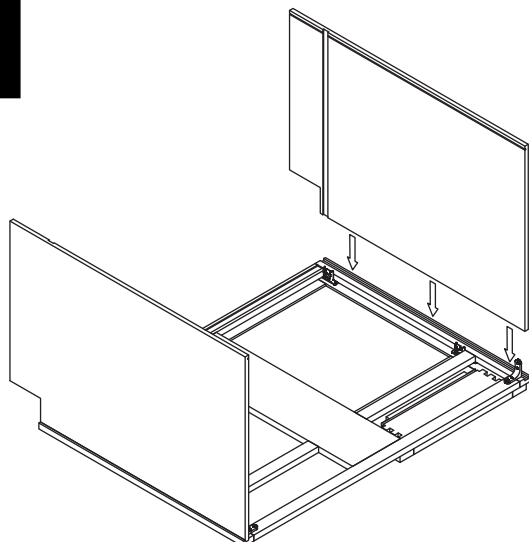


STEP
6

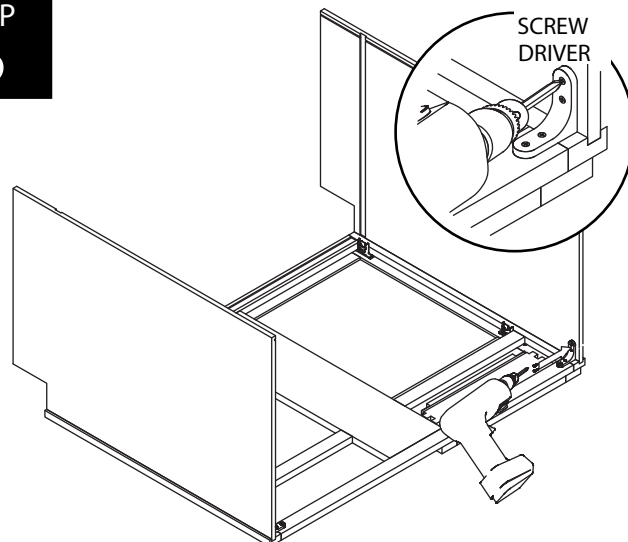


STEP
7

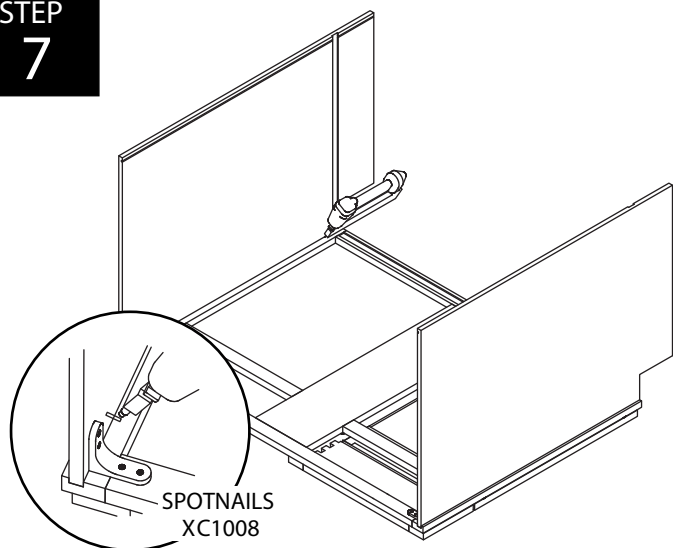


STEP
8

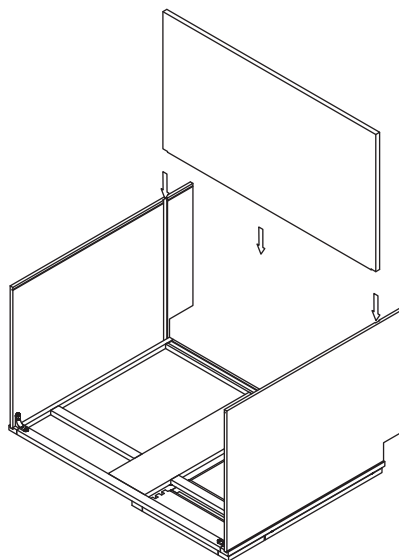


STEP
9

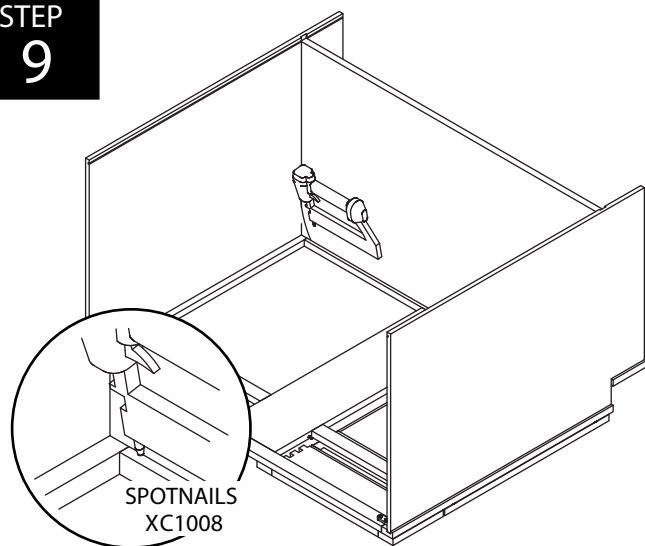


STEP
10

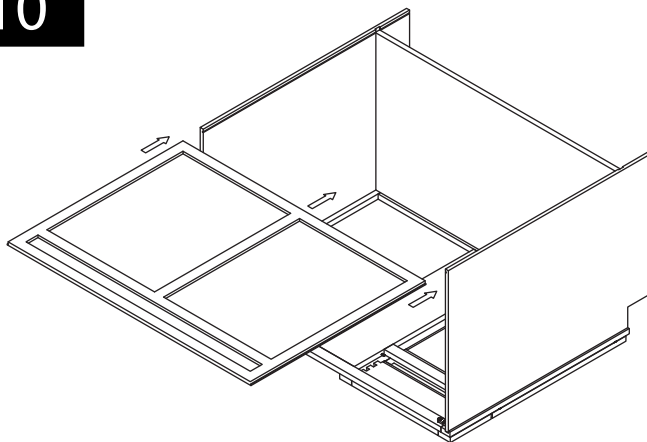


STEP
11

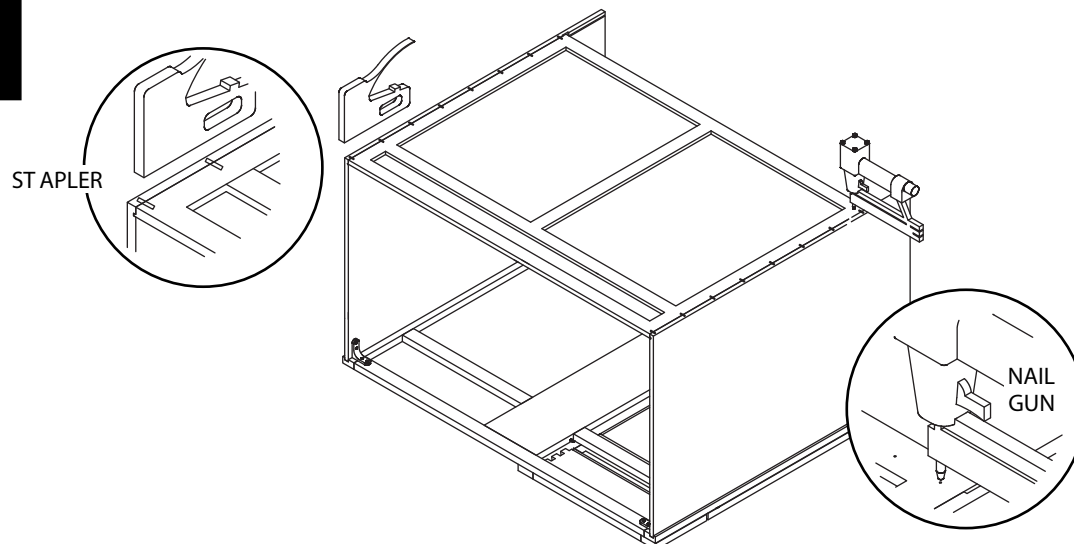


STEP
12

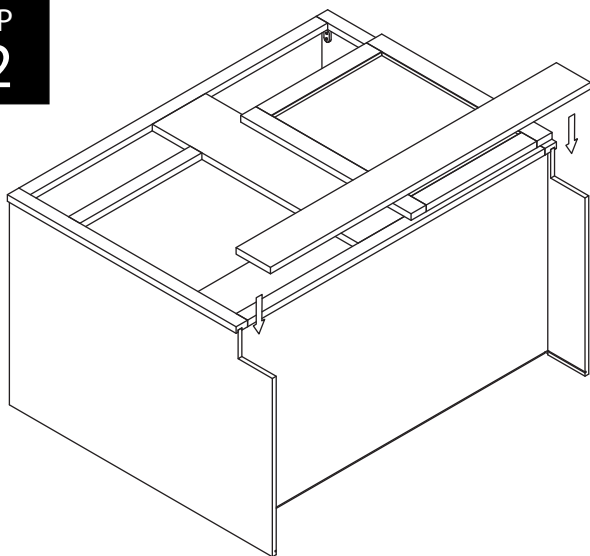


STEP
13

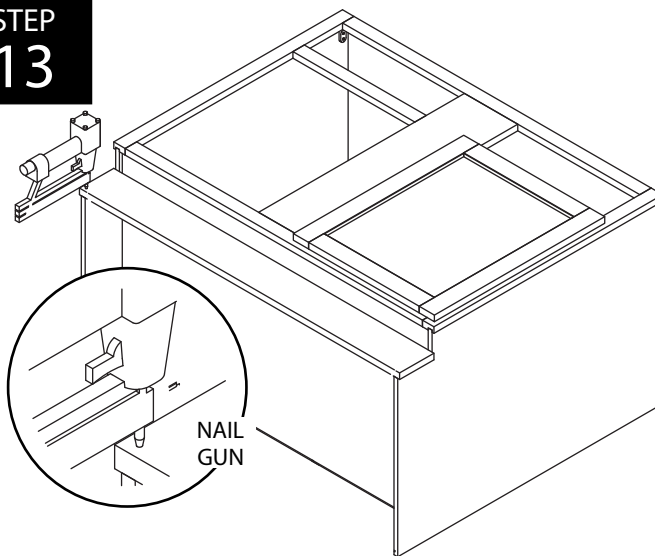


STEP
14

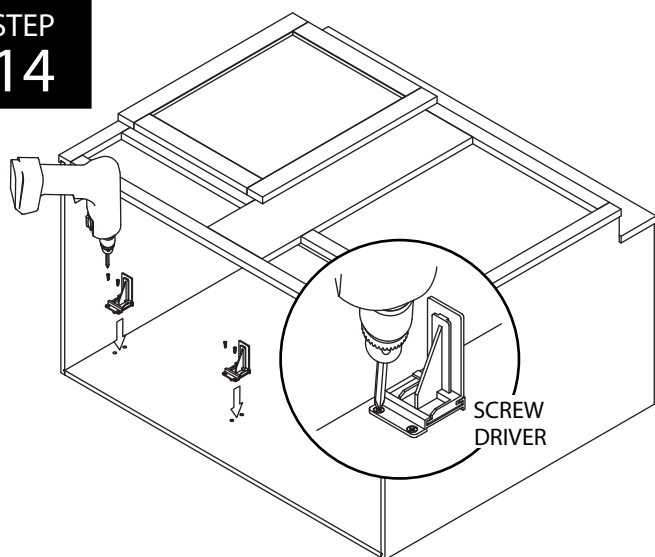


STEP
15

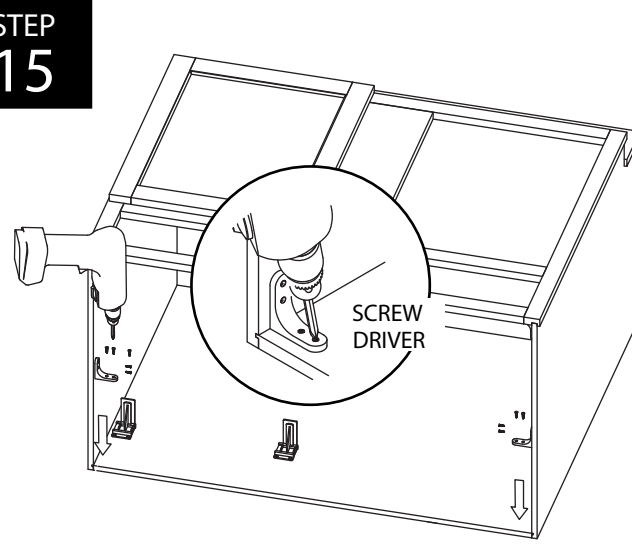


STEP
16

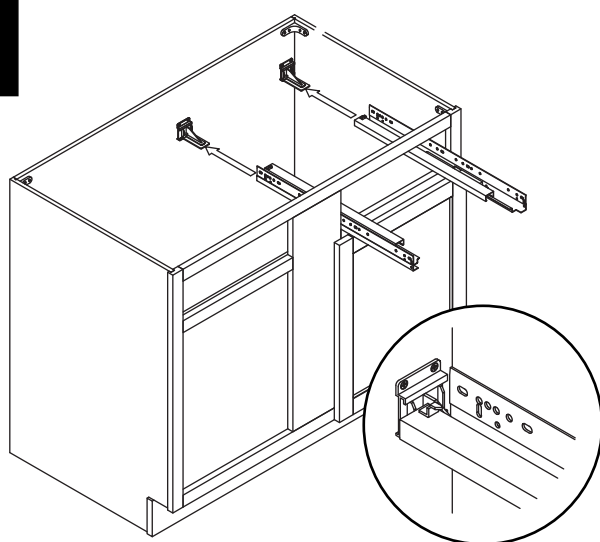


STEP
17

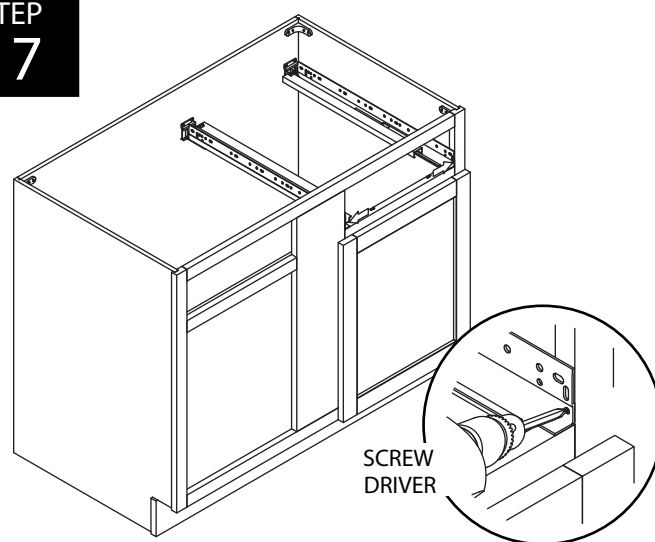


STEP
18

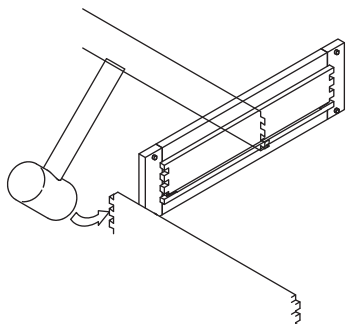


STEP
19

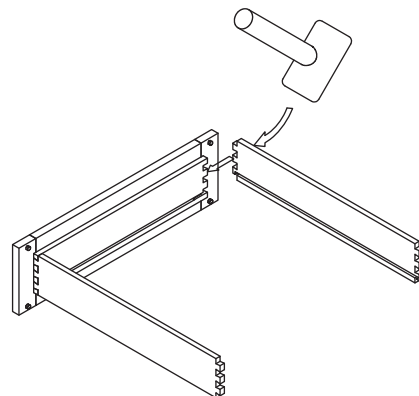


STEP
20

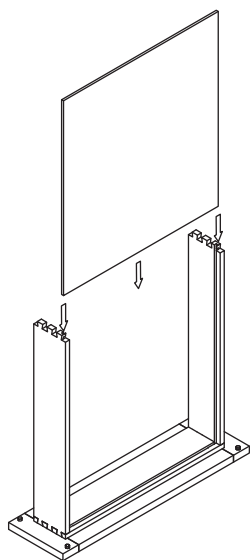


STEP
21

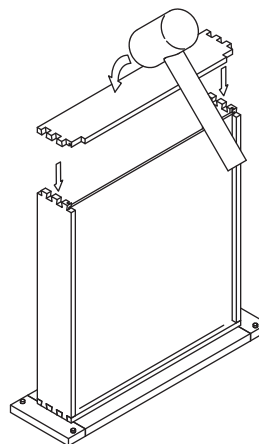


STEP
22

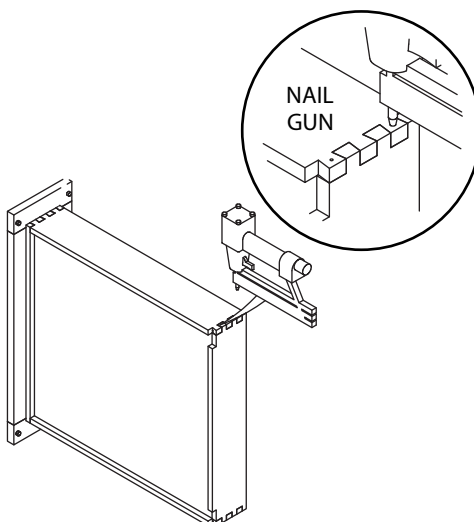


STEP
23

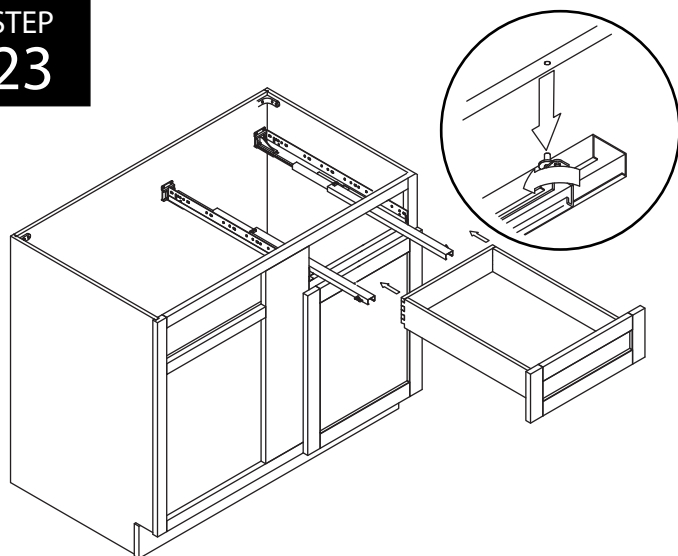


STEP
24

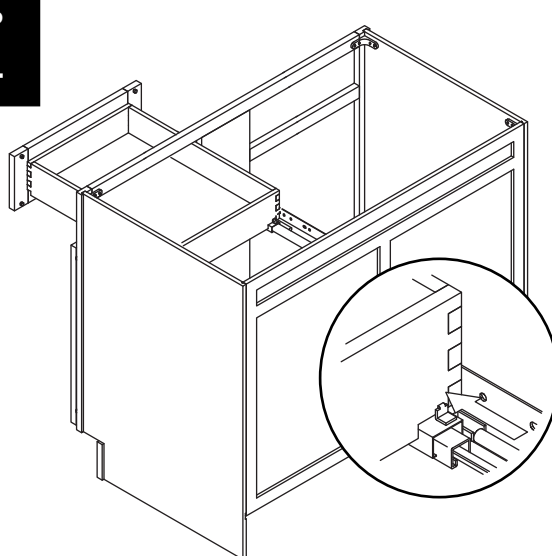

STEP
25

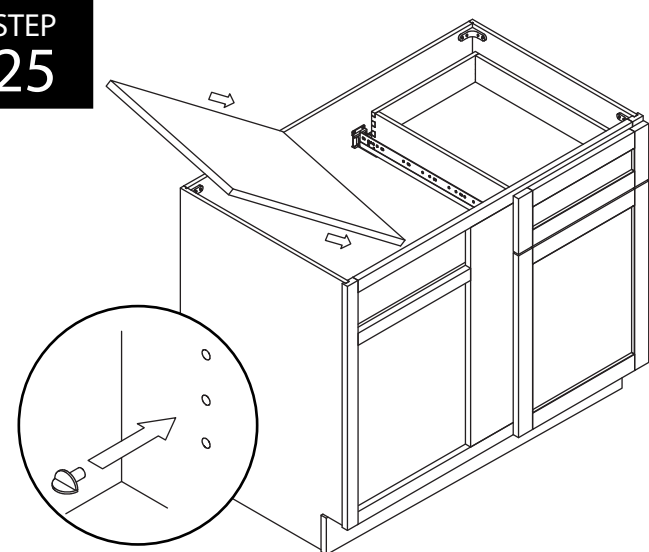



STEP
26






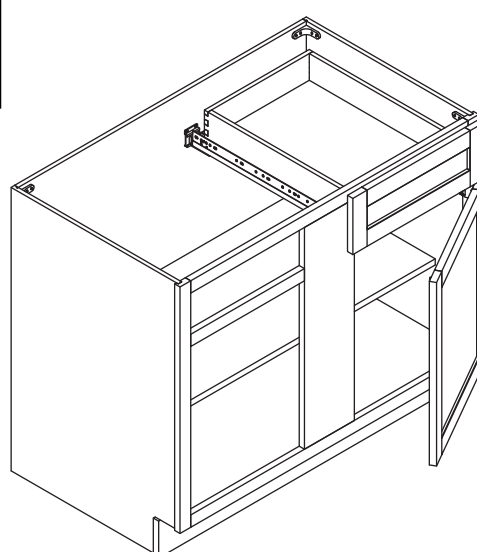


ASSEMBLING INSTRUCTIONS - BA


SE 3 DRAWERS

BA SE 3 DRAWERS

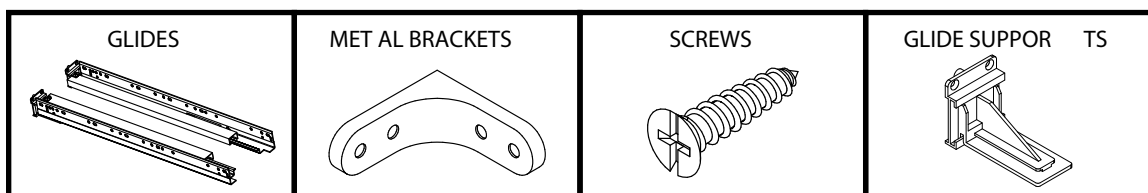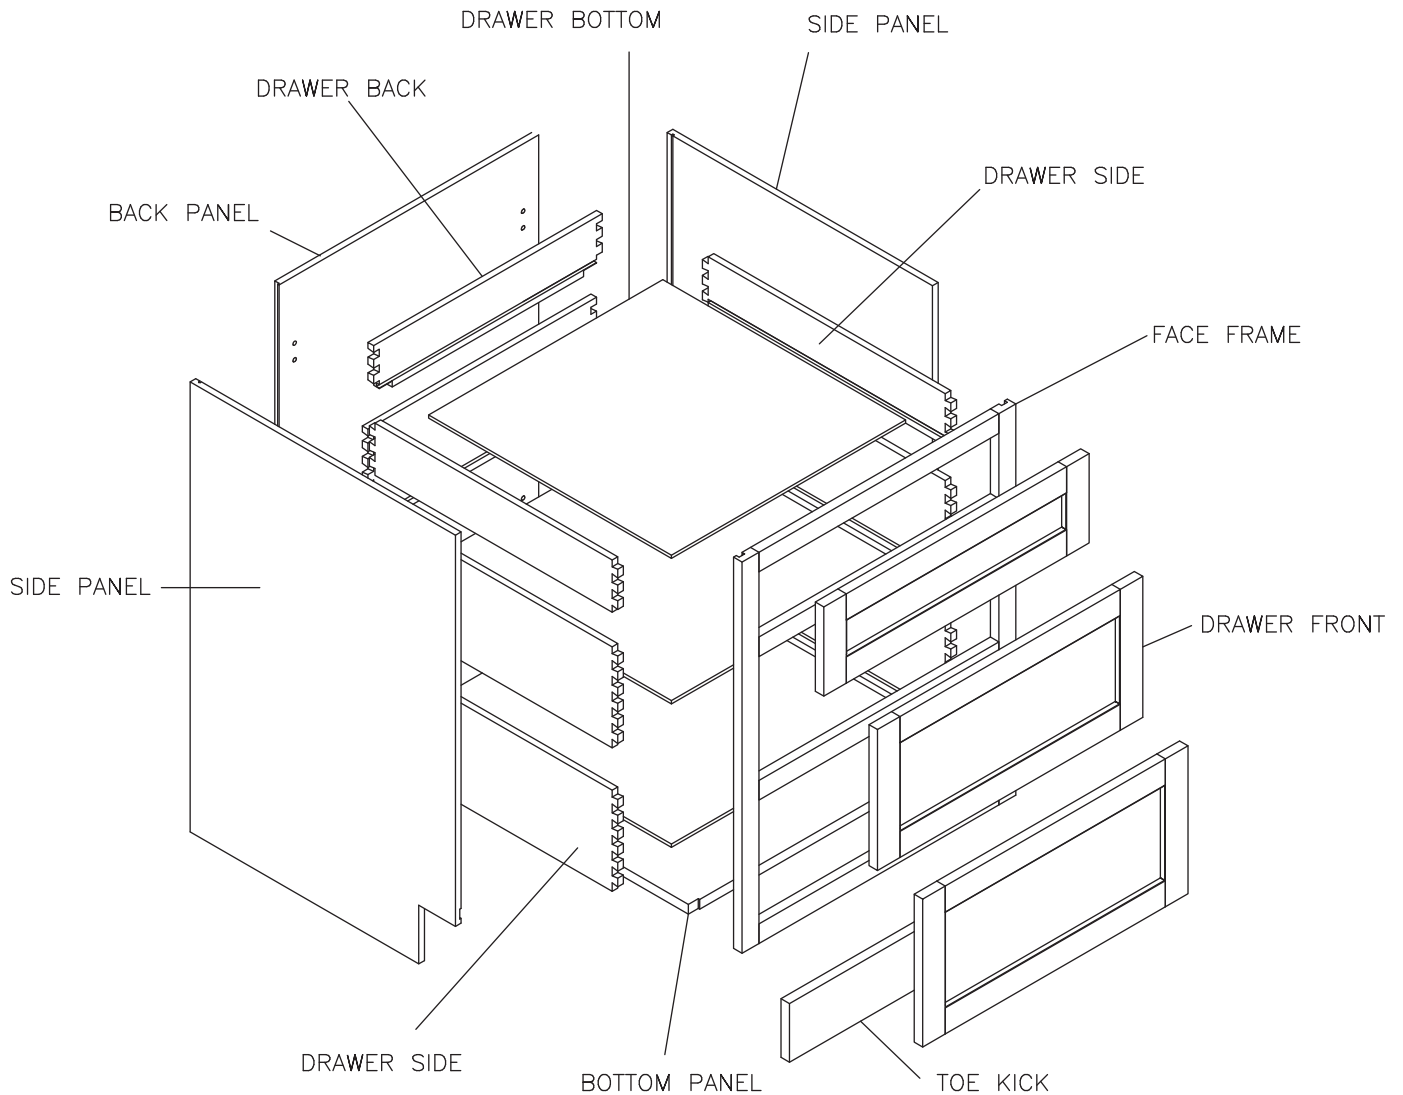


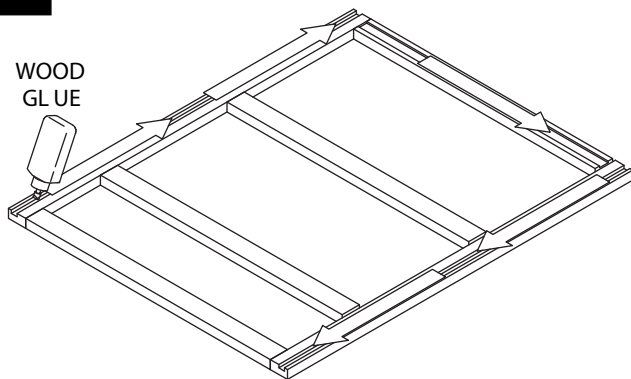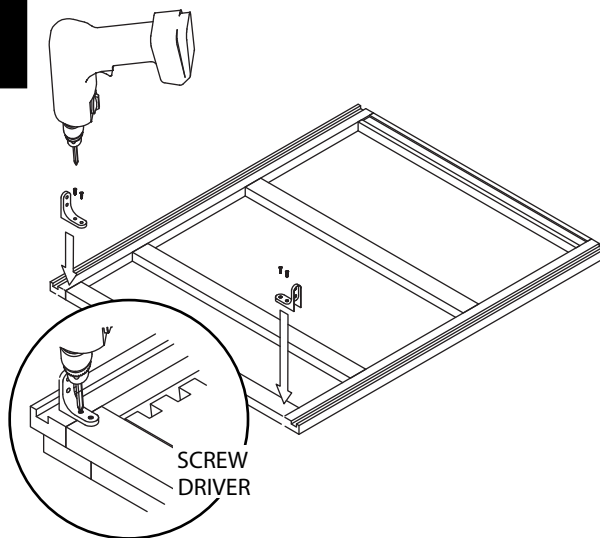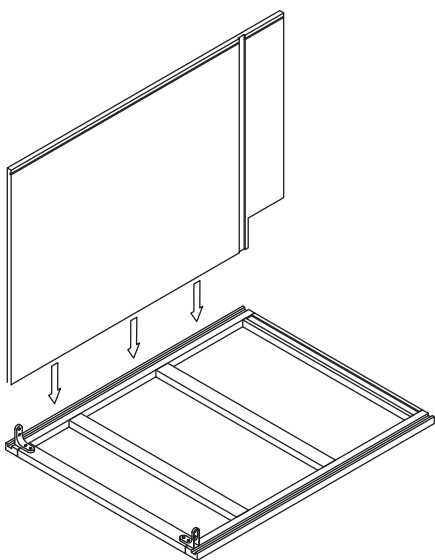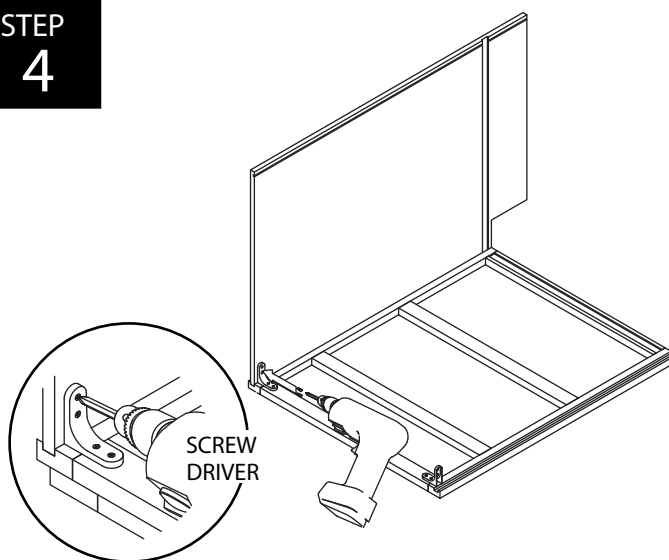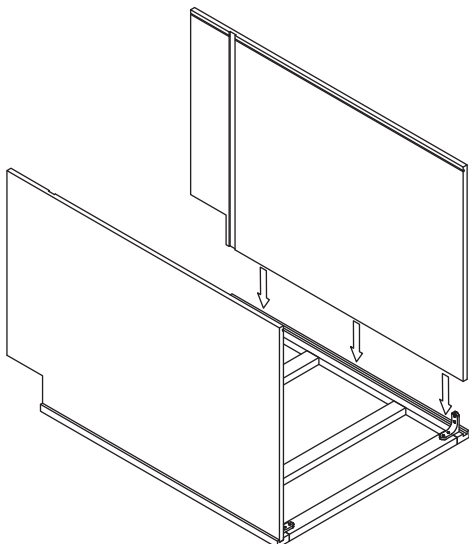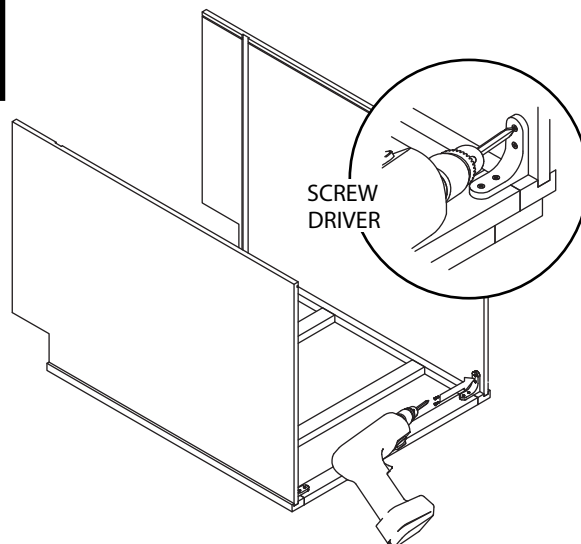STEP
1WOOD
GLUESTEP
2STEP
3STEP
4STEP
5STEP
6


STEP
7

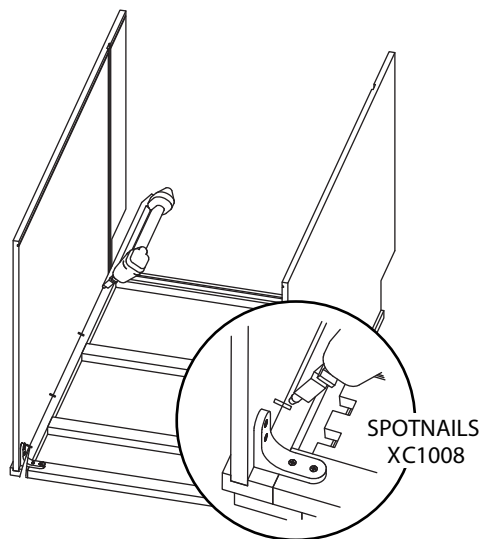


STEP
8

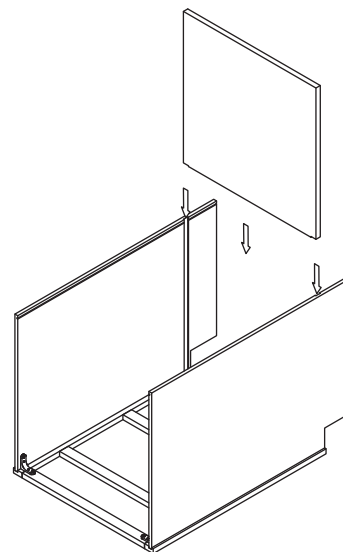


STEP
9

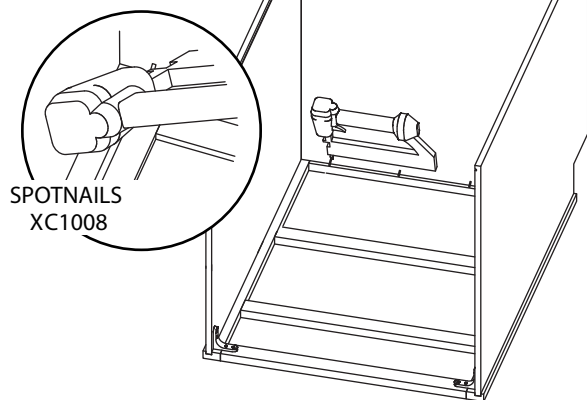


STEP
10

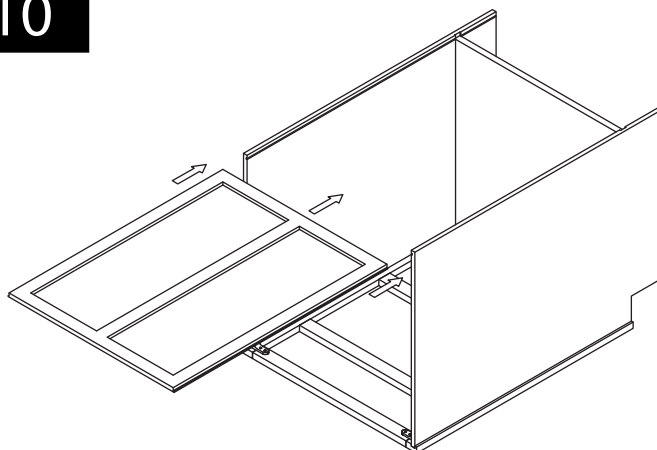


STEP
11

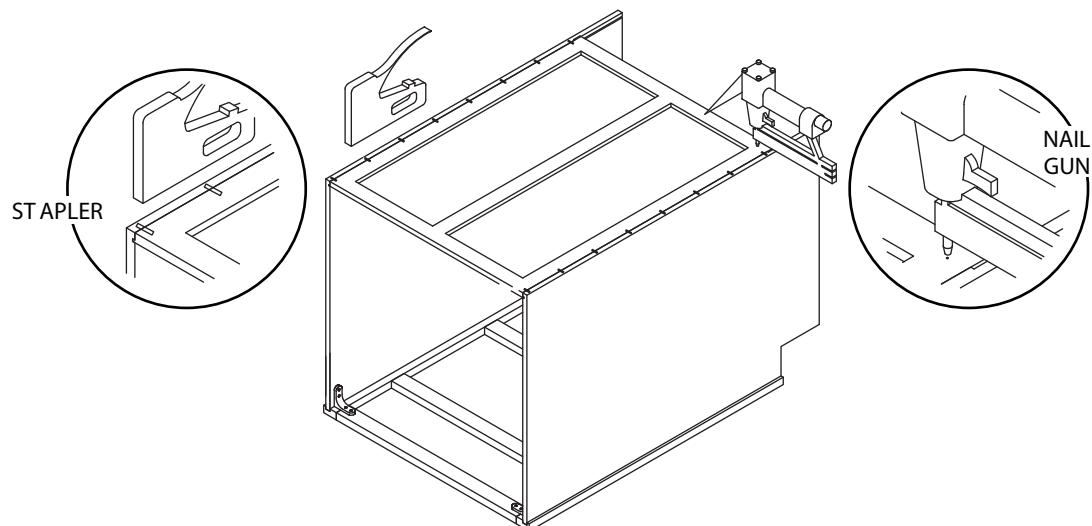


STEP
12

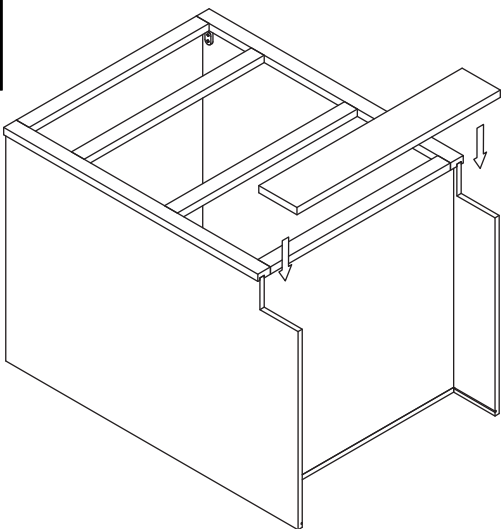


STEP
13

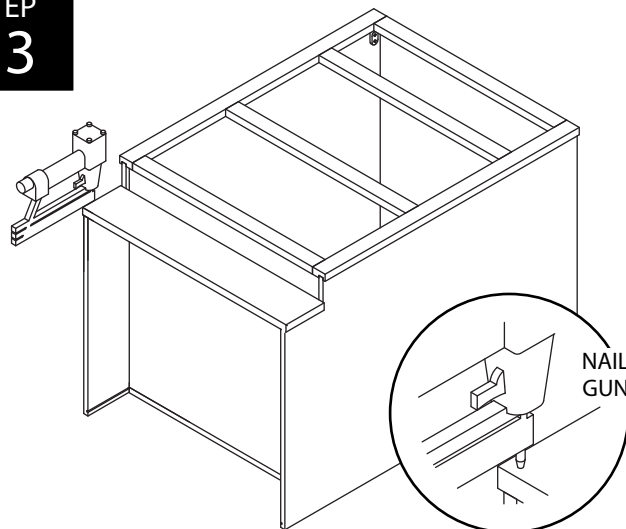


STEP
14

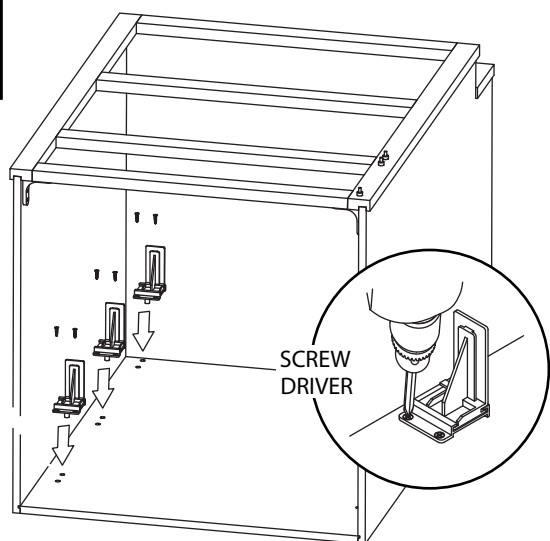


STEP
15

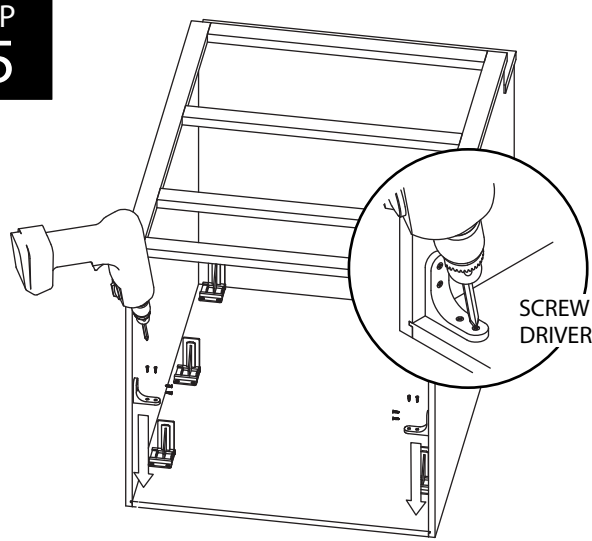


STEP
16

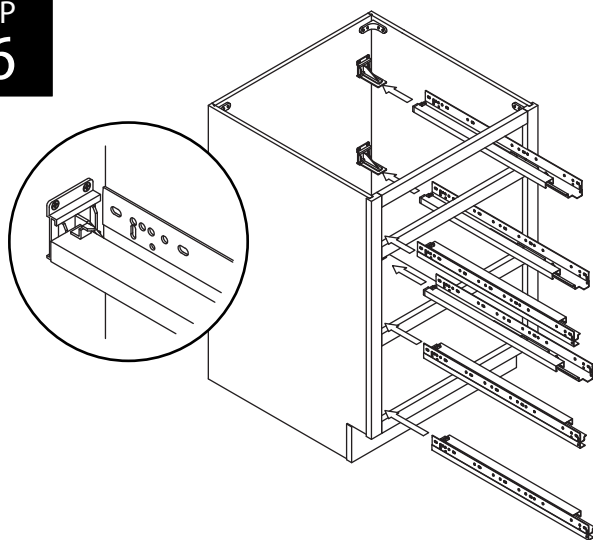


STEP
17

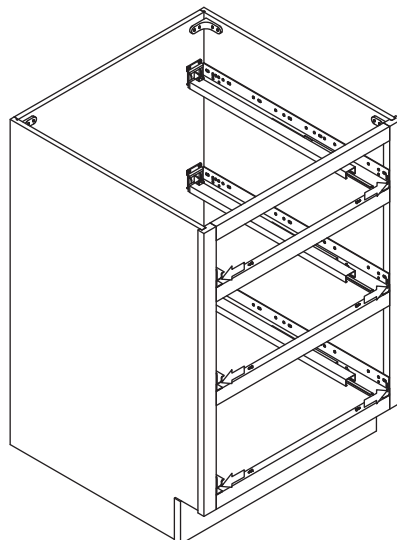


STEP
18

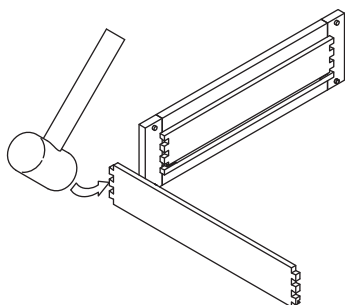


STEP
19

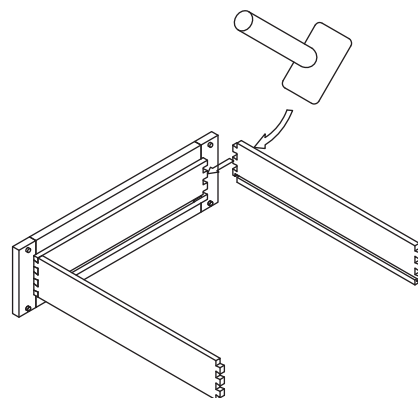


STEP
20



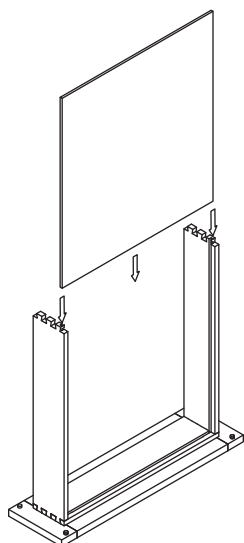


STEP
21

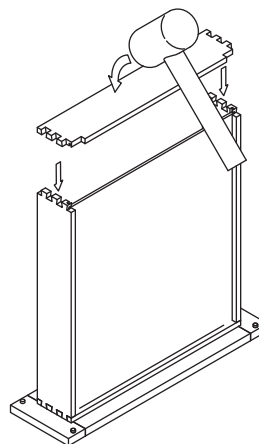

STEP
22



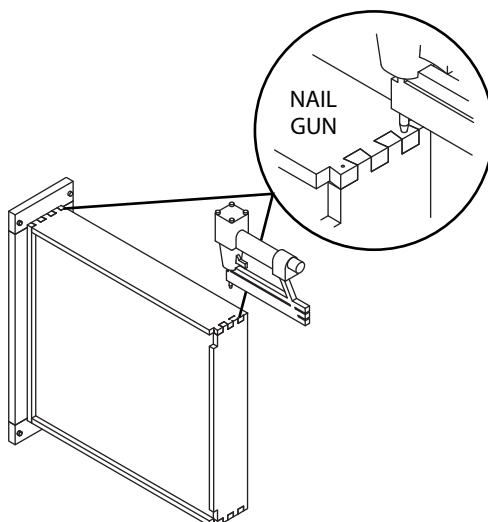


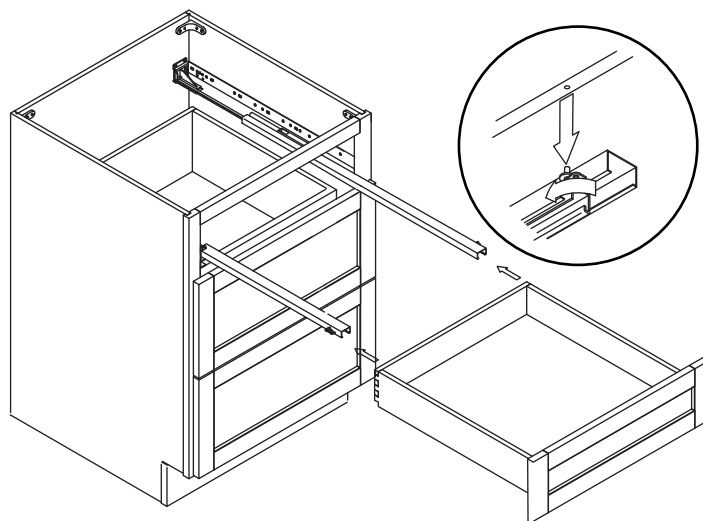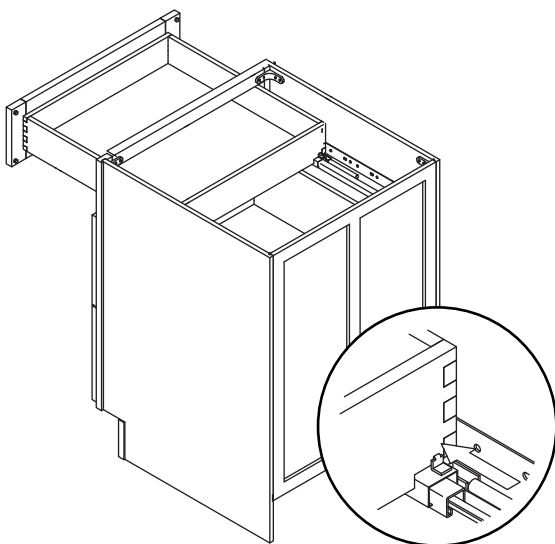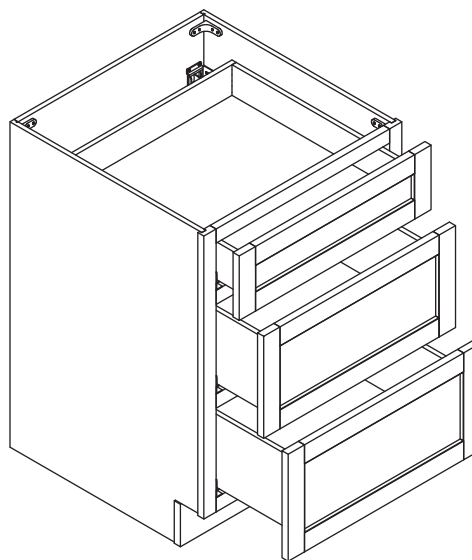**STEP
23****STEP
24****STEP
25**


ASSEMBLING INSTRUCTIONS - WALL C

ABINET


WALL CABINET

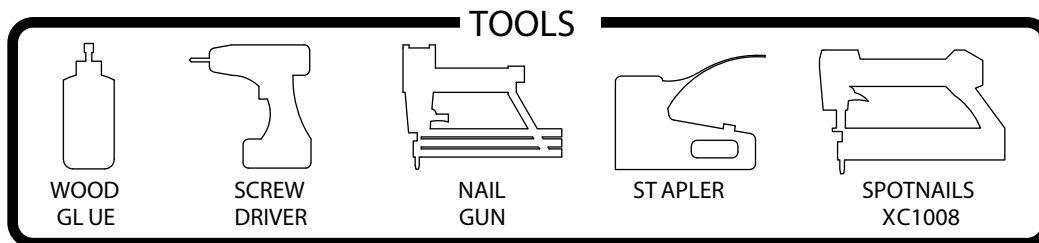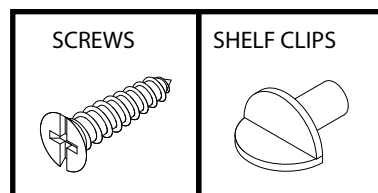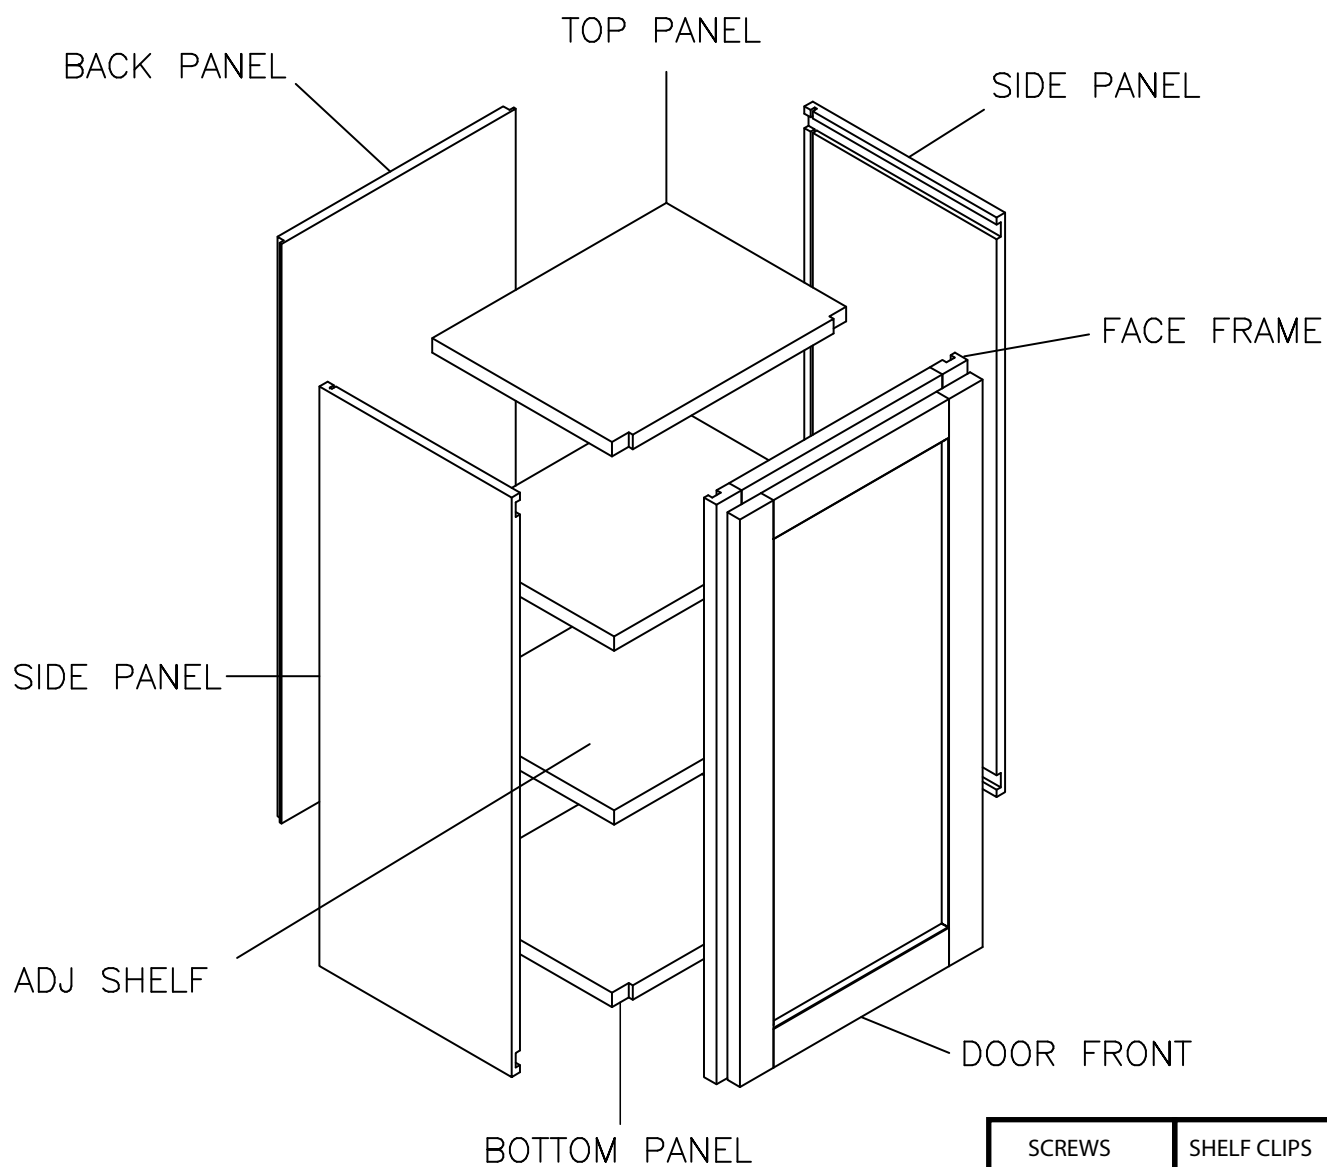


STEP
1

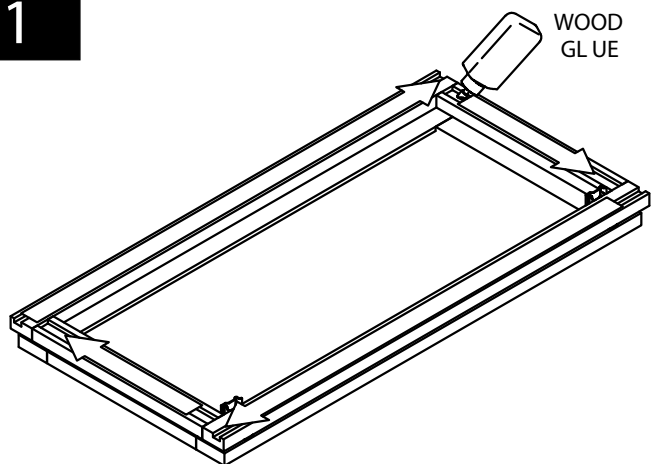


STEP
2

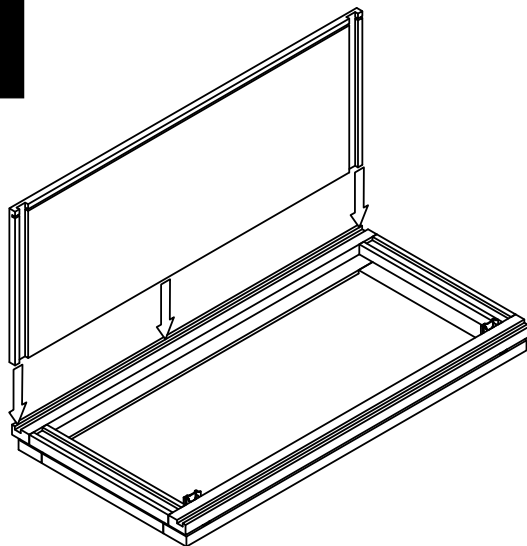


STEP
3

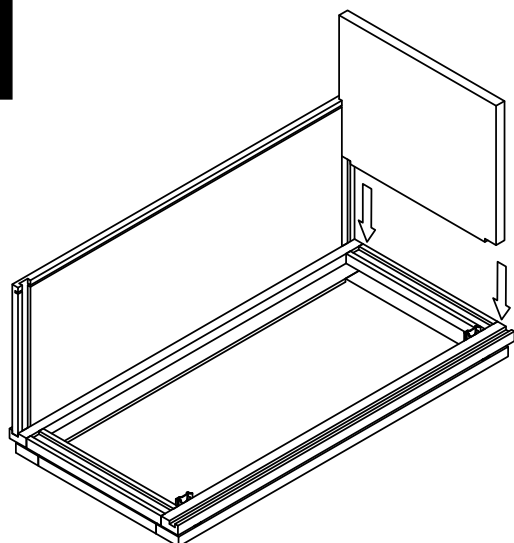


STEP
4

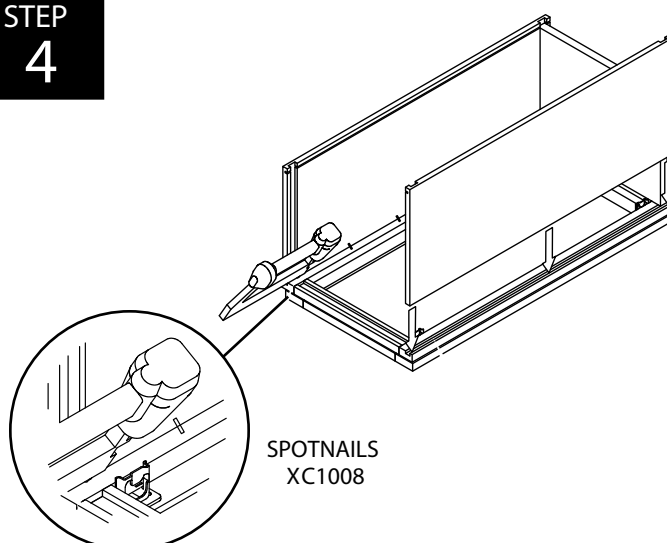


STEP
5

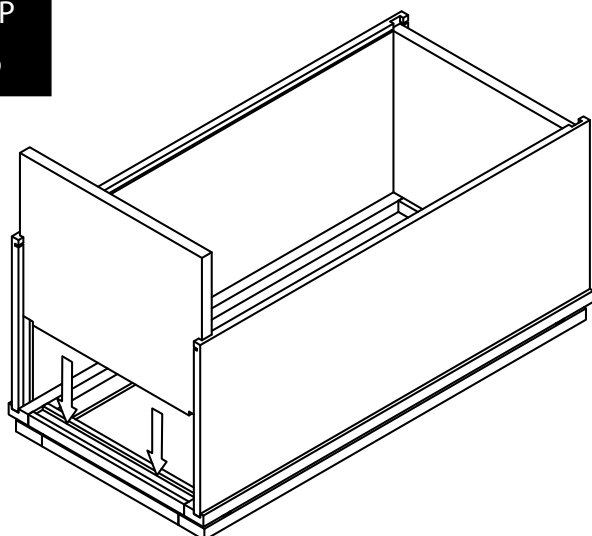


STEP
6

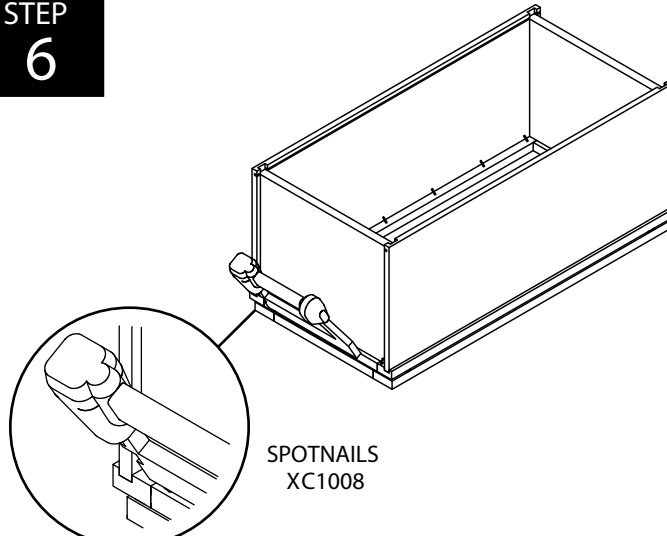


STEP
7

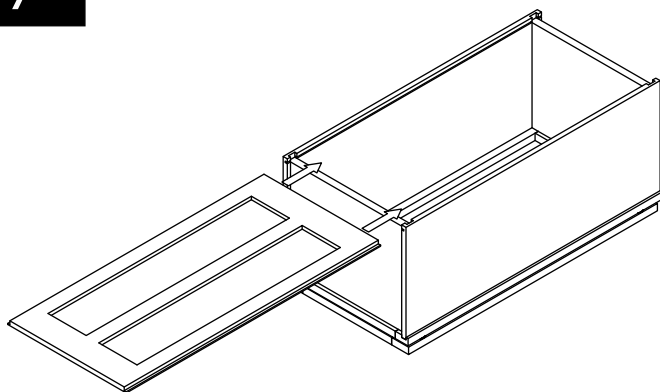


STEP
8

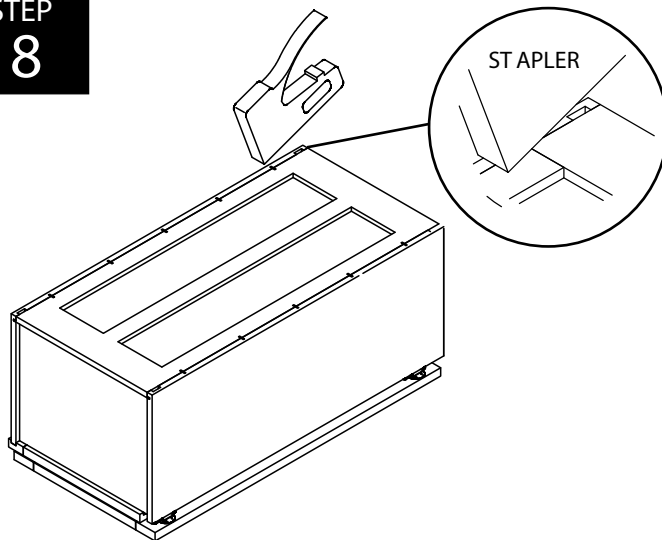


STEP
9



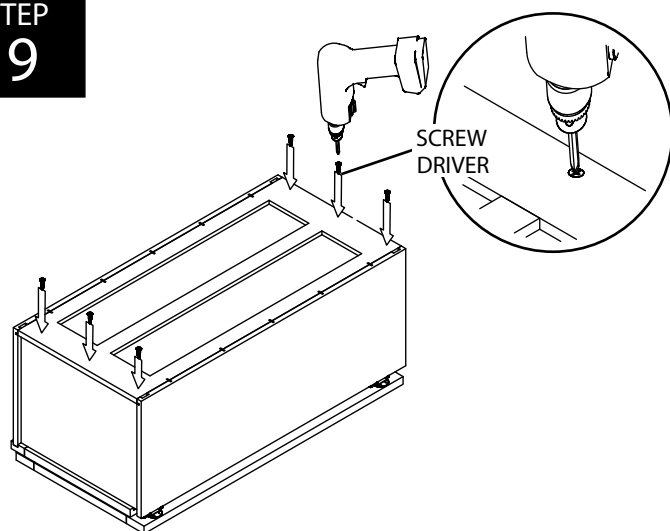


STEP
10

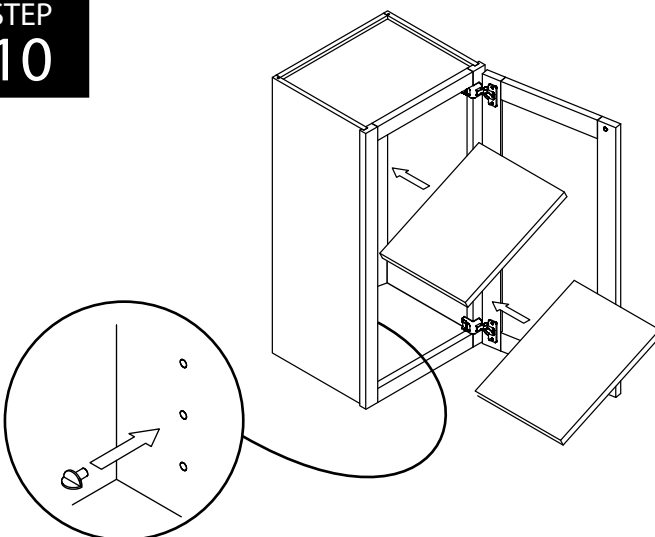


STEP
11

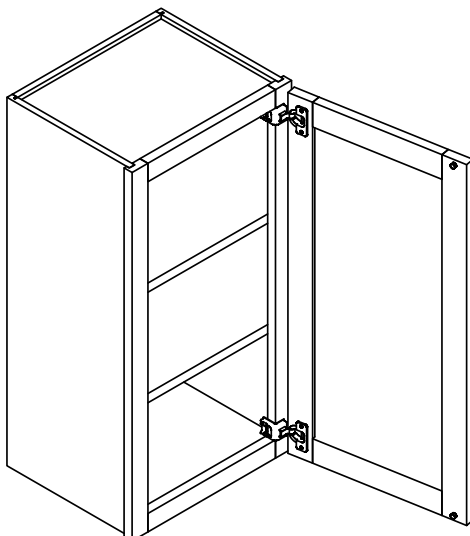


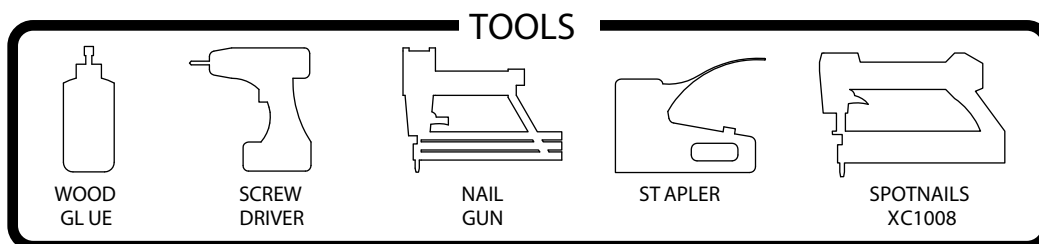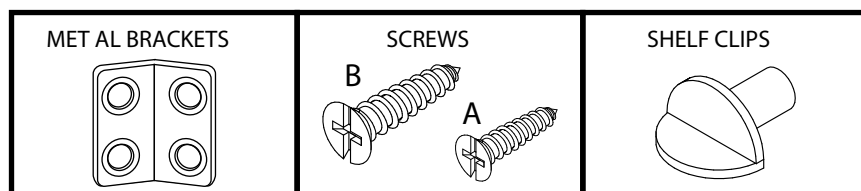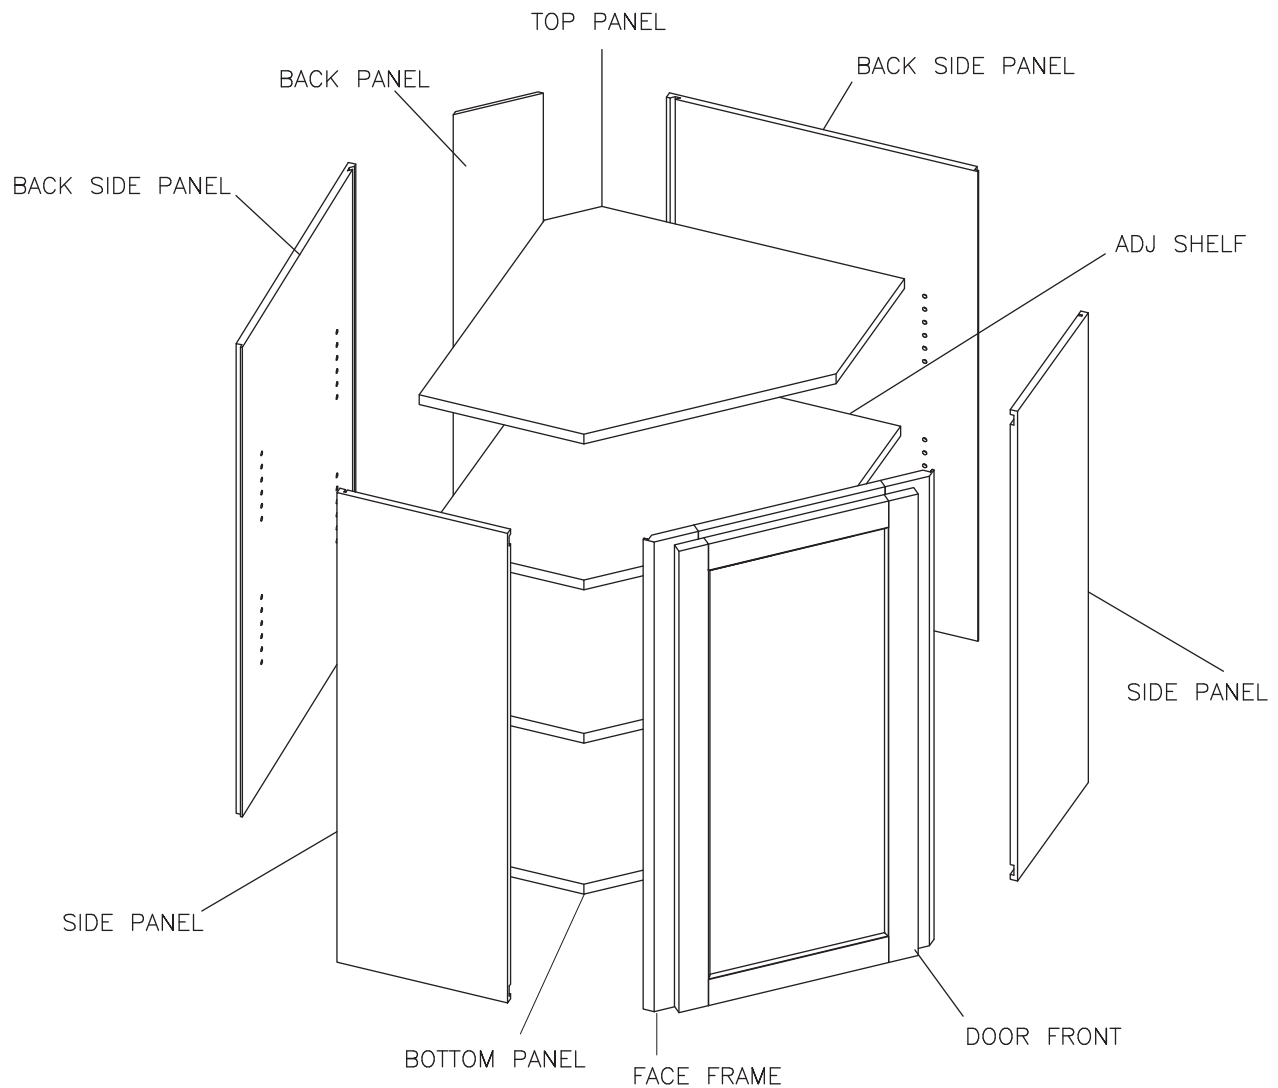


STEP
1

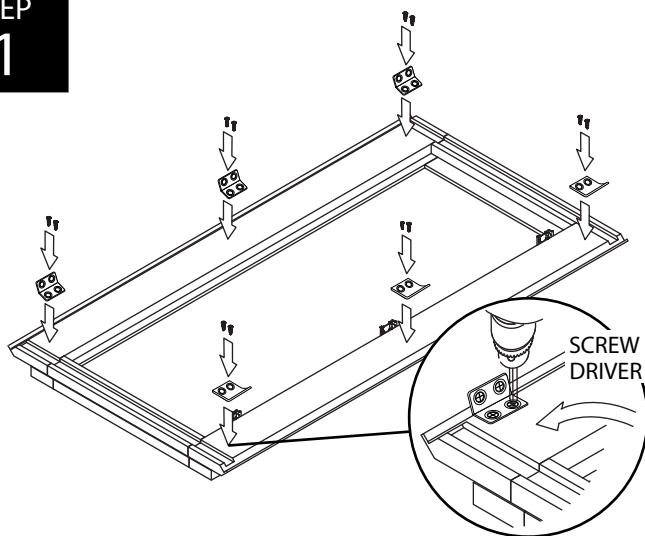


STEP
2

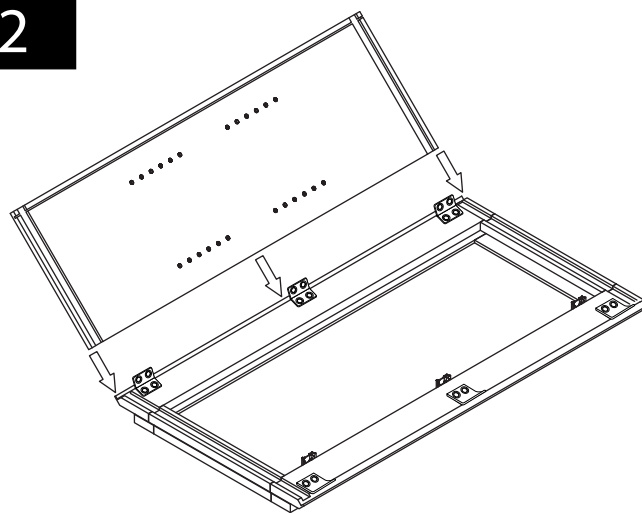


STEP
3

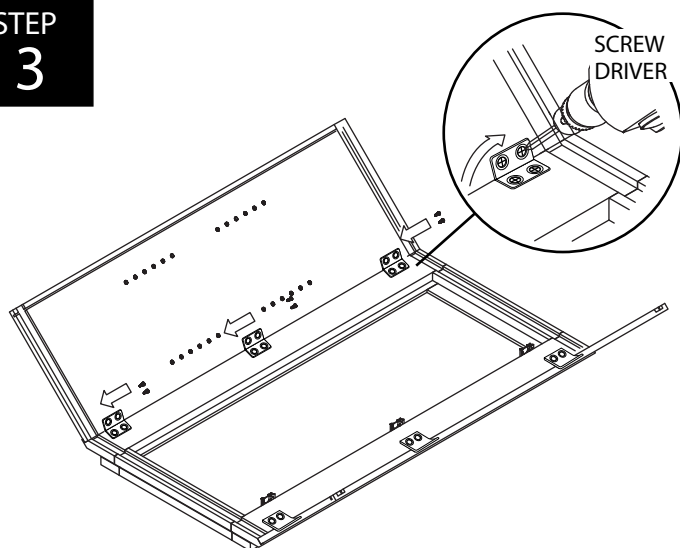


STEP
4

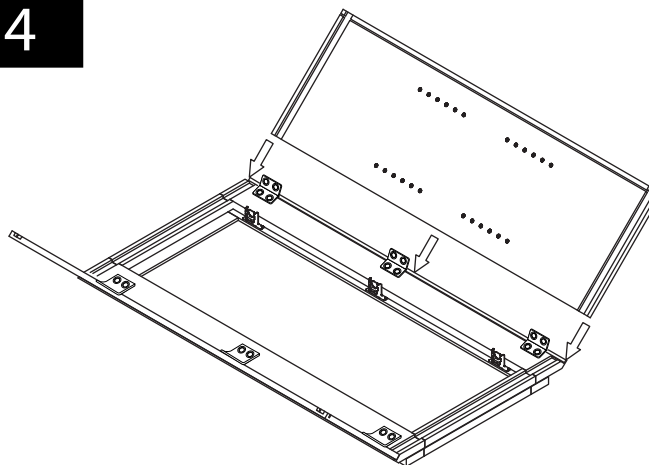


STEP
5

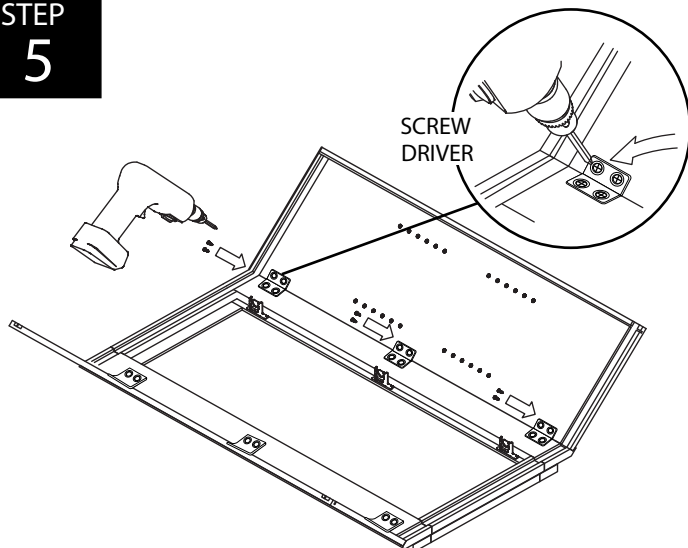


STEP
6

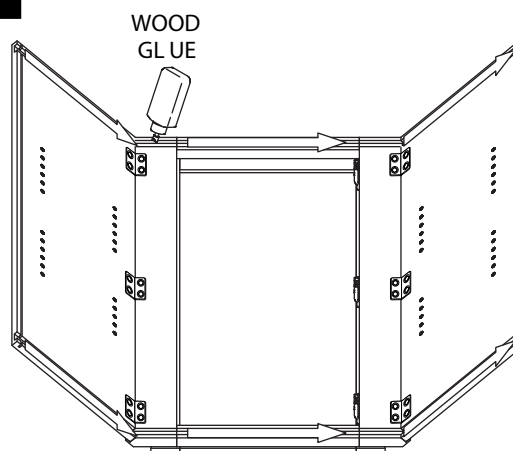


STEP
7

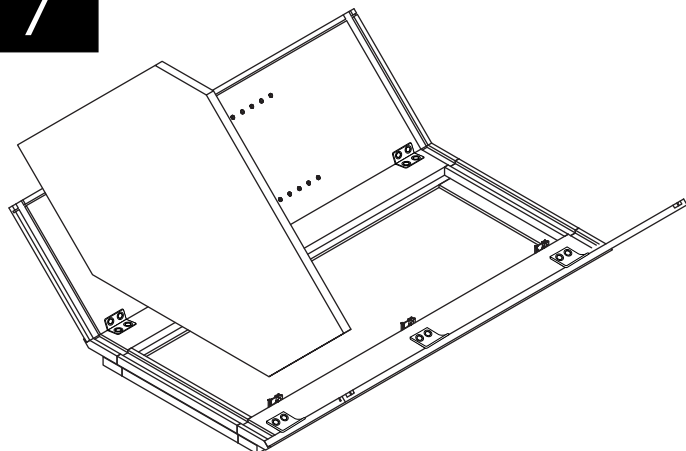


STEP
8

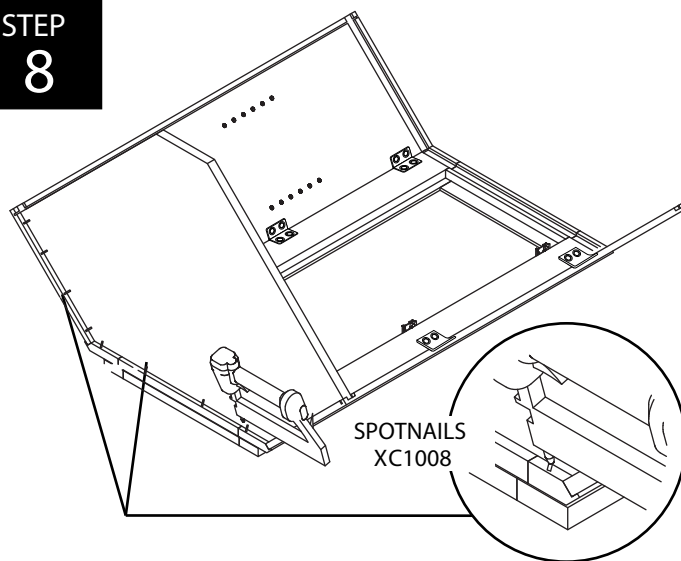


STEP
9

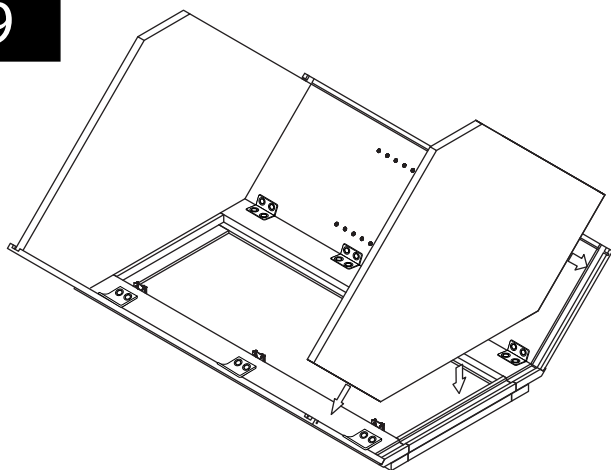


STEP
10

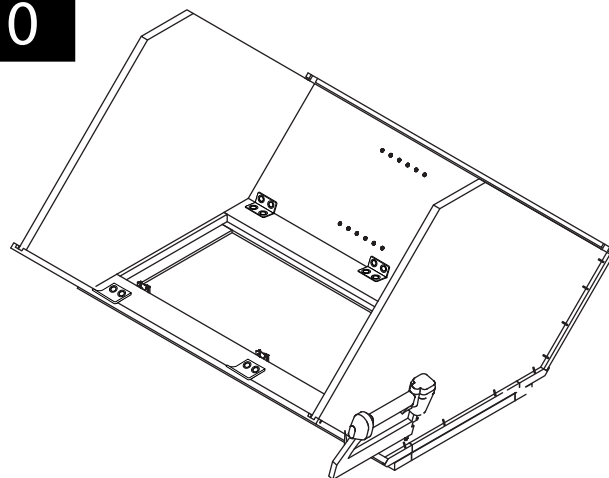


STEP
11

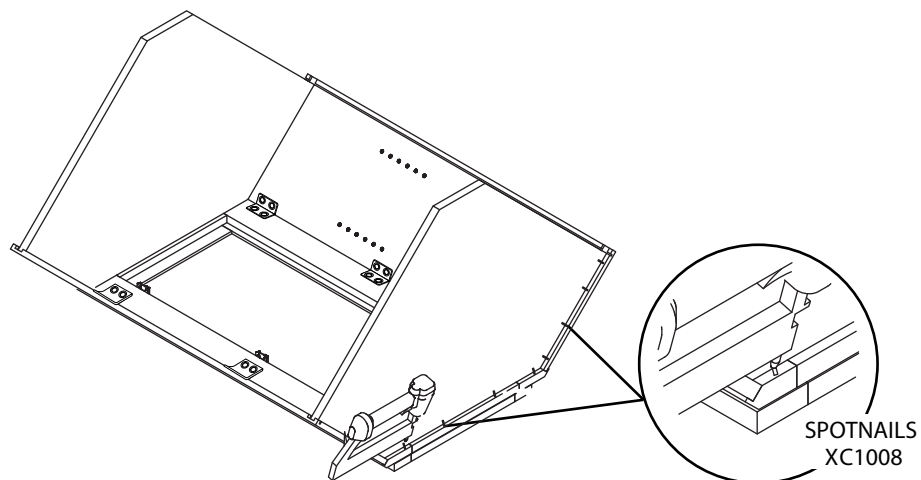


STEP
12

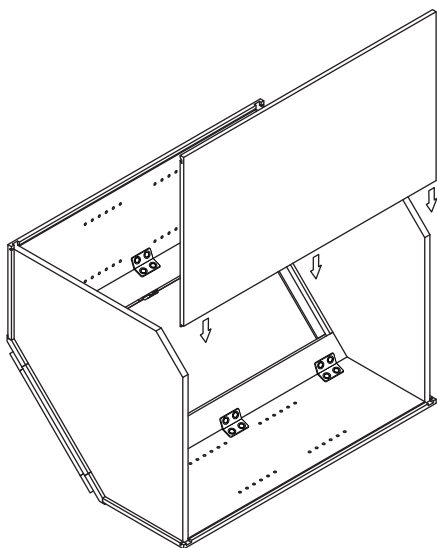


STEP
13

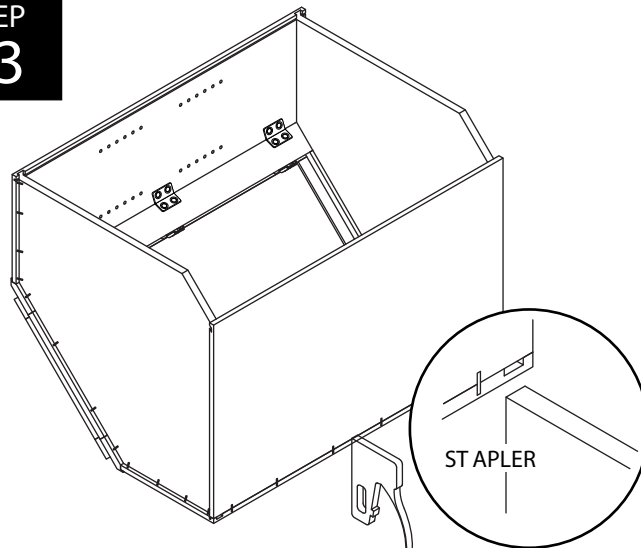


STEP
14

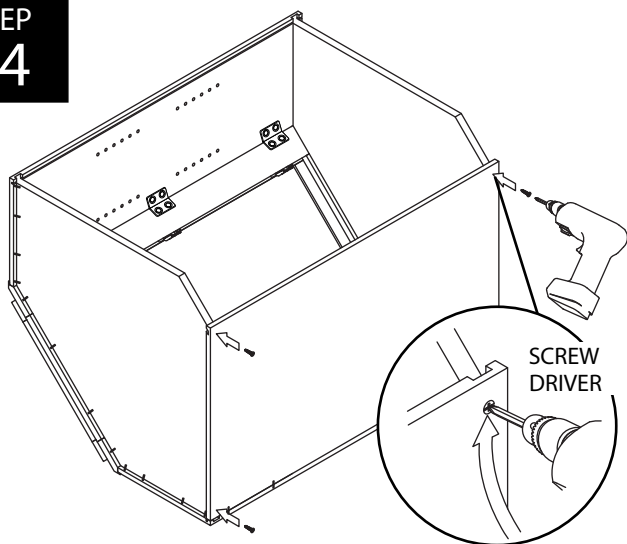


STEP
15

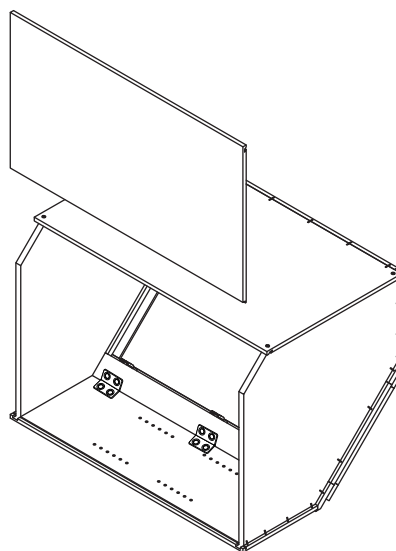


STEP
16

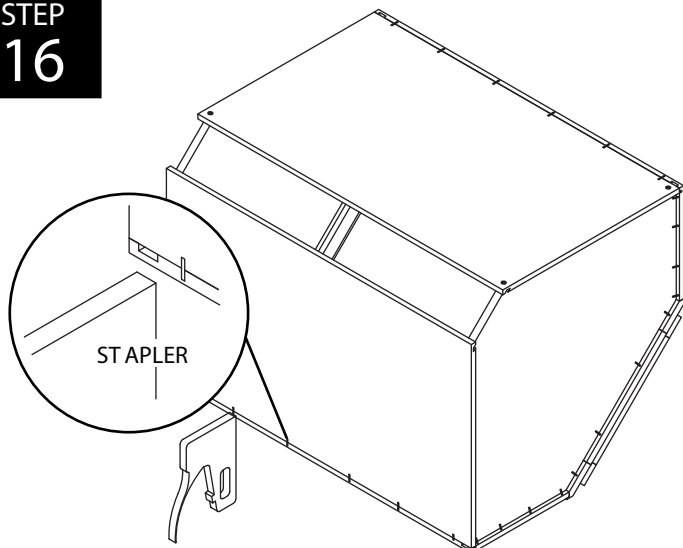


STEP
17

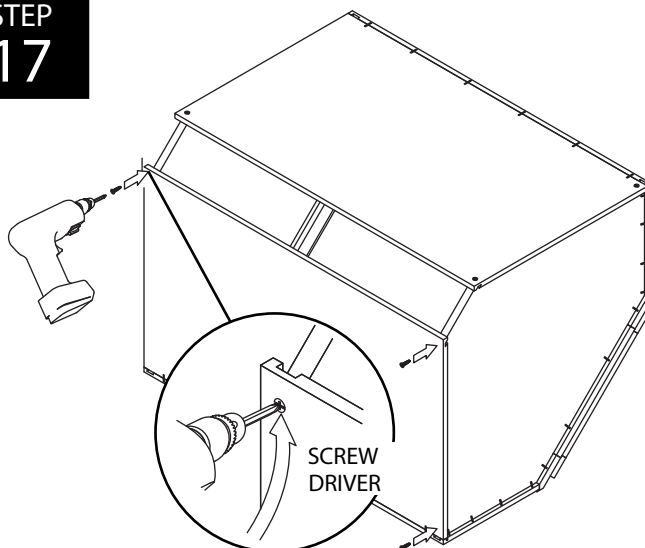


STEP
18

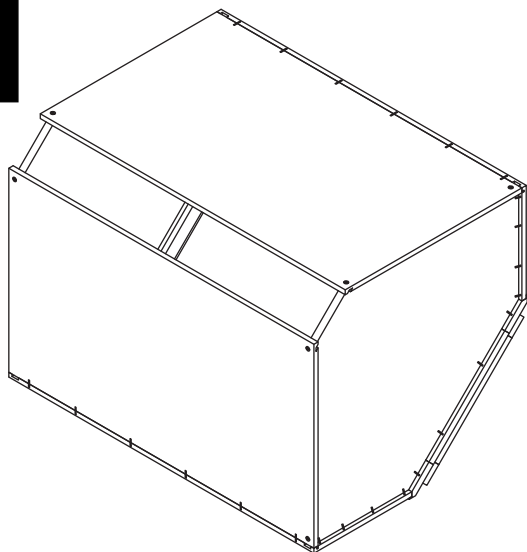


STEP
19

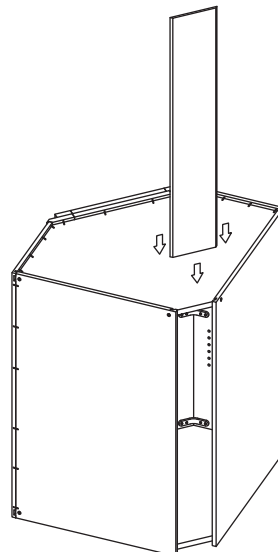


STEP
20

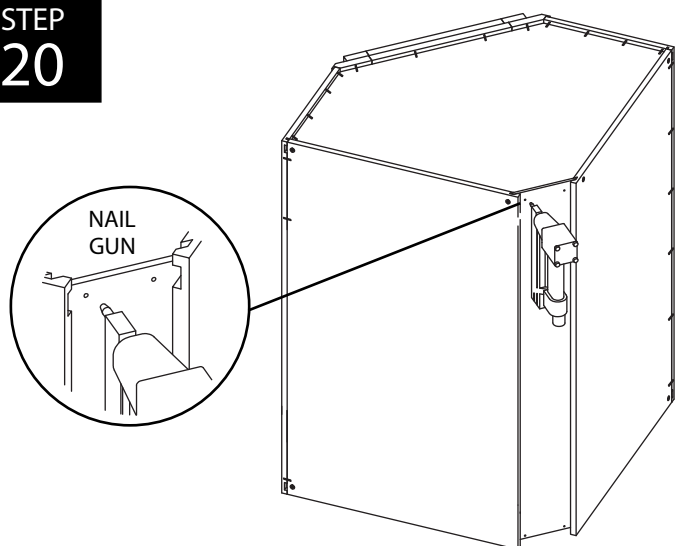

STEP
21

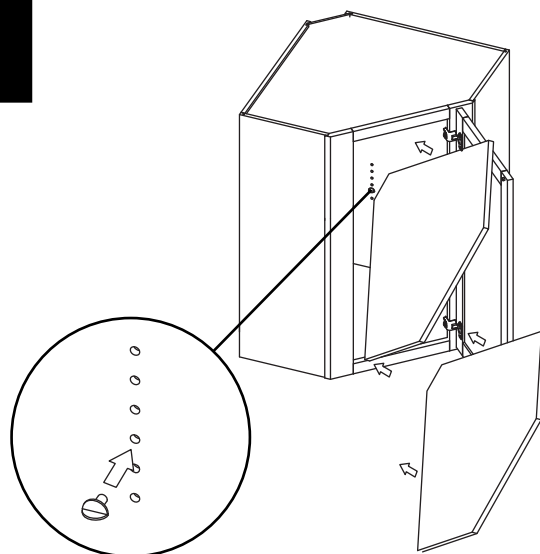


STEP
22

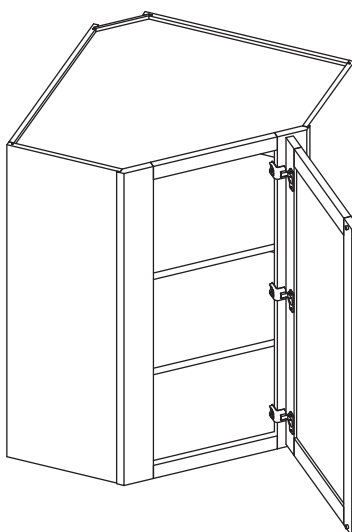


ASSEMBLING INSTRUCTIONS - T

ALL P ANTR Y


P ANTR Y

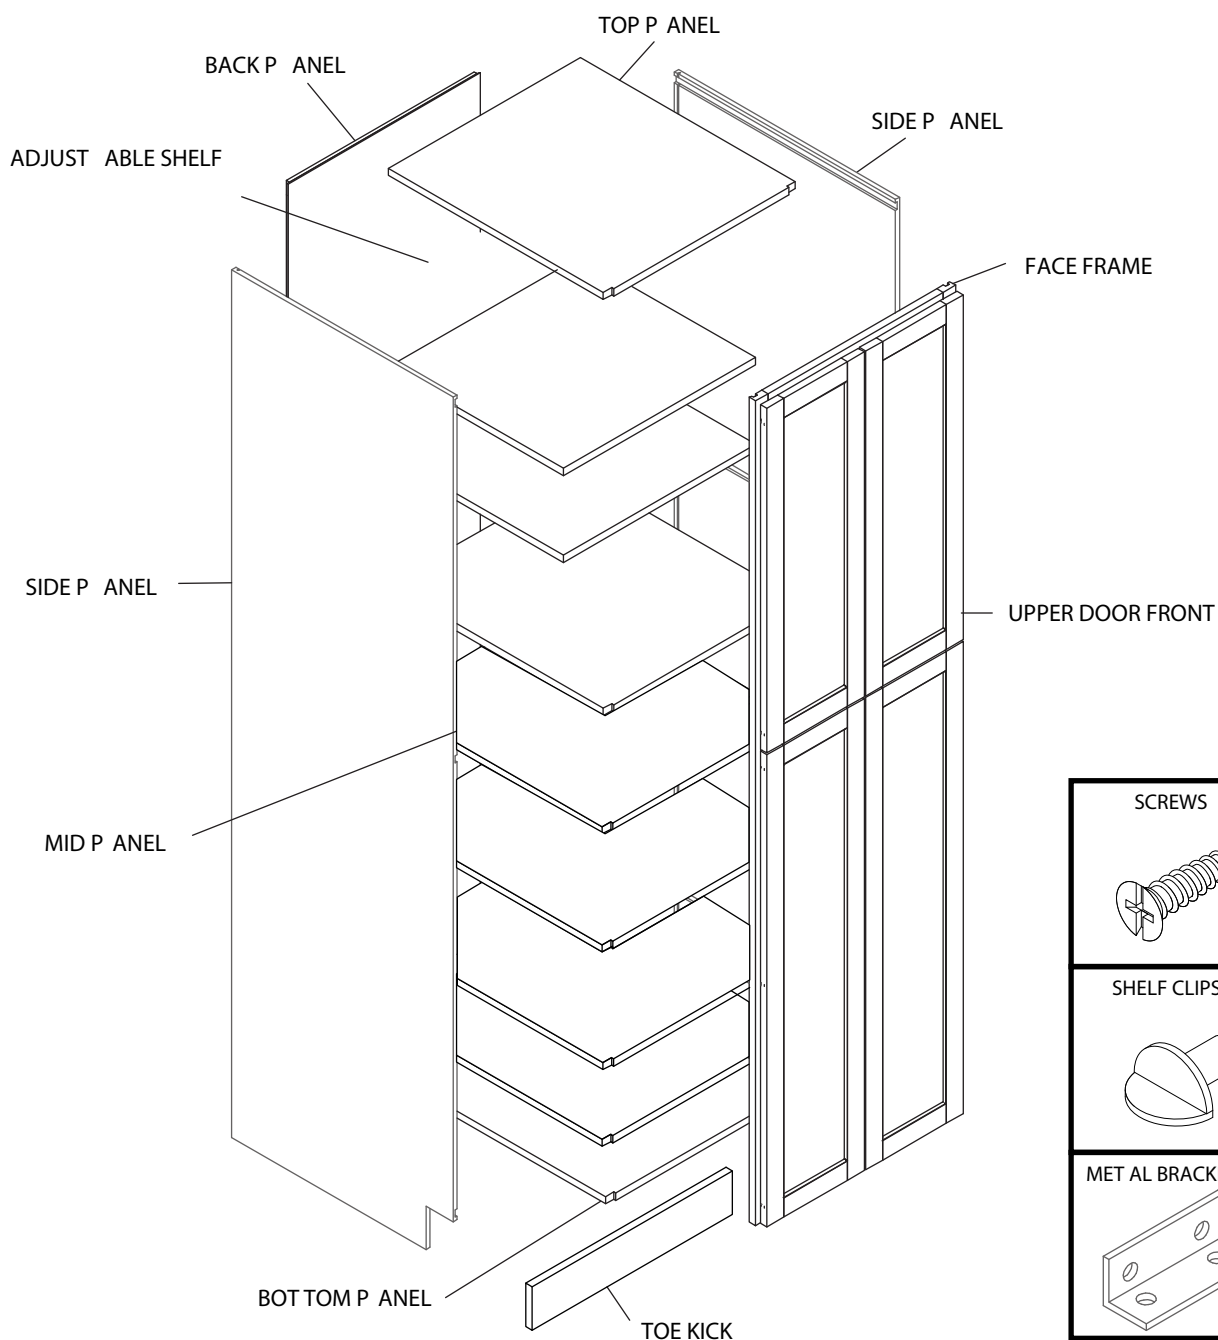

TOOLS



WOOD
GLUE

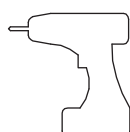


SCREW
DRIVER



RUBBER
MALLET



NAIL
GUN

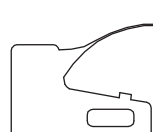


ST APLER




SPOTNAILS
XC1008


STEP
1

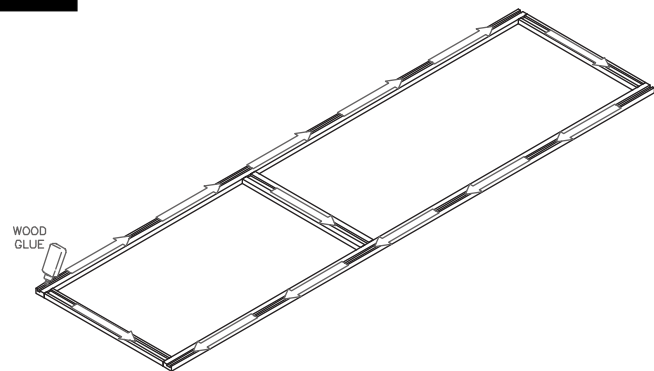


STEP
2

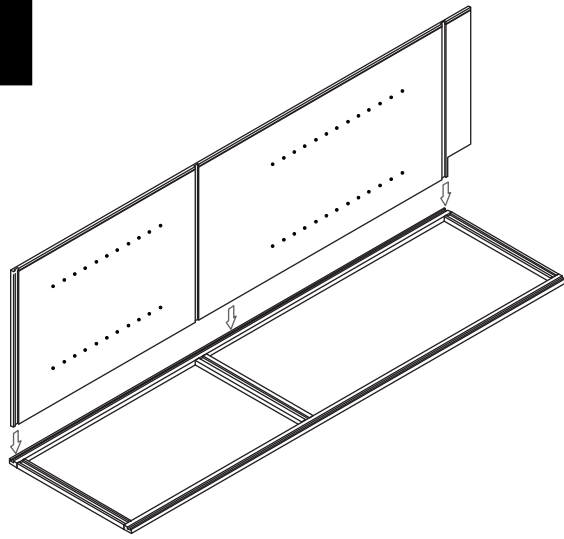


STEP
3

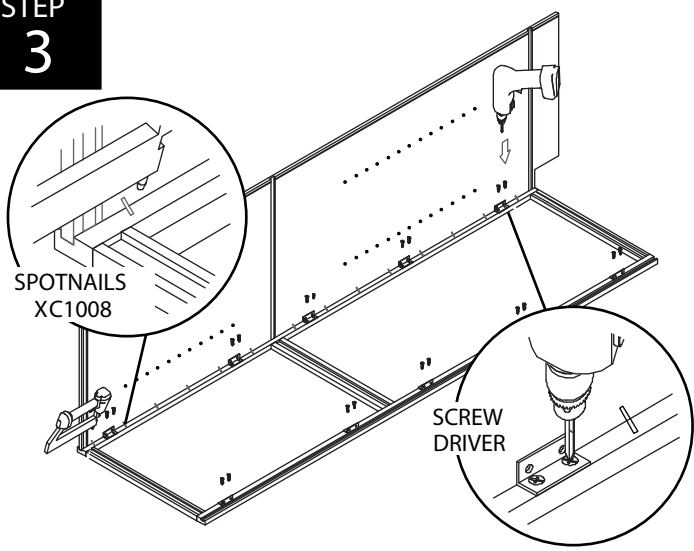


STEP
4

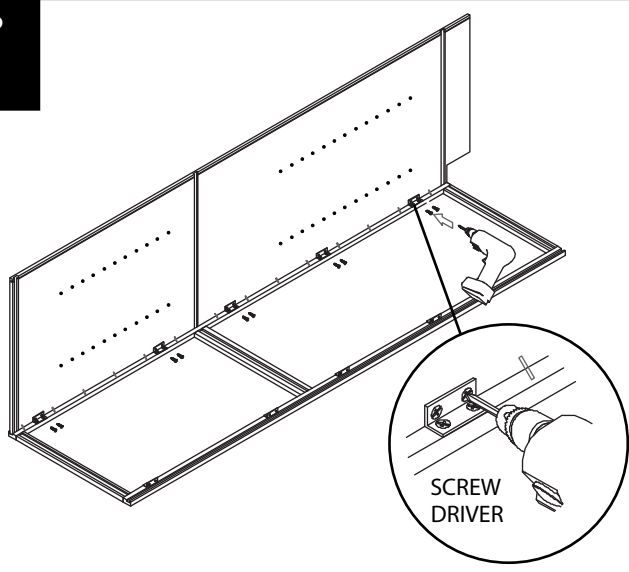


STEP
5

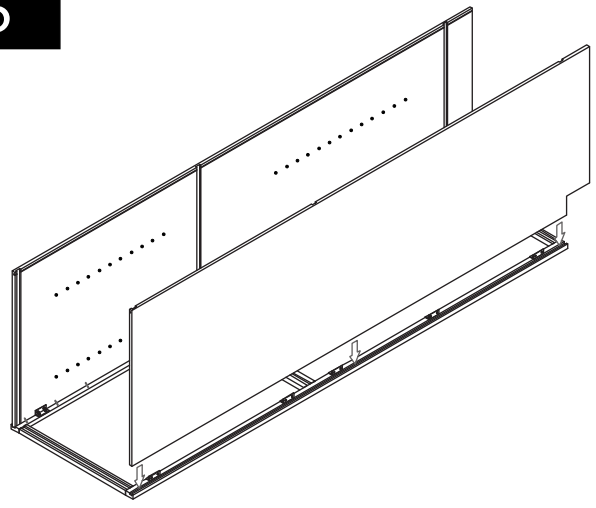


STEP
6

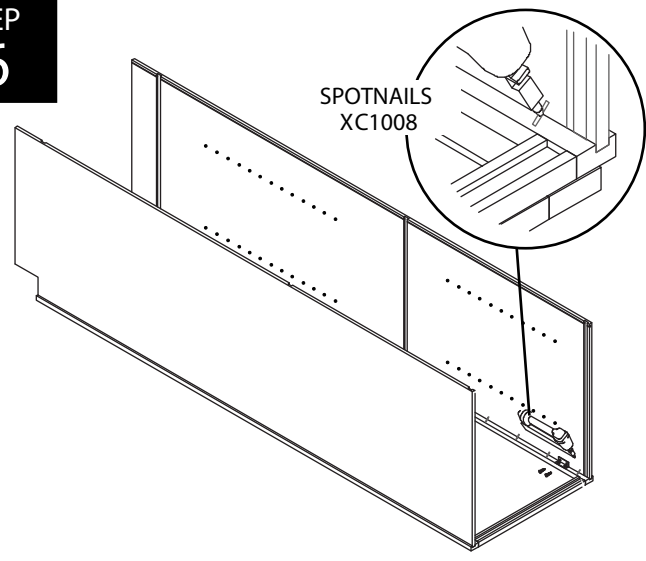


STEP
7

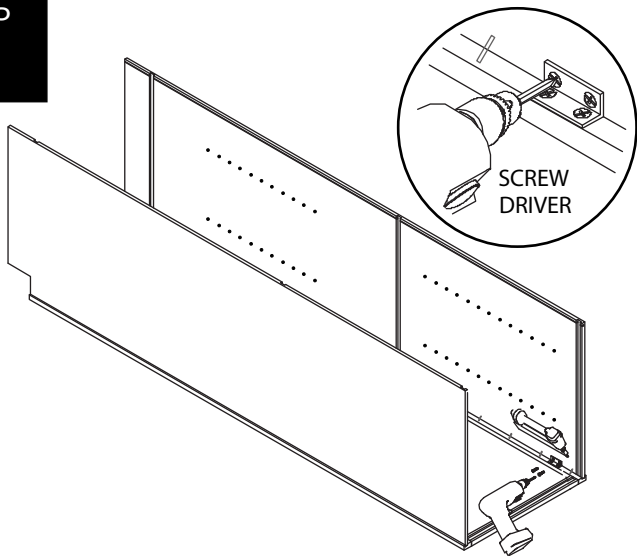


STEP
8

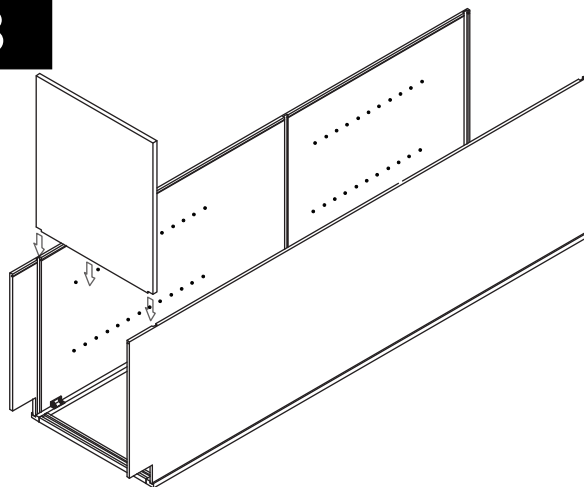


STEP
9

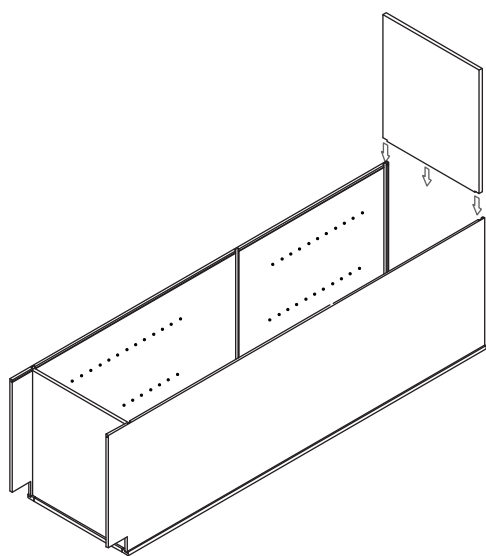


STEP
10

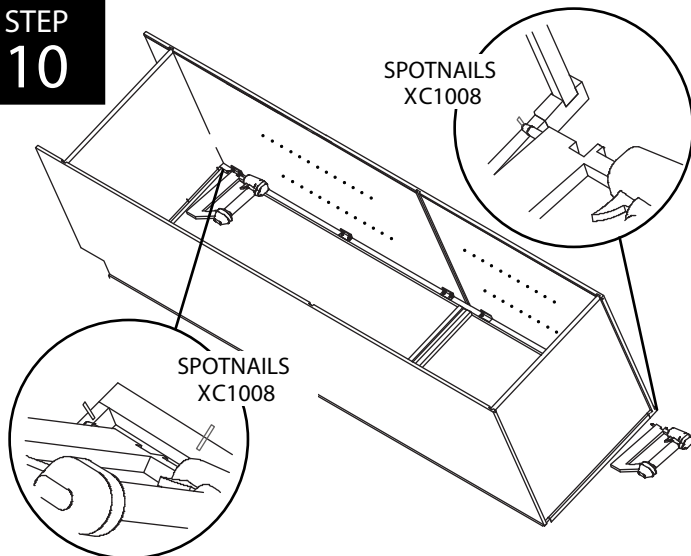


STEP
11

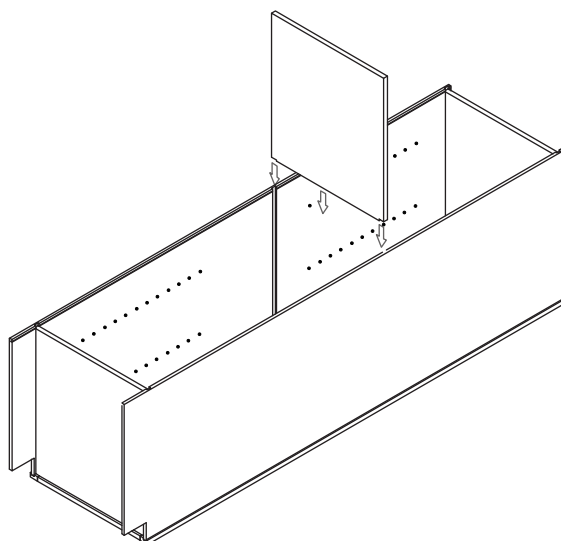


STEP
12

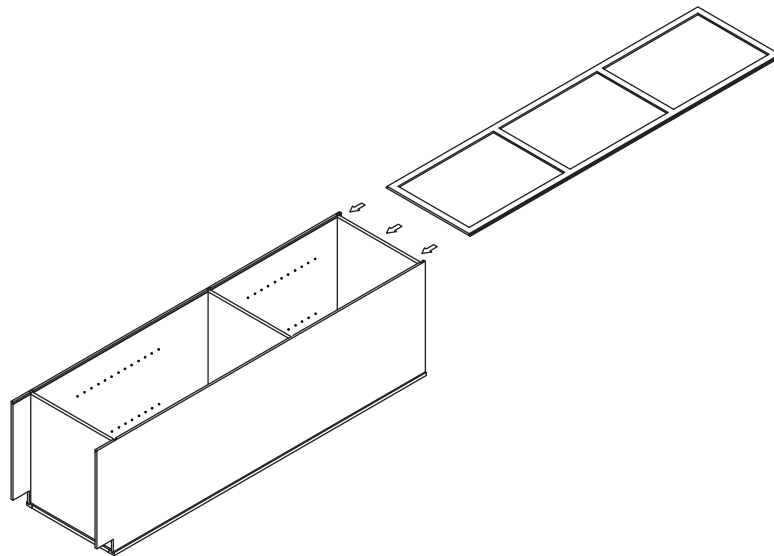


STEP
13

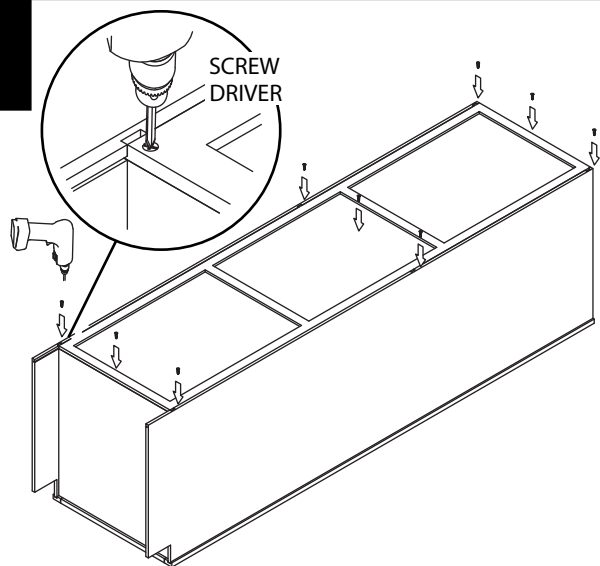


STEP
14

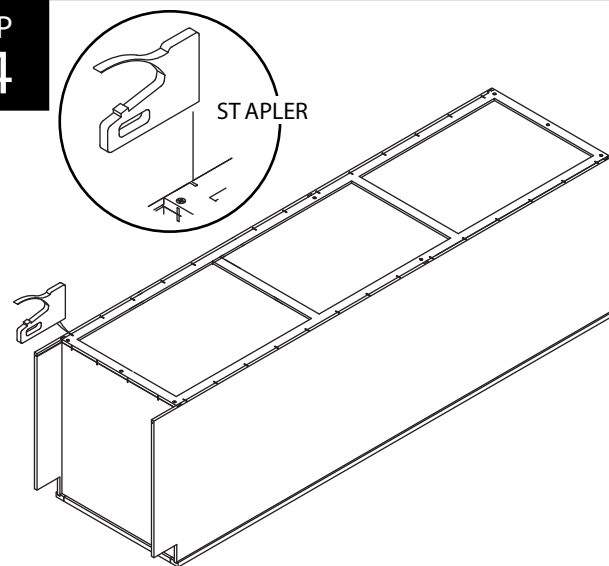


STEP
15

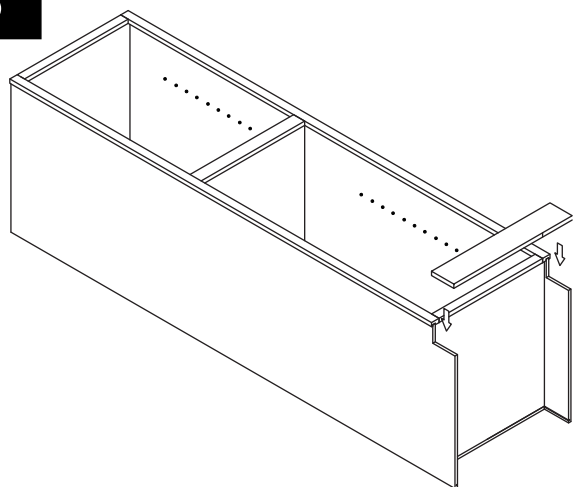


STEP
16

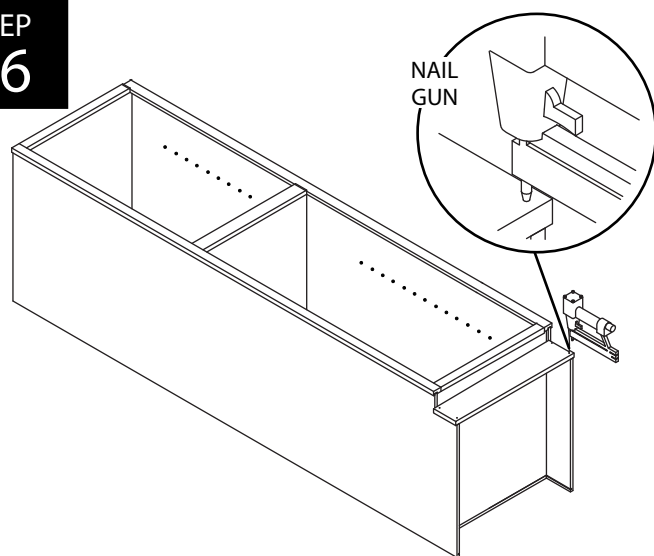

STEP
17

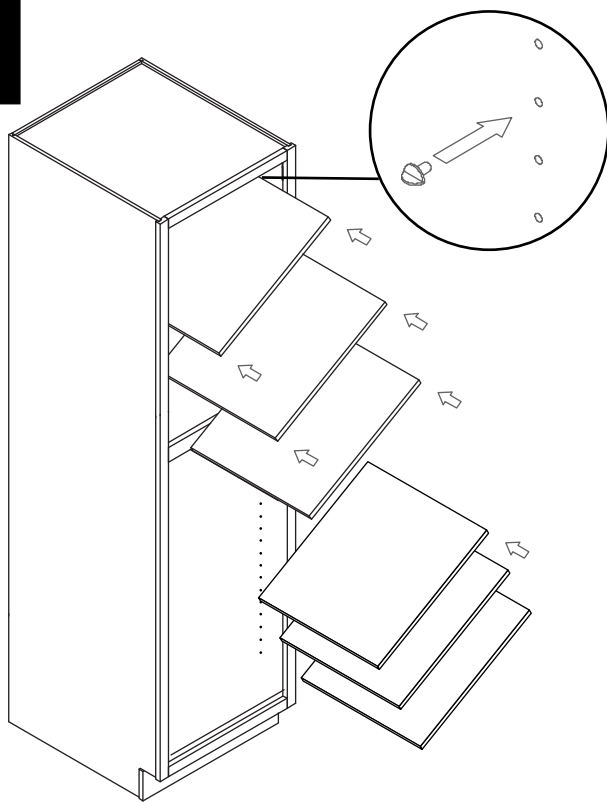


STEP
18

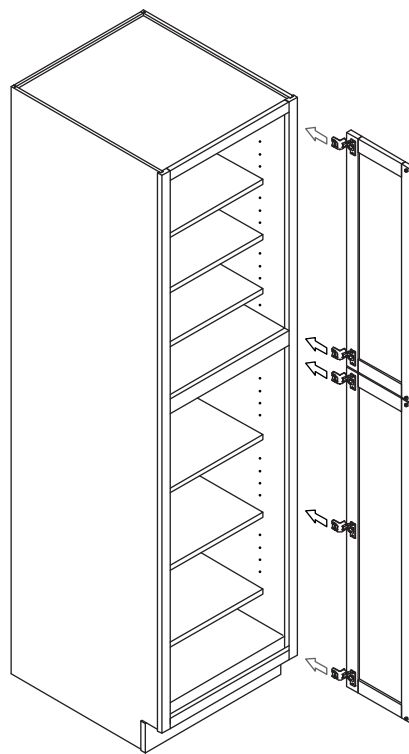


PANTRY


STEP
19

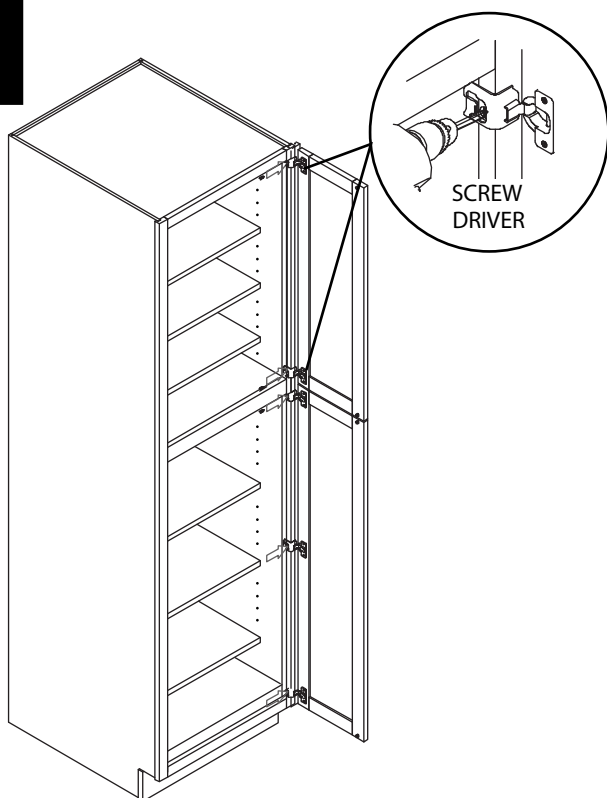


STEP
20

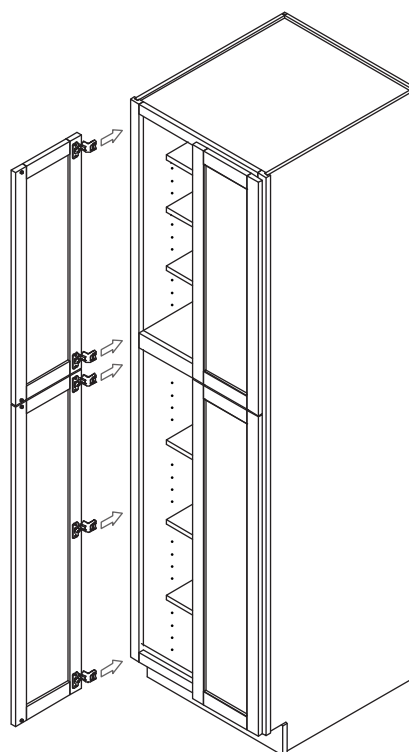

STEP
21

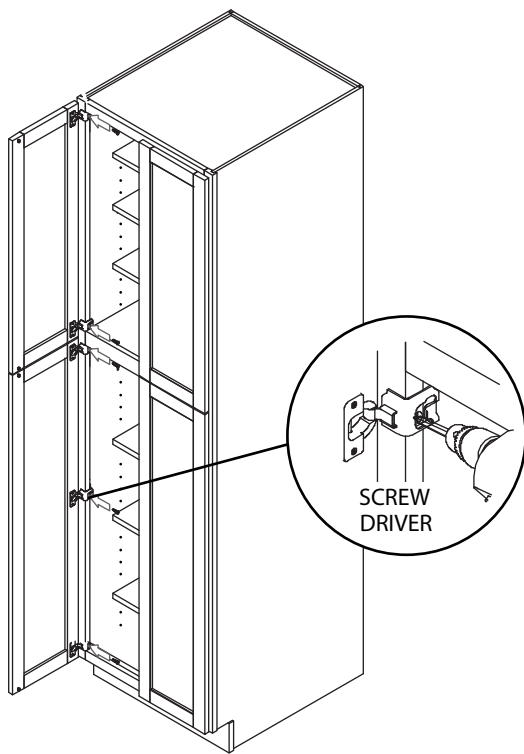

STEP
22



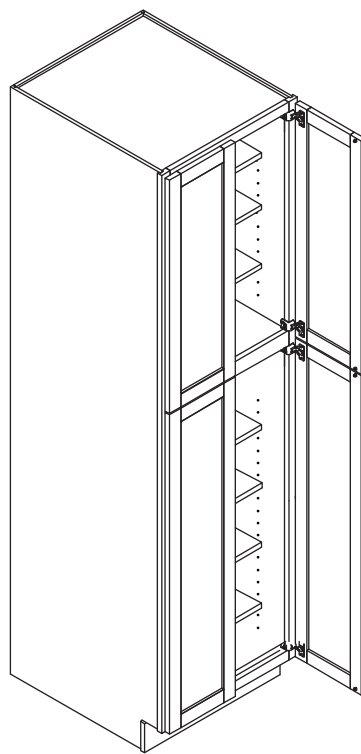








PANTRY






ASSEMBLING INSTRUCTIONS - O





VEN C ABINET









OVENC ABINET


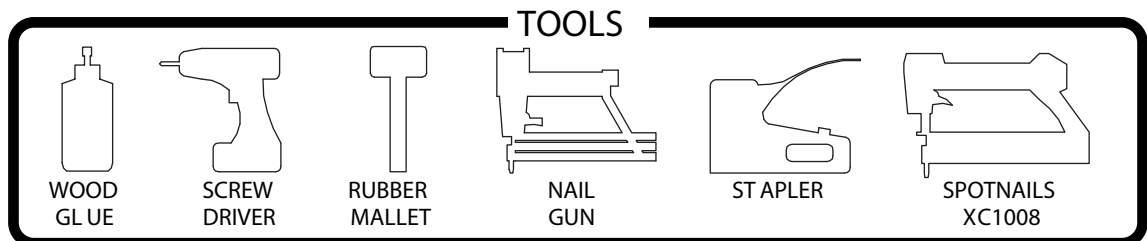
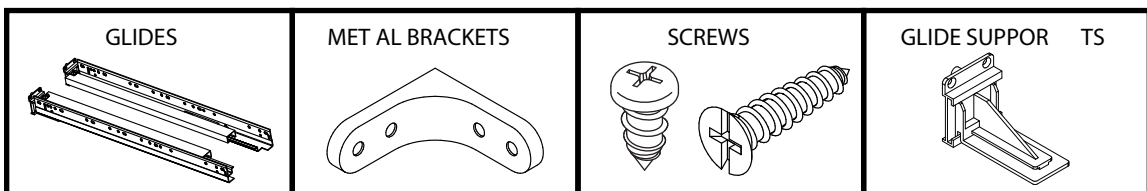
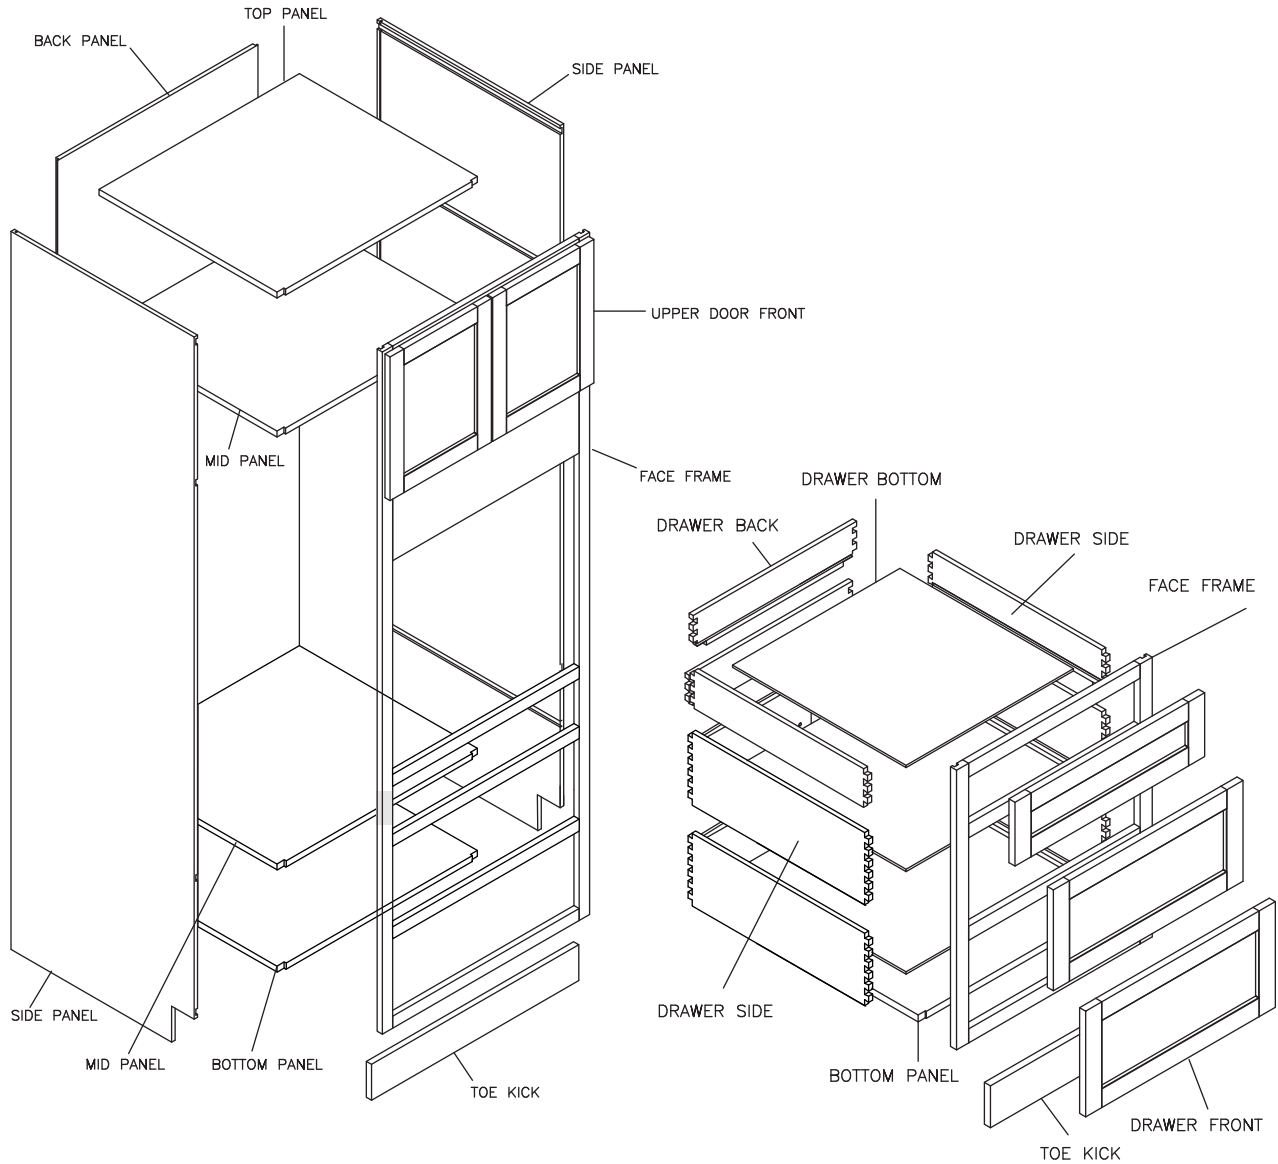


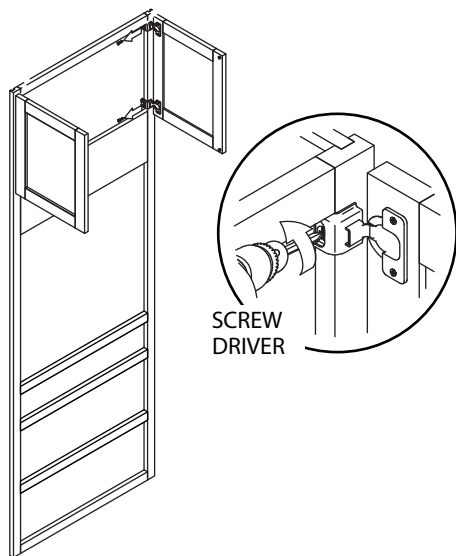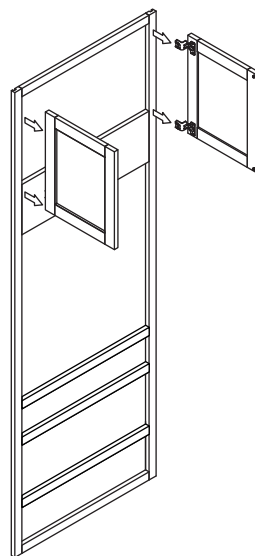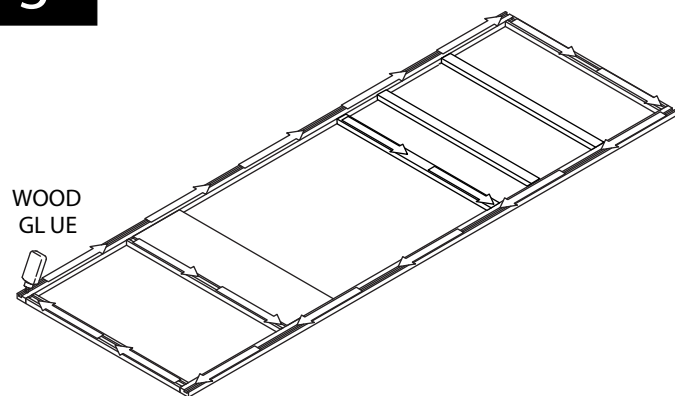
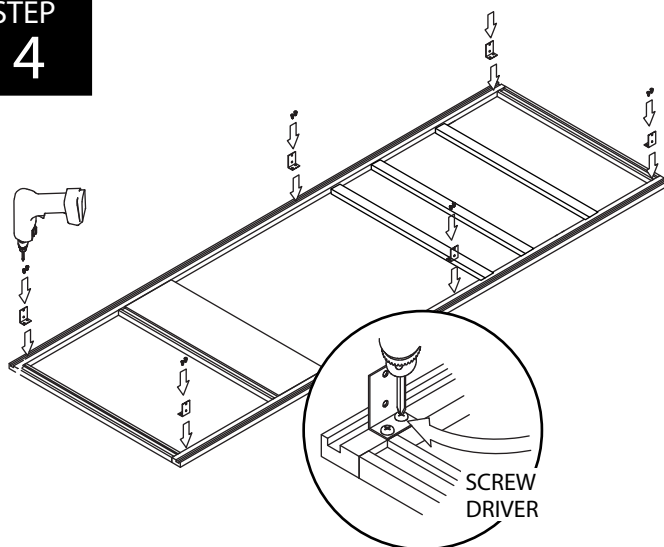
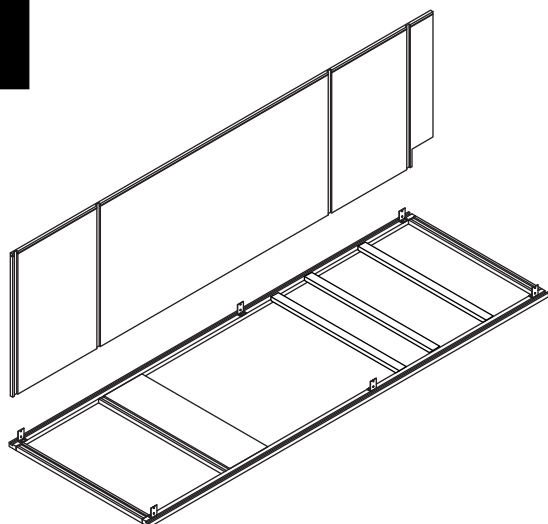
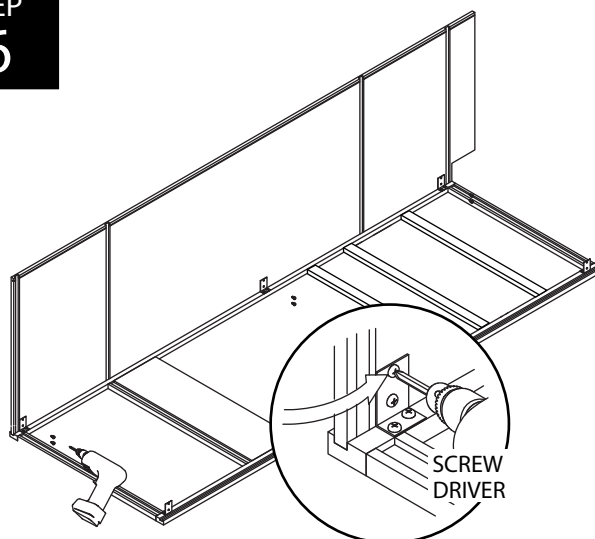
STEP
1STEP
2STEP
3STEP
4STEP
5STEP
6

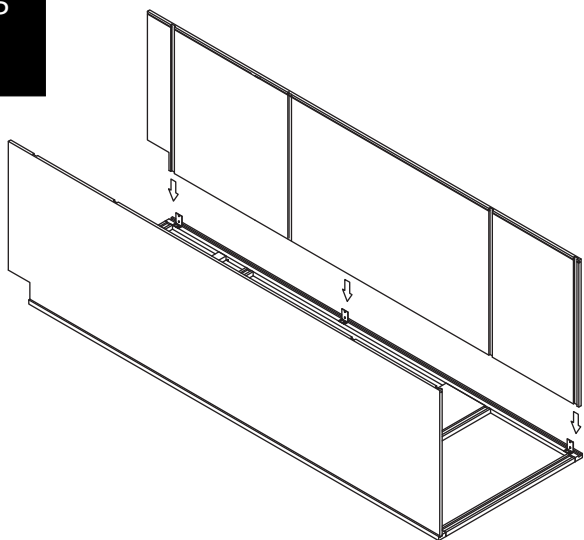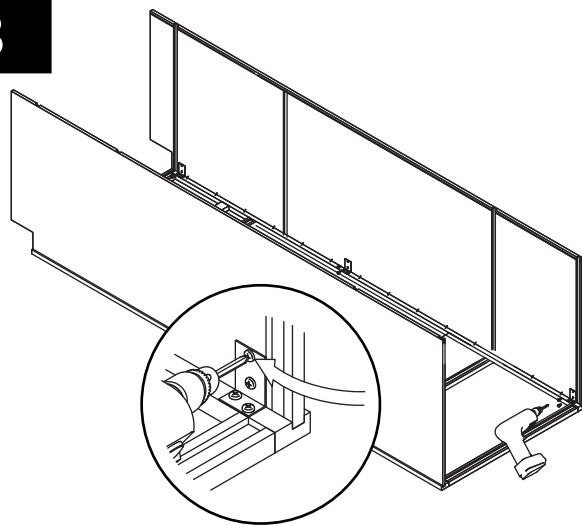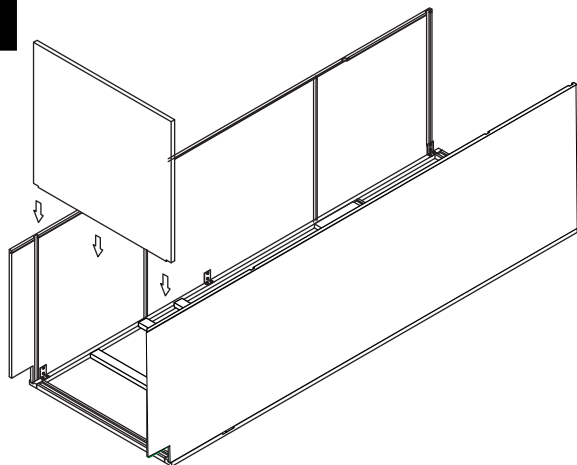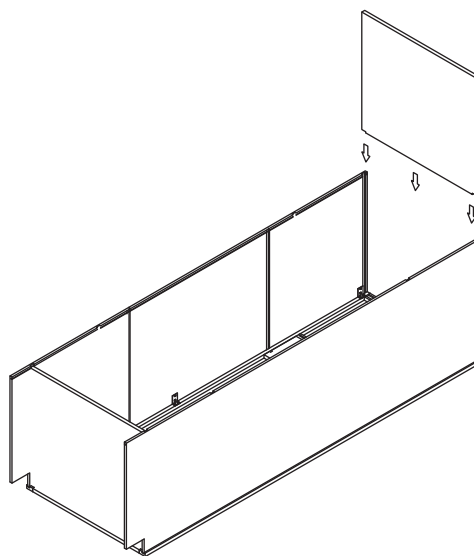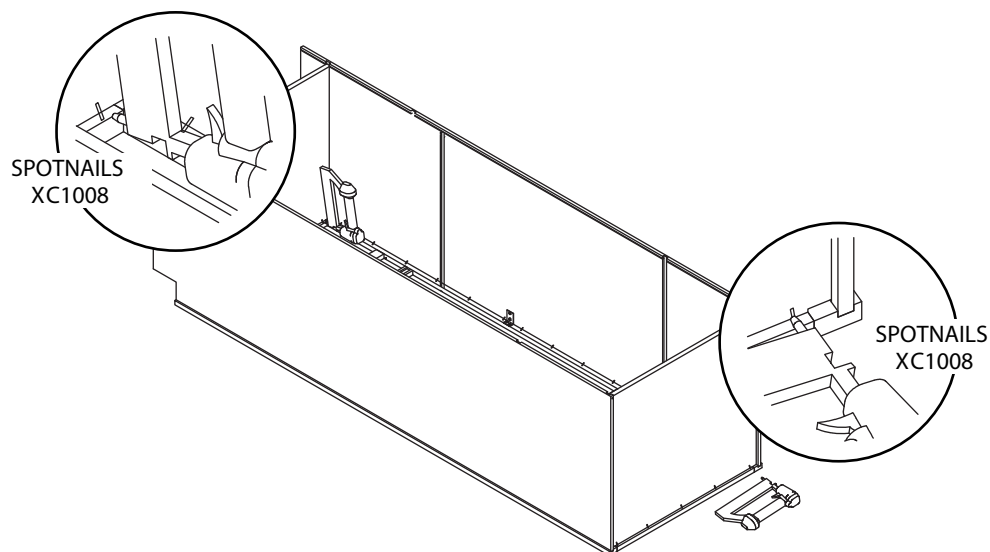STEP
7STEP
8STEP
9STEP
10STEP
11

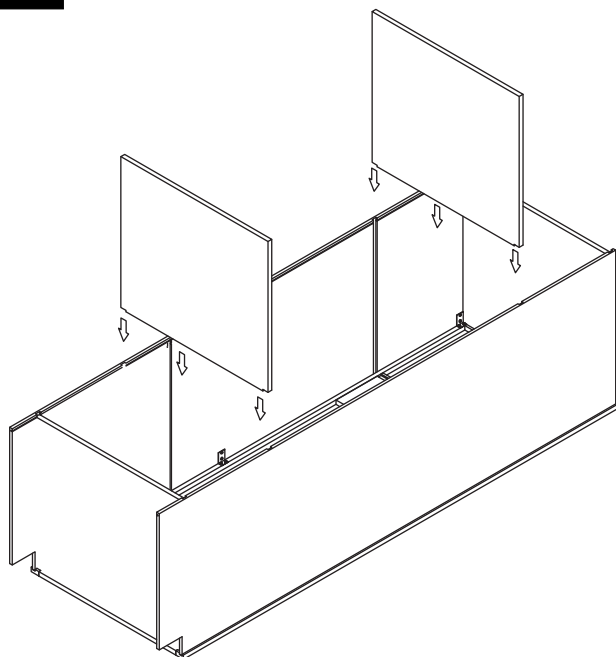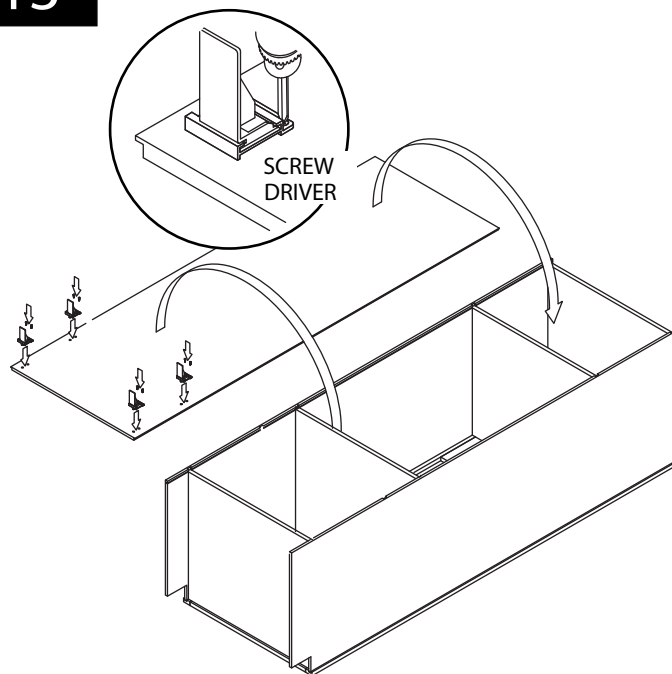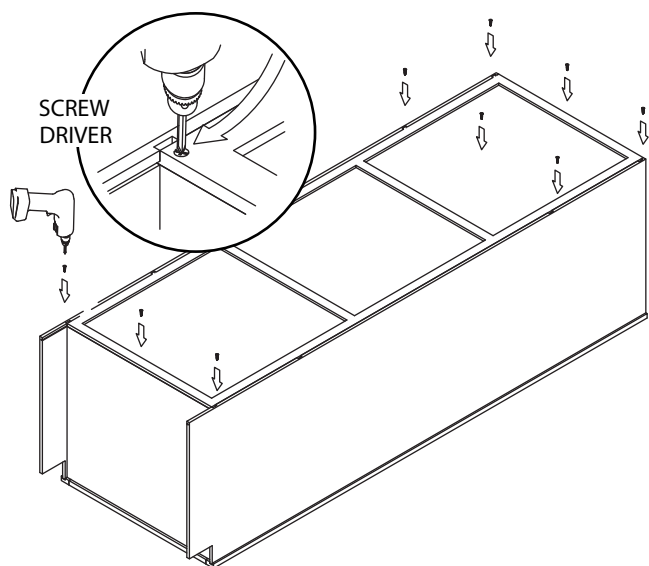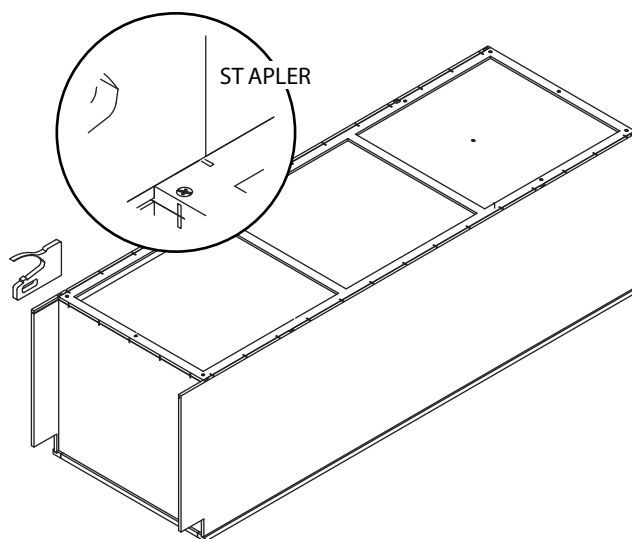**STEP
12****STEP
13****STEP
14****STEP
15**

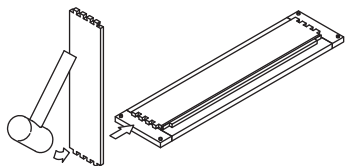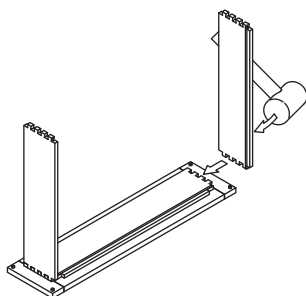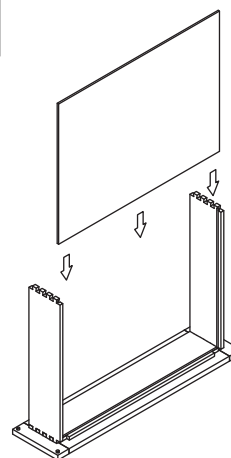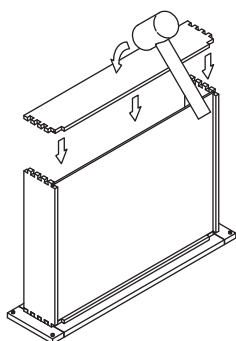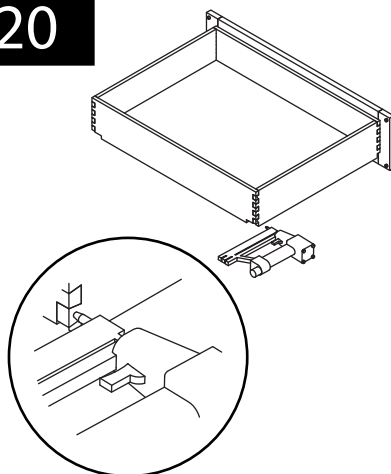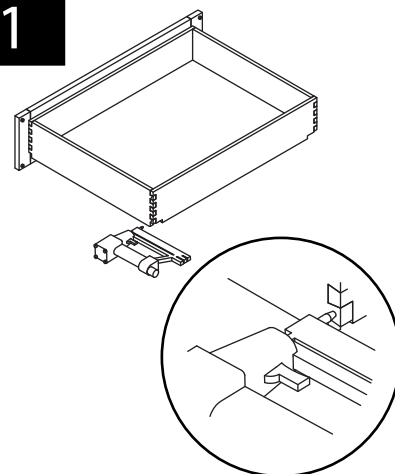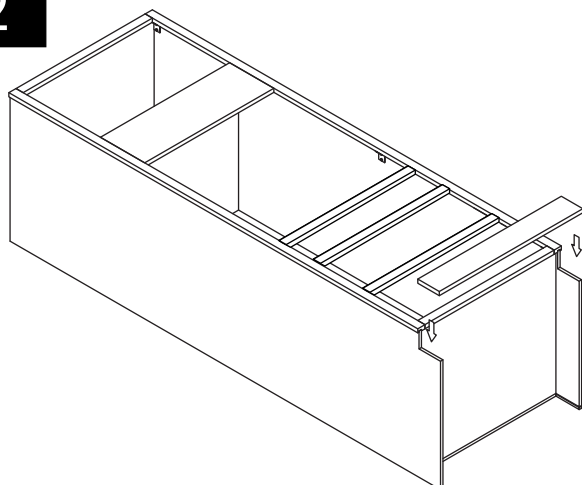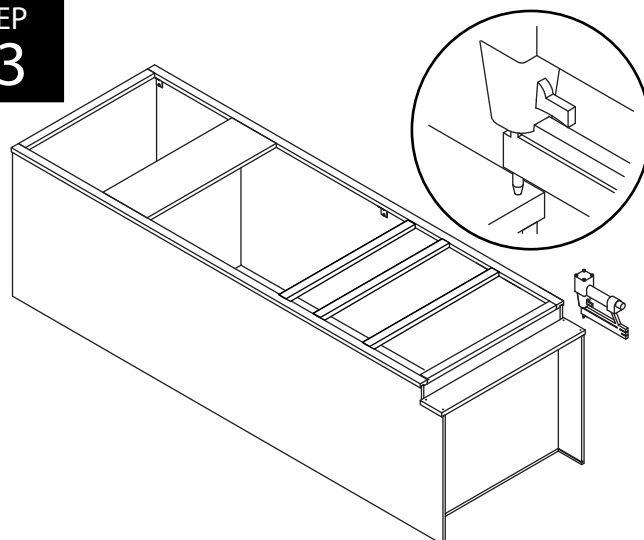STEP
16STEP
17STEP
18STEP
19STEP
20STEP
21STEP
22STEP
23

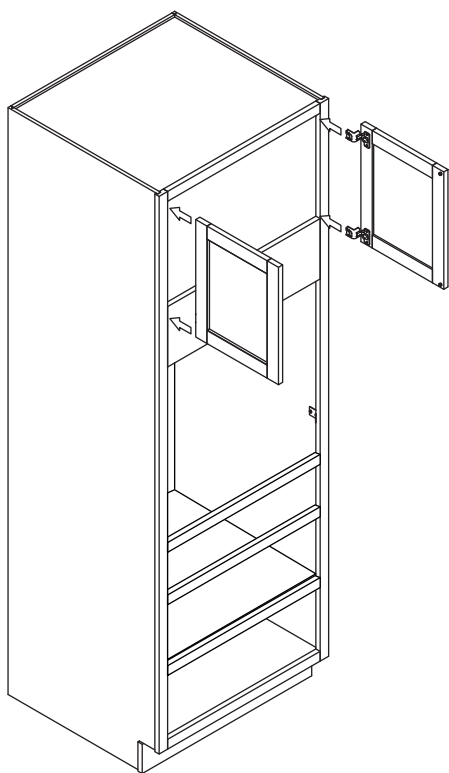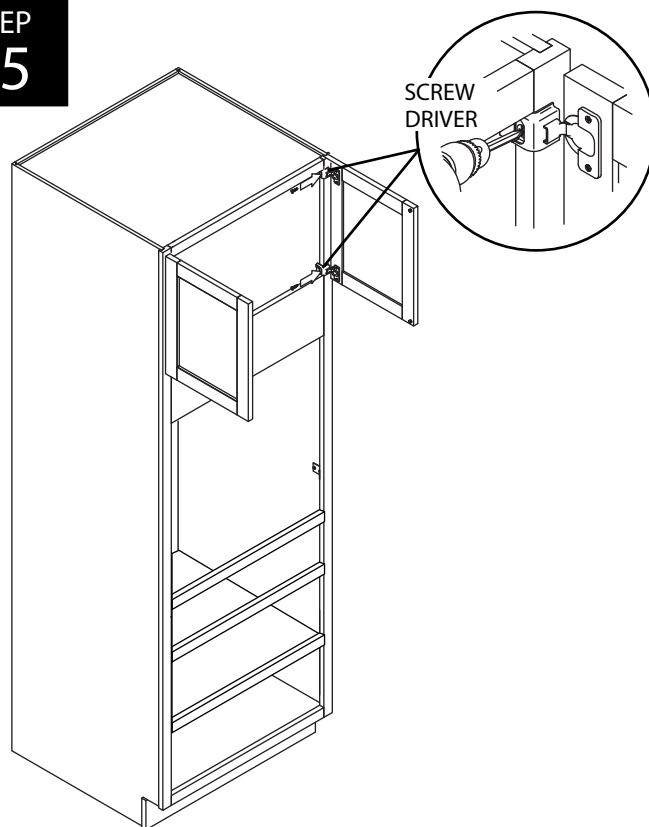
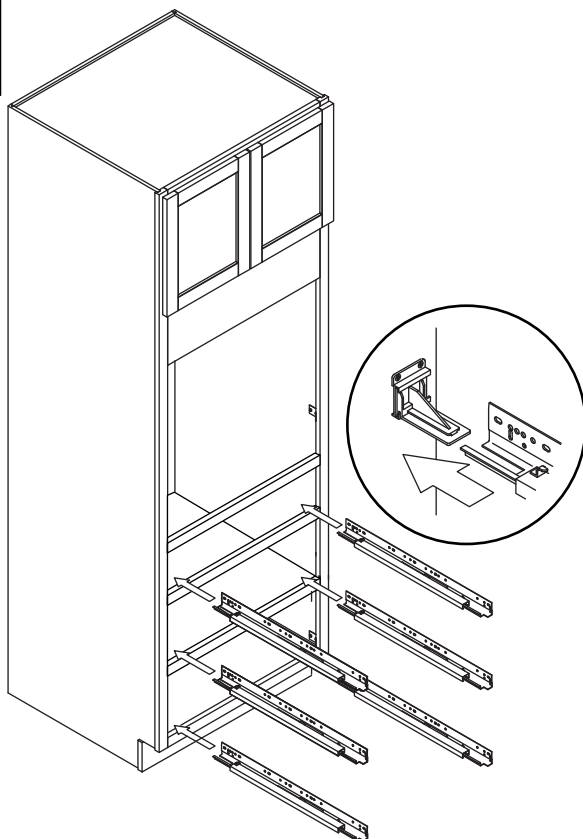
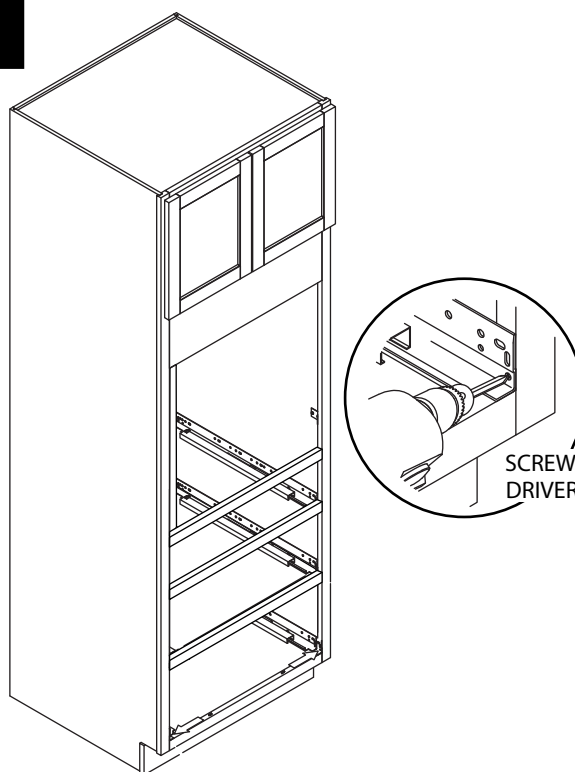
STEP
24STEP
25STEP
26STEP
27

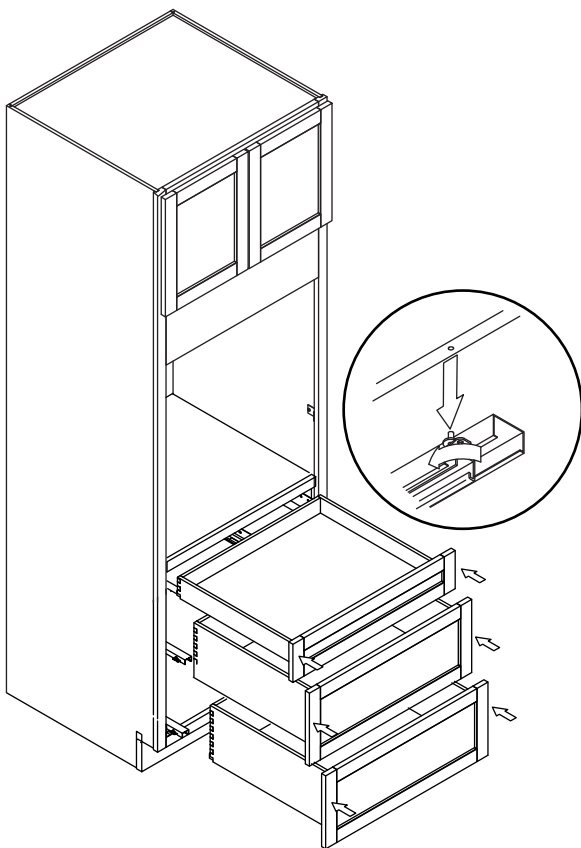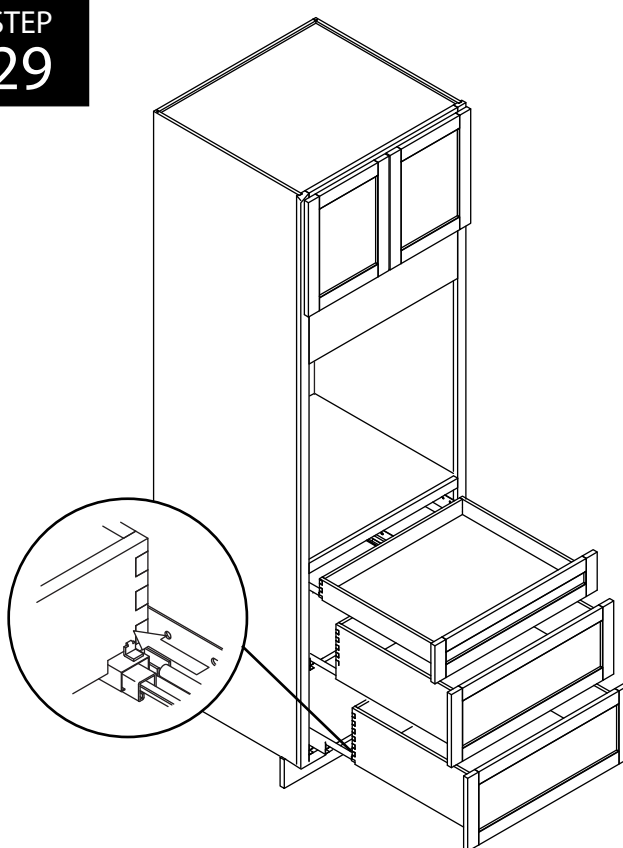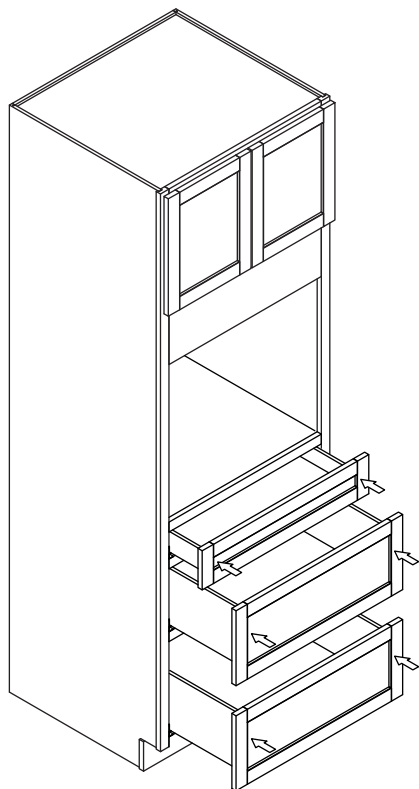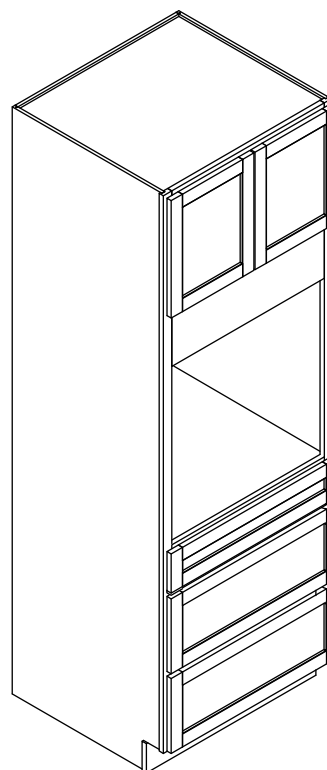STEP
28STEP
29STEP
30STEP
31


ASSEMBLING INSTRUCTIONS - V

ANITY C ABINET


VANITY C ABINET

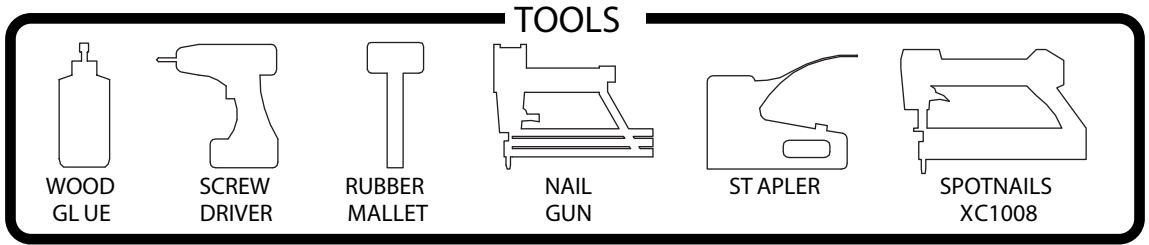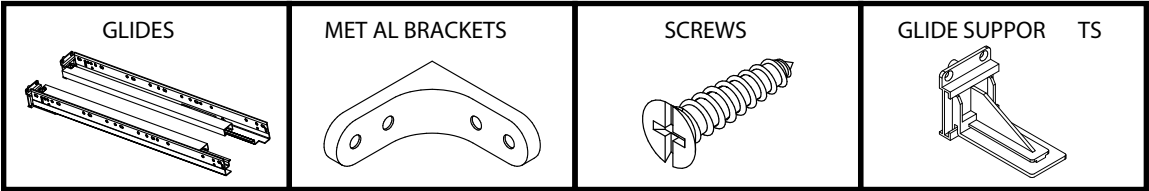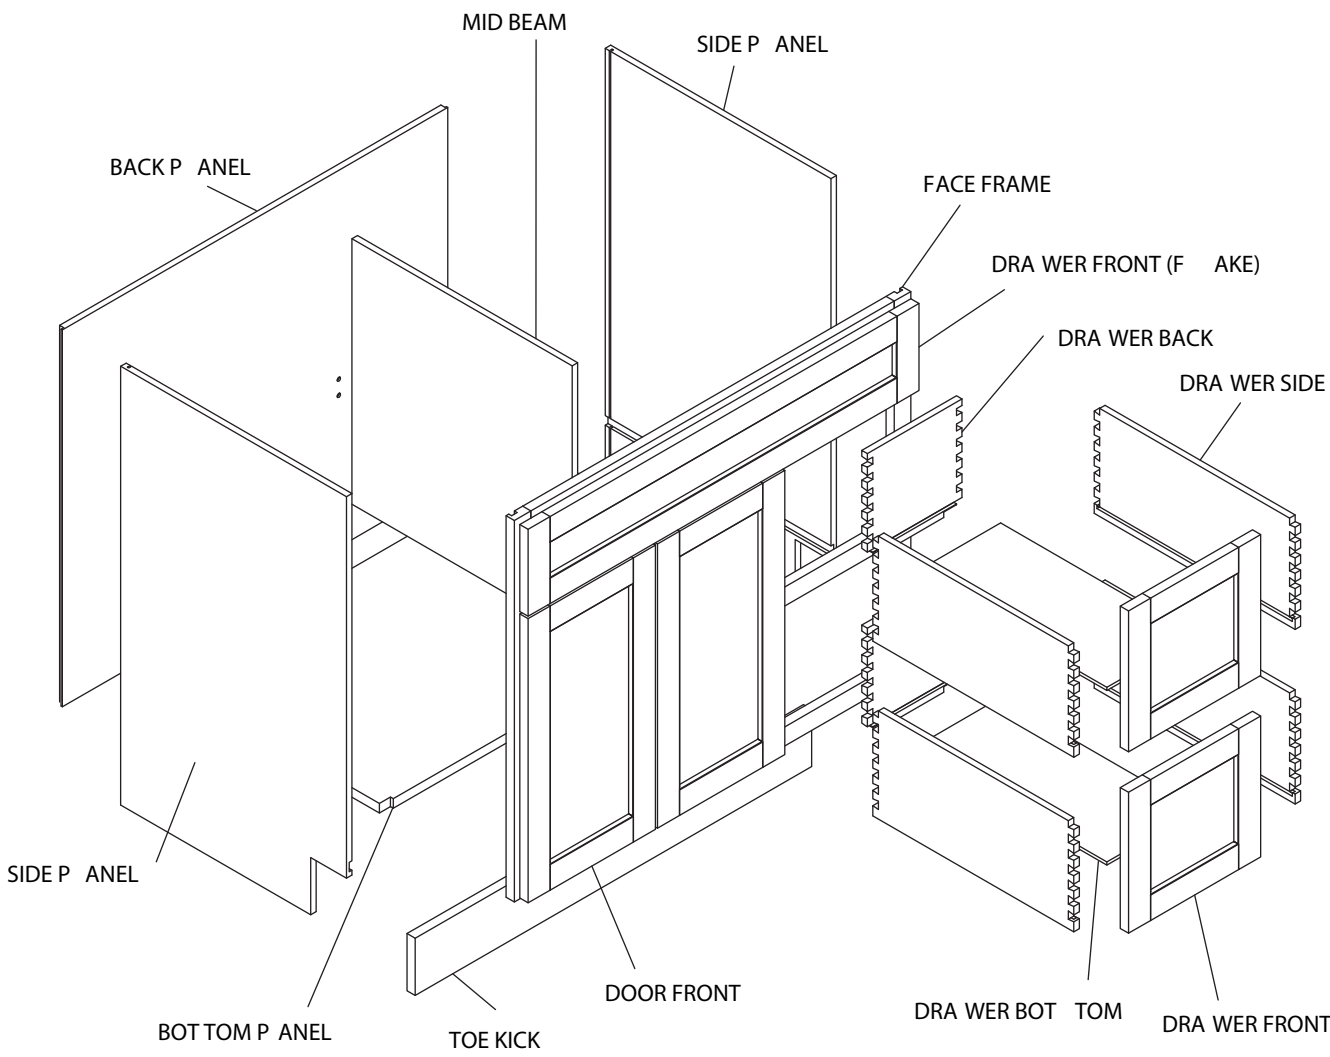


STEP
1

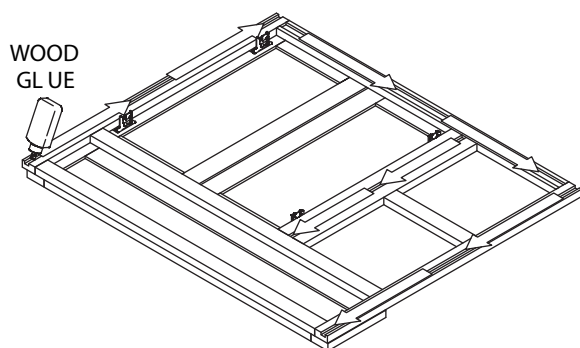


STEP
2

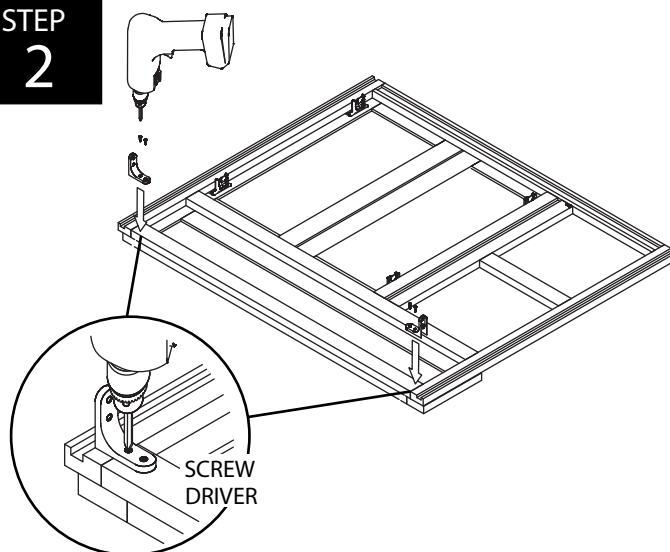


STEP
3

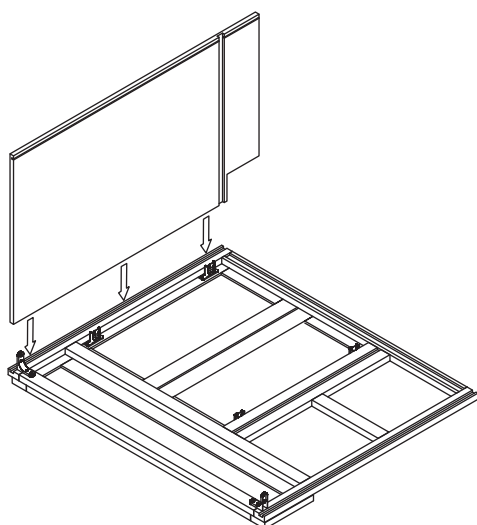


STEP
4

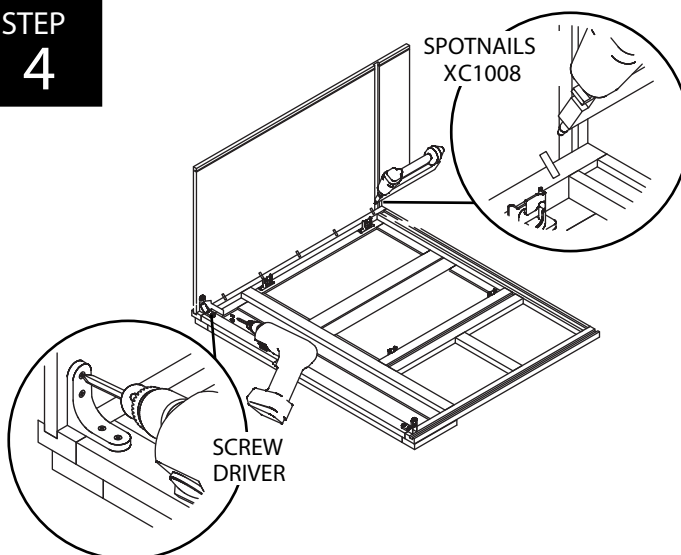


STEP
5

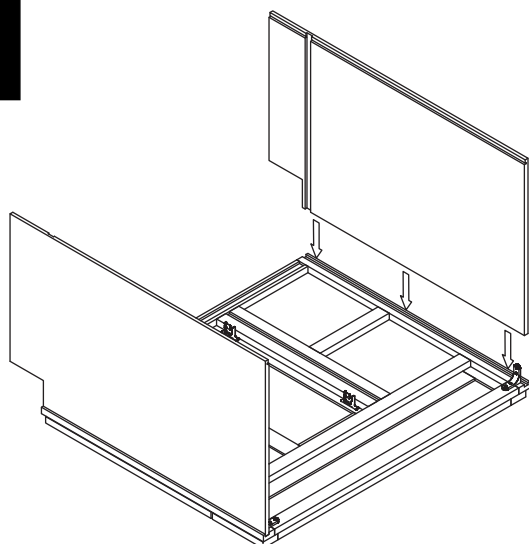


STEP
6

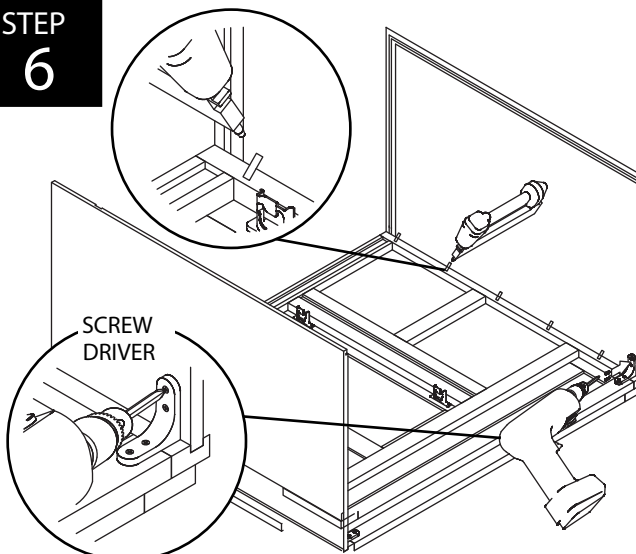


STEP
7

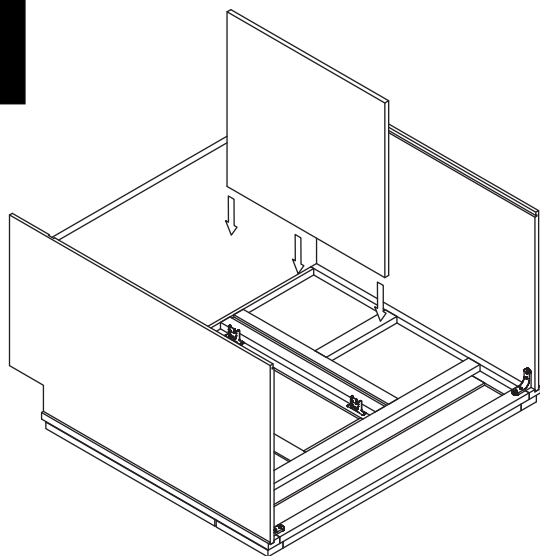


STEP
8

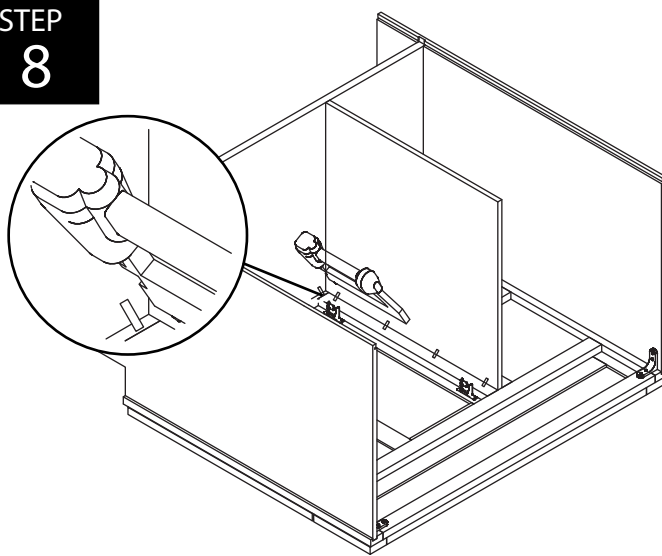


STEP
9

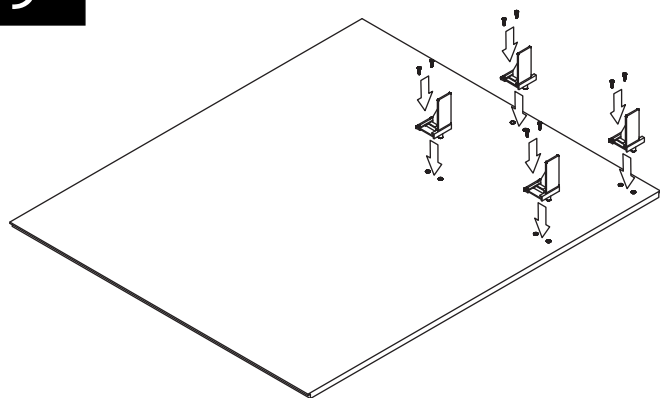


STEP
10

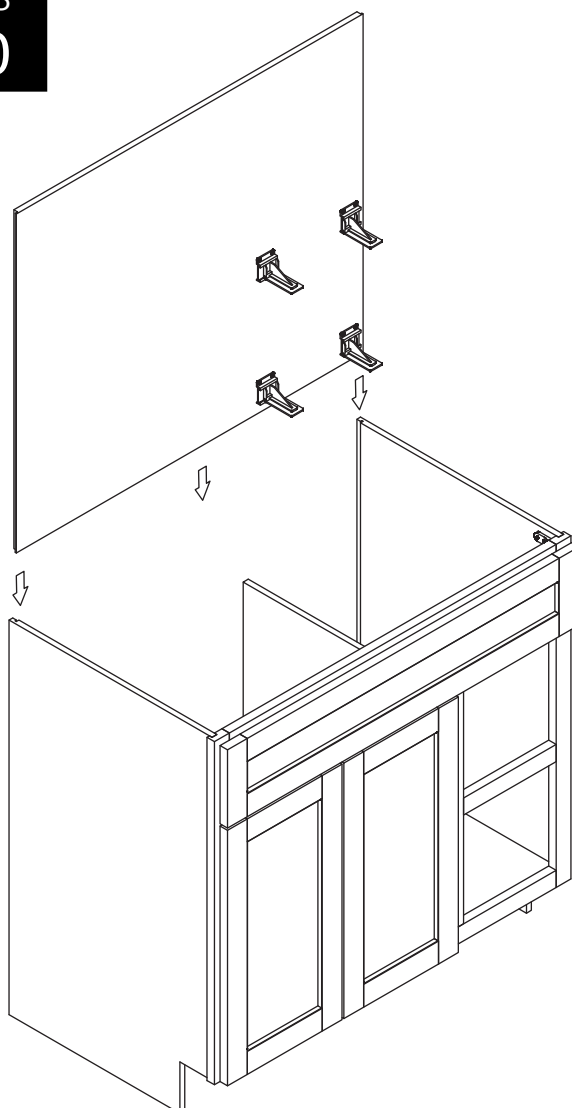


STEP
11

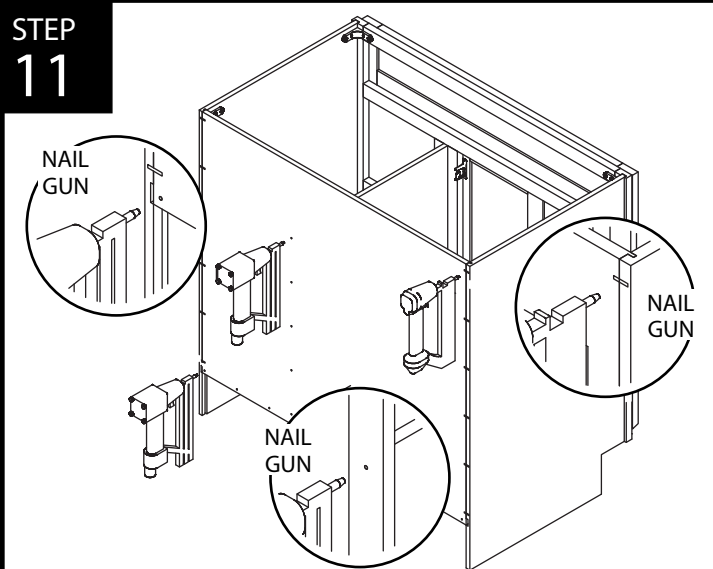


STEP
12

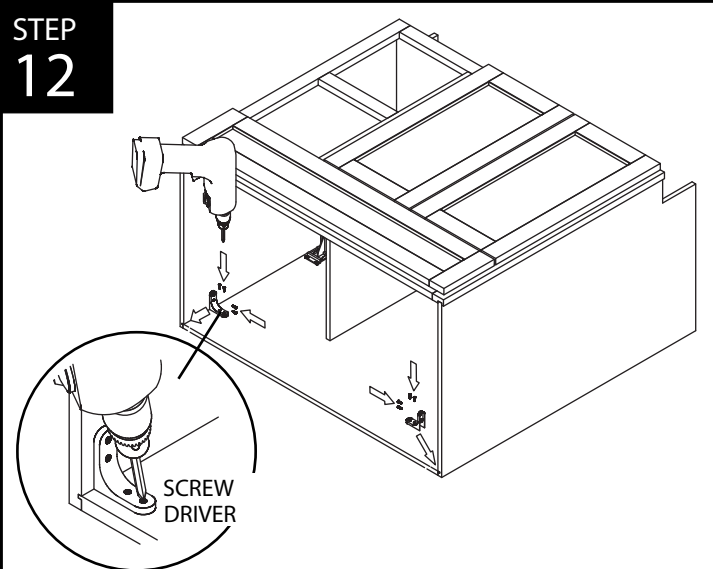


STEP
13

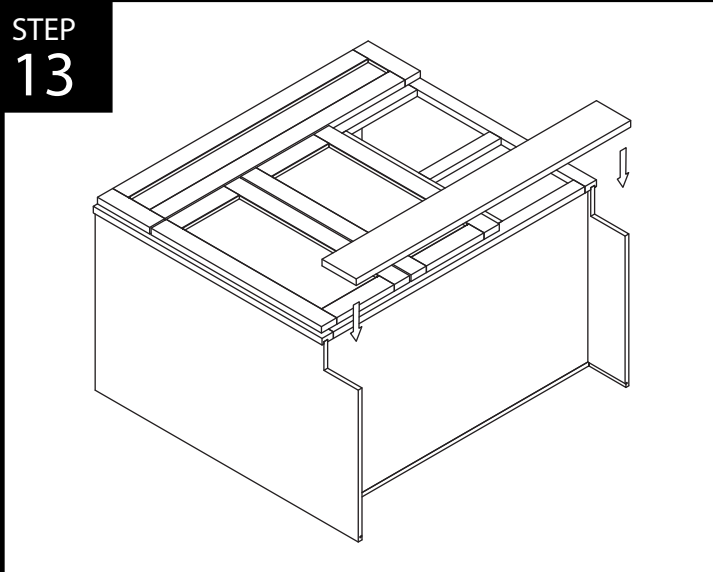


STEP
14

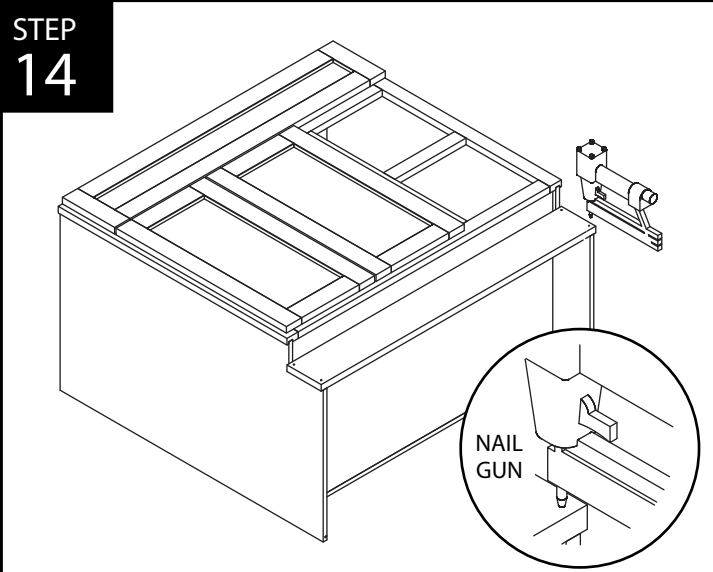


STEP
15

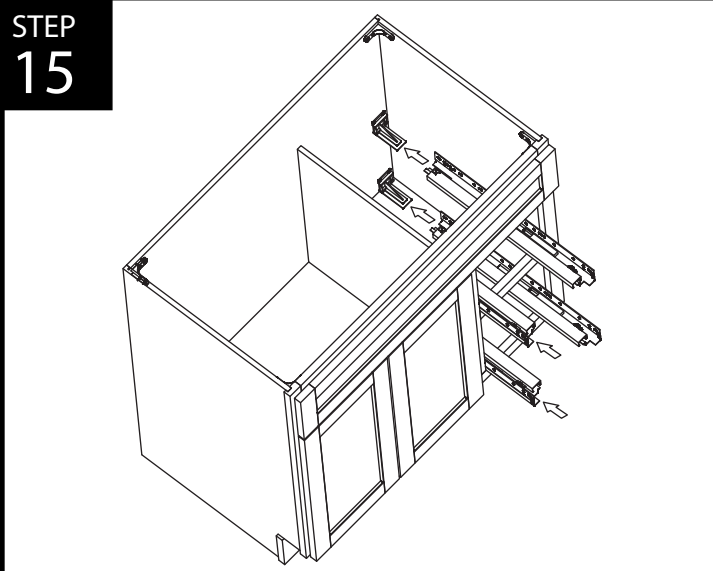


STEP
16

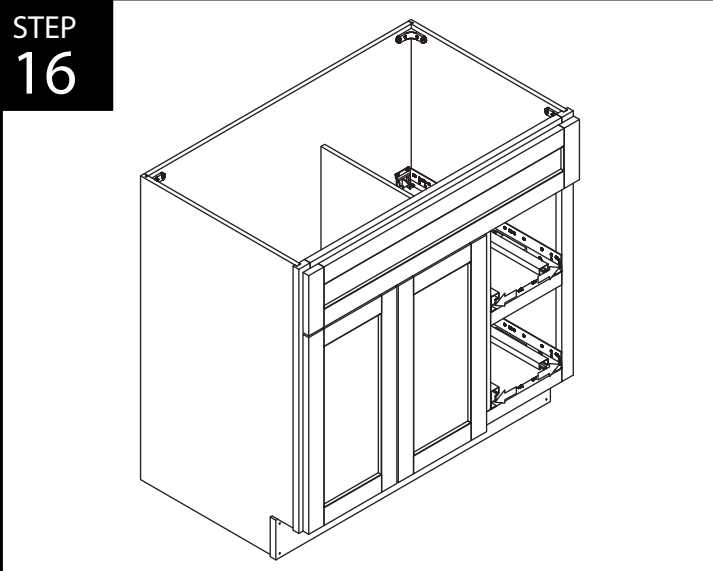


STEP
17

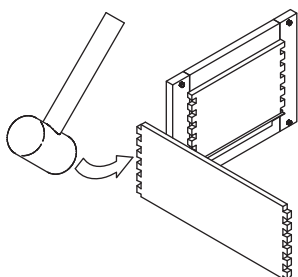


STEP
18

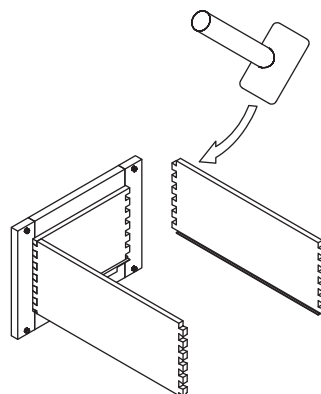


STEP
19

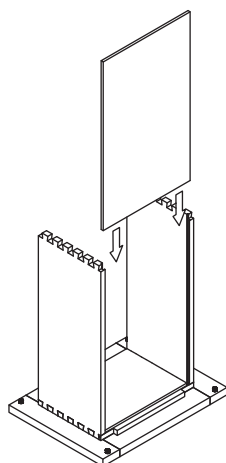


STEP
20

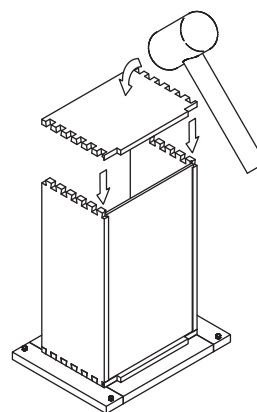


STEP
21

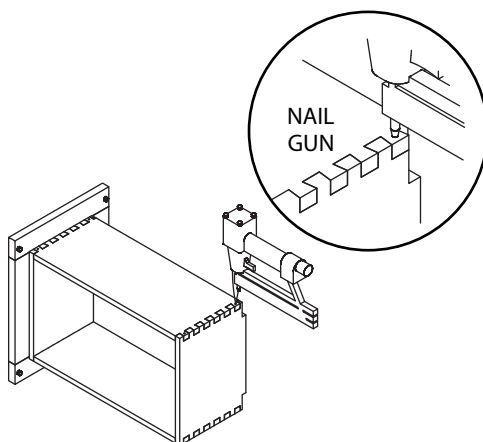


STEP
22

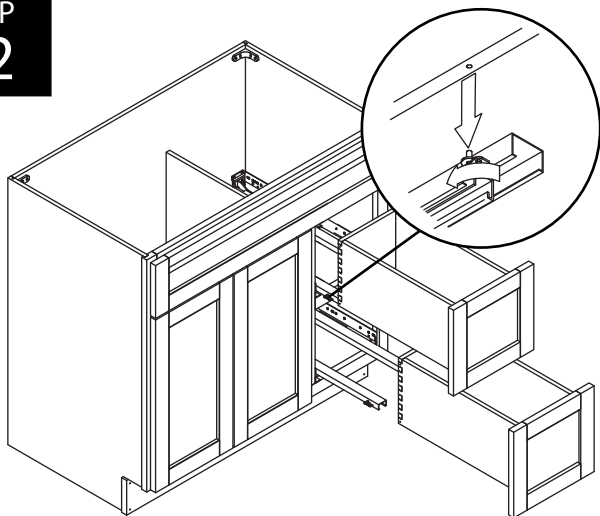

STEP
23

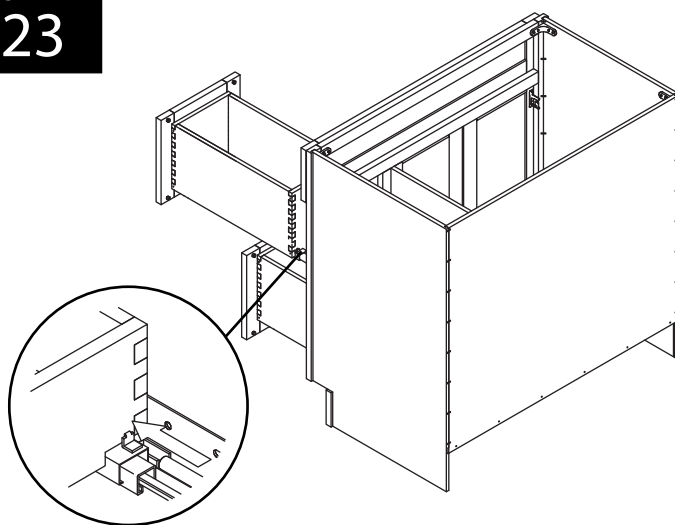

STEP
24

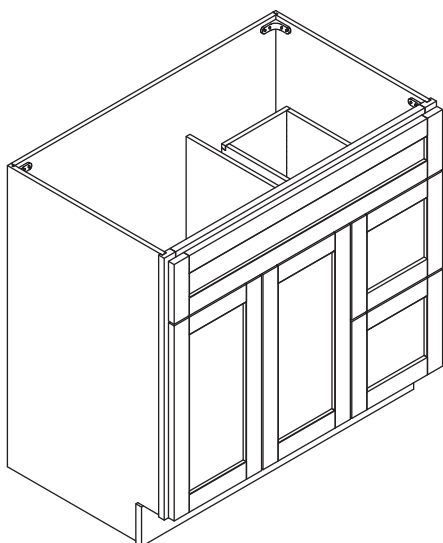

VANITY C ABINET