

# ASSEMBLY INSTRUCTION

## WINE STORAGE CABINET

| Part | Descriptions         | Qty | Part | Description         | Qty | Part | Description         | Qty |
|------|----------------------|-----|------|---------------------|-----|------|---------------------|-----|
| A    | Face-frame with Door | 1   | E    | Glue (not included) | 1   | I    | Screw $\phi$ 3.5*12 | 16  |
| B    | Side Panel           | 2   | F    | Back Panel          | 1   |      |                     |     |
| C    | Top And Bottom       | 2   | G    | Screw $\phi$ 3.5*25 | 6   |      |                     |     |
| D    | Shelf                | 2   | H    | L-Shaped Steel      | 8   |      |                     |     |

This instructions applies to the following items: **WSC1818**.



\*\* Wood glue are required for assembly. Wood glue applied to each notching area for stability (wood glue not included)\*\*

STEP 1: Add a Bead of Glue to the Face Frame and each notching area needed.

STEP 2: Slide-in the Sides to the Frame.

STEP 3: Slide-in the Top and Bottom.

STEP 4: Slide-in the Back to the Cabinet Box.

STEP 5: Secure the Corners of the Box by using the L-Shaped Steel.

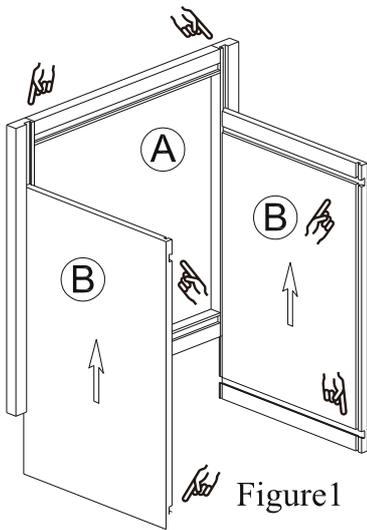


Figure1

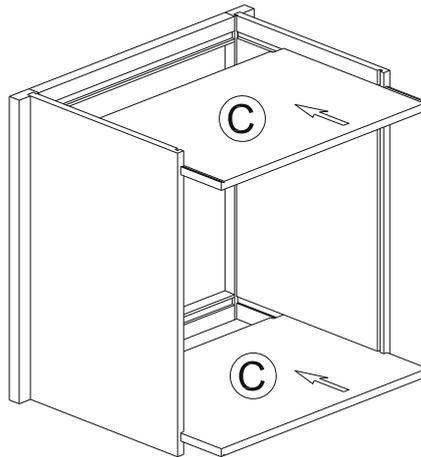
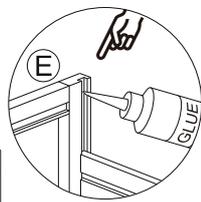


Figure2

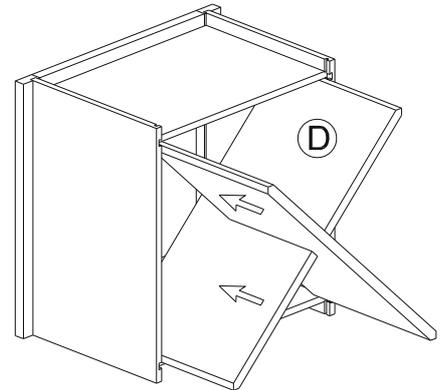


Figure3

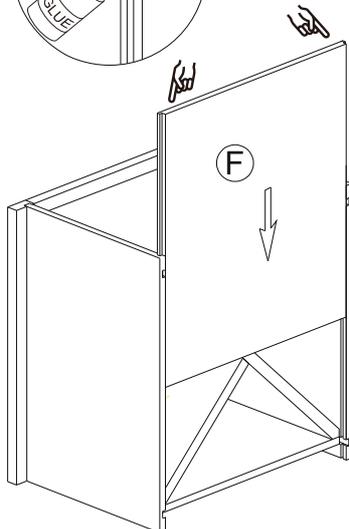
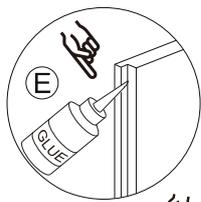


Figure4


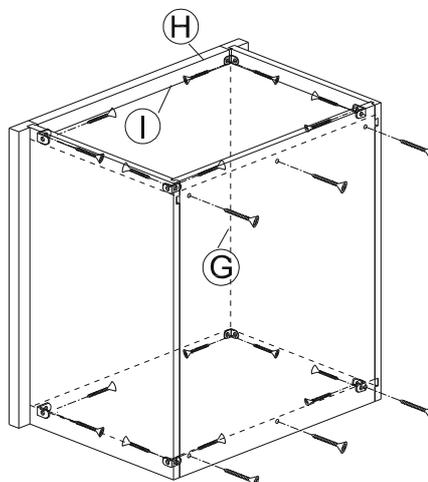


Figure5



SCREW DRIVER

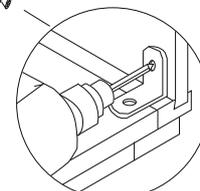