

Base Microwave

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board


STEP 5: Attach the wood block on the top corner.

STEP 6: Joint the drawer together, then install the drawer guide.


STEP 7: Fix drawer head on the drawer front and adjust the cover-space

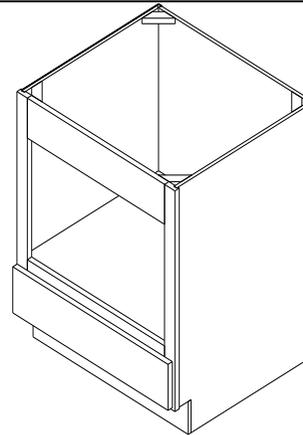

| PARTS LIST | | |
|------------|---------------------------|-----|
| NO. | Description | QTY |
| A | BACK PANEL | 1 |
| B | SIDE PANEL | 2 |
| C | TOP&BOTTOM PANEL | 2 |
| D | TOE KICK | 1 |
| E | FACE FRAME | 1 |
| F | DRAWER BOX FRONT AND BACK | 2 |
| G | DRAWER BOX SIDE | 2 |
| H | DRAWER BOX BOTTOM | 1 |
| I | DRAWER HEAD | 1 |

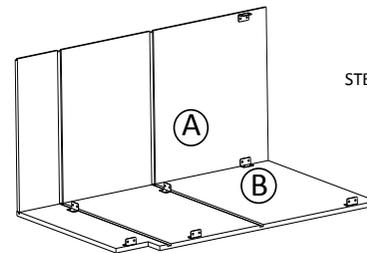


STEP:1

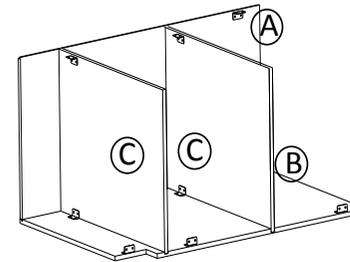


STEP:2


STEP:3

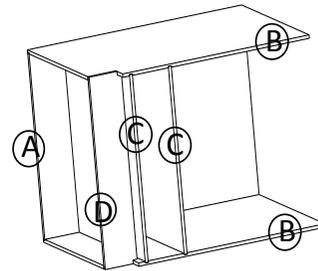

STEP:4

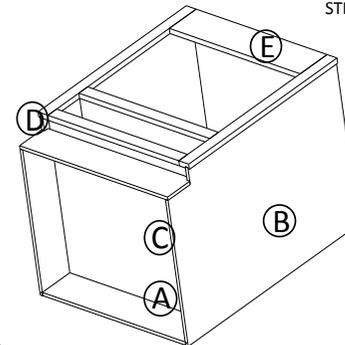


STEP:5

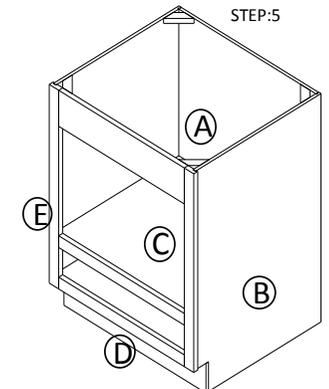


HARDWARE LIST

| NO. | Description | QTY | PICTURE |
|-----|-----------------------------------|-----|---|
| 7 | BUMPER | 4 |  Bumper |
| 6 | Selfclose slider | 1 |  Selfclose slider |
| 5 | 9/16" ROUND HEAD SCREW | 56 |  9/16" round head screw |
| 4 | CLEAT | 14 |  Cleat |
| 3 | 1" FLAT HEAD SCREW FOR CARCASS | 4 |  1" flat head screw |
| 2 | WOOD BLOCK | 4 |  Wood block |
| 1 | 1" FLAT HEAD SCREW FOR WOOD BLOCK | 8 |  1" flat head screw |

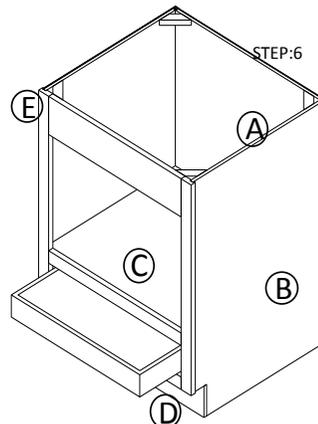


STEP:6

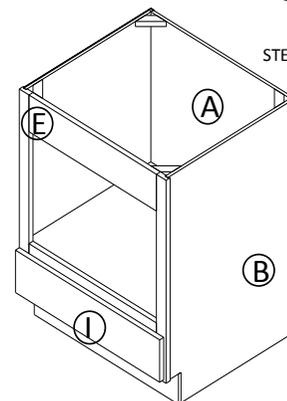


STEP:7

Full extension concealed drawer runners

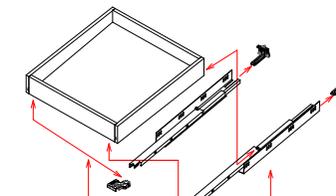

Drawer box
Locking devices
Runner profiles
Rear mounting brackets(for frame applications)

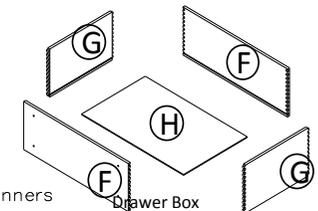

Drawer Box