

Farm Sink Base

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner

STEP 6: Fix door&drawer head onto the frame and adjust the cover-space

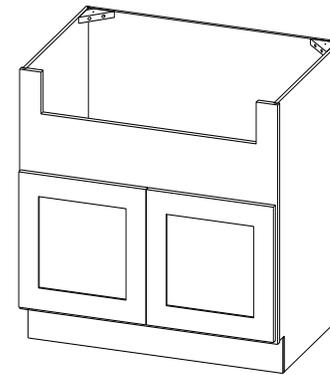

PARTS LIST

NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER HEAD	2
G	CABINETS DOOR	2

HARDWARE LIST

NO.	Description	QTY	PICTURE
8	HINGE	4	
7	3/4" ROUND HEAD SCREW	4	 3/4" round head screw
6	BUMPER	4	 Bumper
5	9/16" ROUND HEAD SCREW	44	 9/16" round head screw
4	CLEAT	11	 Cleat
3	1" FLAT HEAD SCREW FOR CARCASS	4	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw

