

Wall Blind Cabinet

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint top panel with side panel


STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on


STEP 5: Put on the adjustable shelves


STEP 6: Fix door onto the frame and adjust the cover-space

PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP&BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2
F	CABINETS DOOR	1

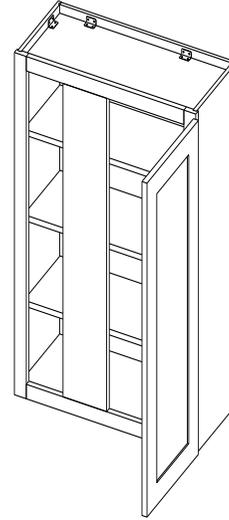


HARDWARE LIST


NO.	Description	QTY	PICTURE
7	HINGE	2	
6	3/4" ROUND HEAD SCREW	2	 3/4" round head screw
5	BUMPER	2	 Bumper
4	SHELF CLIP	8	 Shelf clip
3	9/16" ROUND HEAD SCREW	56	 9/16" round head screw
2	CLEAT	14	 Cleat
1	1" FLAT HEAD SCREW FOR CARCASS	6	 1" flat head screw

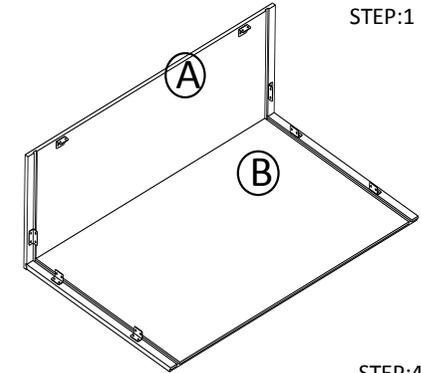


STEP:1

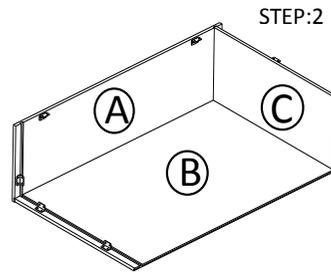


STEP:2

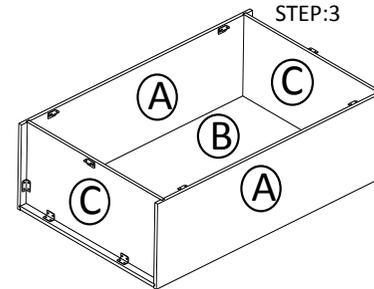


STEP:3

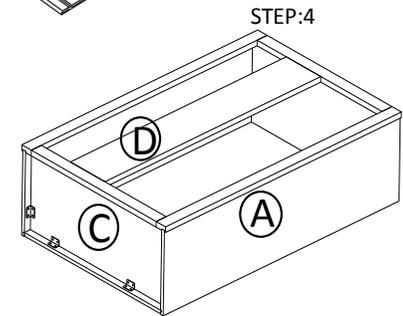

STEP:4

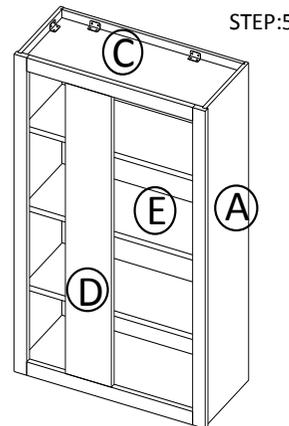

STEP:5

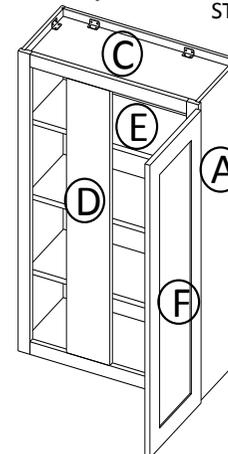

STEP:6