

Wall Open Cabinet

ASSEMBLY INSTRUCTIONS

Getting started:


prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel


STEP 4: Attach front face frame on

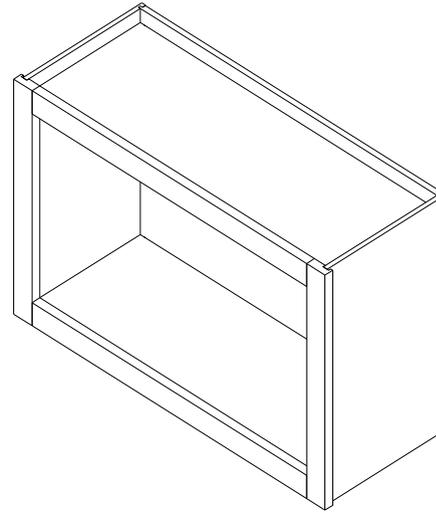


| PARTS LIST | | |
|------------|------------------|-----|
| NO. | Description | QTY |
| A | SIDE PANEL | 2 |
| B | BACK PANEL | 1 |
| C | TOP&BOTTOM PANEL | 2 |
| E | FACE FRAME | 1 |

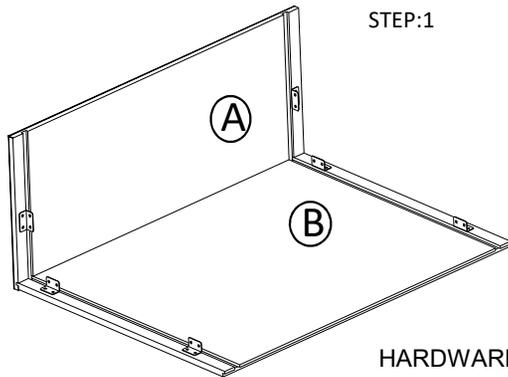

STEP:1

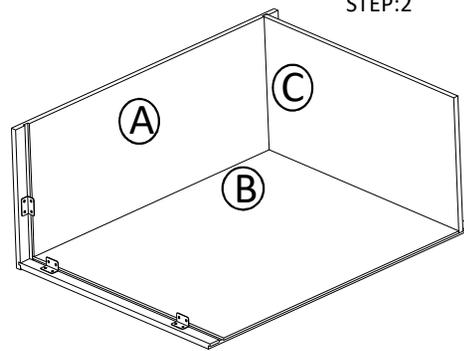


STEP:2

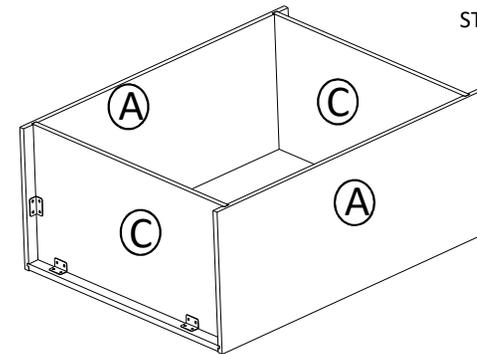

STEP:3

HARDWARE LIST

| NO. | Description | QTY | PICTURE |
|-----|-------------------------------|-----|---------------------------------------------------------------------------------------------------------------|
| 3 | 9/16"ROUND HEAD SCREW | 48 |  9/16" round head screw |
| 2 | CLEAT | 12 |  Cleat |
| 1 | 1"FLAT HEAD SCREW FOR CARCASS | 16 |  1" flat head screw |
| | | | |

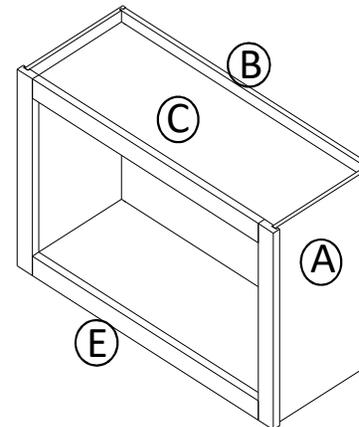

STEP:4