Sink Base/Vanity Sink Base

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the wood block on the top corner

STEP 6: Fix door&drawer head onto the frame and adjust the cover-space

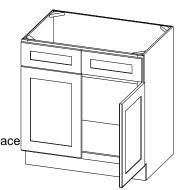

	PARTS LIST	
NO.	Description	QTY
Α	BACK PANEL	1
В	SIDE PANEL	2
С	TOP&BOTTOM PANEL	1
D	TOE KICK	1
Е	FACE FRAME	1
F	DRAWER HEAD	2
G	CABINETS DOOR	2

STEP:4

 \bigcirc

Н	Α	R	D	V	V	Α	R	Е	L	IST	Γ
---	---	---	---	---	---	---	---	---	---	-----	---

7 3/4" 6 5 9/16	2" SOFTCLOSE HINGE ROUND HEAD SCREW BUMPER		3/4* round head screw Bumper
6 5 9/16 4 3 1°FLA	BUMPER		
5 9/16 4 3 1"FLA	-	4	Bumper
4 3 1"FLA			
3 1°FL/	"ROUND HEAD SCREW	44	9/16" round head screw
	CLEAT	11	Cleat
2	AT HEAD SCREW FOR CARCASS	4	1" flat head screw
_	WOOD BLOCK	4	Wood block
1 1" FL/		8	1" flat head screw
	AT HEAD SCREW FOR WOOD BLOCK		1

